



at&t

Your world. Delivered.



## User Guide

**PANTECH duo™**

**PANTECH duo™**

# WELCOME

Thank you for choosing the AT&T Smart Device Pantech duo™, which has adopted the Microsoft Windows Mobile™ 6.1 Standard in a dual slider design to give you the convenience of Windows and the comfort of a familiar shape. Using ActiveSync®, you can keep your PC and Pantech duo™ synchronized at all times. The Pantech duo™ offers the various features listed below which are designed to enhance your mobile experience.

## Key Features of the Pantech duo™

- Microsoft Windows Mobile™ 6.1 for Smartphone OS
- Full graphic TFT 262K Color LCD (240x320 pixel)
- Full QWERTY keyboard
- CMOS Camera (2.0 mega-pixels)
- Built-in Bluetooth Technology
- Advanced Voice Command Technology
- 2-Way Text Messaging
- Multimedia Messaging Service
- E-mail Messaging Service
- microSD Card for External Memory (SDIO Support)
- Voice Memo

- Easy text entry using the XT9 text input mode
- Internet Access

## IMPORTANT INFORMATION

This Pantech duo™ user guide contains very important information about how to handle and use the product.

Please read this manual thoroughly, pay attention to the warranty on the back page and be warned of the exclusions and limitations of your warranty, which is, for example, to prohibit using the unauthorized accessories or components.

# MENU TREE

## Using Shortcuts

Numbered menu items, such as menus, sub-menus, and options can be quickly accessed by using their shortcut numbers. In Start window, Main Menu can be accessed by pressing the number keys (1 to 0) corresponding to their location on the screen.

---













**Example:** Accessing the **Shop Multimedia** menu.

---

1. Press the [**Start**] soft key.
2. Press the [8] for **AT&T Mall**.
3. Press the [1] for **Shop Tones**.
4. Press the [1] for **Shop Games**.
5. Press the scroll key to display the list of available games.

## Menu Outline

The following list shows the menu structure and indicates the number assigned to each option.

-  **1 Messaging**
  - 1.1 Messages
  - 1.2 New E-mail Account
-  **2 Calendar**
-  **3 Contacts**
-  **4 ActiveSync**
-  **5 AT&T Music**
  - 5.1 Windows Media Player
  - 5.2 Shop Music
  - 5.3 MusicID
  - 5.4 XM Radio Mobile
  - 5.5 Music Videos
  - 5.6 The Buzz
  - 5.7 Community
-  **6 Cellular Video**
-  **7 MEdia Net**
-  **8 AT&T Mall**
  - 8.1 Shop Tones
  - 8.2 Shop Games
  - 8.3 Shop Graphics
  - 8.4 Shop Multimedia
  - 8.5 Shop Applications
  - 8.6 MEdia Net Home
-  **9 My Stuff**
-  **10 IM & E-mail**
  - 10.1 IM
-  **11 MobiTV**
-  **12 Call History**

# MENU TREE



## 13 Organizer

- 13.1 Alarm
- 13.2 Voice Note
- 13.3 Notepad
- 13.4 Calculator
- 13.5 World Time
- 13.6 Tasks



## 14 Office Mobile

- 14.1 Excel Mobile
- 14.2 Powerpoint Mobile
- 14.3 Word Mobile



## 15 Games



## 16 Internet Explorer



## 17 Applications

- 17.1 Camera
- 17.2 Download Agent
- 17.3 File Explorer
- 17.4 Java
- 17.5 Speed Dial
- 17.6 Voice Command
- 17.7 Task Manager
- 17.8 ClearVue PDF
- 17.9 Get TeleNav
- 17.10 My-Cast Weather
- 17.11 Myspace Mobile



## 18 Settings

- 18.1 Phone
- 18.2 Sounds
- 18.3 Profiles
- 18.4 Home Screen
- 18.5 Clock
- 18.6 Connections
- 18.7 Security
- 18.8 Remove Programs
- 18.9 Power Management
- More...
- 1 IPM Power Mode
- 2 Accessibility
- 3 Text Input Mode
- 4 Regional Settings
- 5 Owner Information
- 6 About
- 7 Error Reporting
- 8 Windows Update

# CONTENTS

## CHAPTER 1

---

<b>BEFORE USING YOUR PHONE</b> .....	<b>11</b>
INSIDE THE PACKAGE .....	12
HANDSET DESCRIPTION .....	13
ACTIVATING YOUR PHONE .....	15
HOME SCREEN .....	16
HOME SCREEN CUSTOMIZATION .....	16
HOME SCREEN ICONS .....	16
BATTERY USAGE .....	19
BATTERY INSTALLATION .....	19
BATTERY REMOVAL .....	19
BATTERY CHARGING .....	19
BATTERY STATUS CHECK LED .....	20
BATTERY HANDLING INFORMATION .....	21

## CHAPTER 2

---

<b>BASIC OPERATION</b> .....	<b>23</b>
TURNING THE PHONE ON/OFF .....	24
TURNING THE PHONE ON .....	24
TURNING THE PHONE OFF .....	24
USING THE QUICK LIST .....	25
CALL FUNCTIONS .....	26
MAKE A CALL BY ENTERING A CONTACT NAME .....	26
MAKE A CALL BY ENTERING A PHONE NUMBER .....	26
MAKE A CALL FROM AN OPEN CONTACT .....	26
MAKE A CALL FROM THE CALL HISTORY LIST .....	26
MAKE A CALL USING A RECENTLY DIALED PHONE NUMBER .....	27
MAKE A CALL FROM A HYPERLINK PHONE NUMBER .....	27
ANSWER A CALL BY PRESSING ANY KEY .....	27
ANSWER OR IGNORE A CALL .....	27
ANSWER A SECOND CALL .....	27
INSERT A MANUAL PAUSE IN A DIALING SEQUENCE .....	28
INSERT A THREE-SECOND PAUSE IN A DIALING SEQUENCE .....	28
BASIC FUNCTIONS .....	29

SETTING UP YOUR VOICEMAIL .....	29
LOCK THE KEYPAD .....	29
UNLOCK THE KEYPAD .....	30
AUTO-LOCK THE KEYPAD .....	30
SET THE DATE AND TIME .....	30
SET THE IDLE TIMER .....	30
CHANGE THE HOME SCREEN APPEARANCE .....	31
VIEW OPERATING SYSTEM INFORMATION .....	31
ENTER OWNER INFORMATION .....	32
EXPLORE FILES AND FOLDERS .....	32
SILENCE THE RING TONE OF AN INCOMING CALL .....	32
MAKING AN EMERGENCY CALL .....	33
ENTERING TEXT AND NUMBERS .....	34
ENTERING TEXT AND NUMBERS .....	34
CHANGE BETWEEN UPPERCASE, LOWERCASE, AND CAPS LOCK .....	34
CHANGE THE MULTIPRESS TIMEOUT .....	34
DELETE CHARACTERS .....	34
ENTER A SPACE .....	35
ENTER A SYMBOL .....	35
ENTER NUMBERS IN TEXT BOXES .....	35
ENTER PUNCTUATION IN MULTIPRESS MODE .....	35
ENTER PUNCTUATION IN XT9 MODE .....	35
ENTER TEXT IN XT9 MODE .....	36
START A NEW LINE .....	36
TURN ON CAPS LOCK .....	36
ENTER THE PLUS SIGN FOR INTERNATIONAL CALLS .....	37
CHANGE THE INPUT MODE .....	37
USING QWERTY KEYBOARD .....	38

## CHAPTER 3

---

<b>CALENDAR, CONTACTS, CALL HISTORY &amp; MY STUFF</b> .....	<b>41</b>
CALENDAR .....	42
SCHEDULE AN APPOINTMENT .....	42
DELETE AN APPOINTMENT .....	42
UPDATE AN APPOINTMENT .....	43
VIEW AN APPOINTMENT .....	43
VIEW APPOINTMENTS FOR THE WEEK .....	43

# CONTENTS

VIEW TODAY'S AGENDA.....	43	INSERT AN INTERNATIONAL COUNTRY CODE.....	57
VIEW YOUR AGENDA FOR A SPECIFIC DATE.....	44	SEND AN E-MAIL MESSAGE FROM CALL HISTORY.....	57
VIEW YOUR SCHEDULE FOR THE MONTH.....	44	MY STUFF.....	58
MAKE AN APPOINTMENT RECURRING.....	44		
SHOW WEEK NUMBERS.....	44		
CHANGE THE WORK WEEK DISPLAY.....	45		
CHANGE THE REMINDER TIME.....	45		
<b>CONTACTS.....</b>	<b>46</b>		
CREATE A NEW CONTACT.....	46		
BEAM A CONTACT.....	46		
CALL A CONTACT FROM CONTACT INFORMATION.....	47		
CALL A CONTACT FROM THE CONTACT LIST.....	47		
CHANGE THE DEFAULT NUMBER FOR A CONTACT.....	47		
DUPLICATE A CONTACT.....	48		
COPY TO DEVICE / SIM.....	48		
COPY ALL TO DEVICE / SIM.....	48		
DELETE A CONTACT.....	49		
DELETE ALL DEVICE / SIM.....	49		
CREATE A CONTACT FOR A CALLER.....	49		
FILTER THE CONTACT LIST.....	50		
FIND A CONTACT.....	50		
SEND AN E-MAIL TO A CONTACT.....	50		
SEND A TEXT MESSAGE TO A CONTACT.....	51		
VIEW AND EDIT CONTACT INFORMATION.....	51		
ADD A PICTURE TO A CONTACT.....	51		
REMOVE A PICTURE FROM A CONTACT.....	52		
ASSIGN A CATEGORY TO A CONTACT.....	52		
ASSIGN A RING TONE TO A CONTACT.....	53		
CREATE A SPEED DIAL.....	53		
USING SPEED DIALS.....	54		
VIEW AND EDIT A SPEED DIAL.....	54		
DELETE A SPEED DIAL.....	54		
<b>CALL HISTORY.....</b>	<b>55</b>		
VIEW CALL TIMERS.....	55		
RESET CALL TIMERS.....	55		
VIEW DETAILS ABOUT A CALL.....	55		
CREATE A CONTACT FROM CALL HISTORY.....	56		
DELETE AN ITEM FROM CALL HISTORY.....	56		
DIAL THE LAST NUMBER CALLED.....	56		
FIND A CONTACT FROM CALL HISTORY.....	56		
		<b>CHAPTER 4</b>	
		<b>VOICEMAIL &amp; MESSAGING.....</b>	<b>59</b>
		VOICEMAIL.....	60
		CALL YOUR VOICEMAILBOX.....	60
		TEXT MESSAGING.....	61
		CREATE A TEXT MESSAGE.....	61
		DELETE ALL MESSAGES.....	61
		MULTIMEDIA MESSAGE.....	62
		CREATE A MULTIMEDIA MESSAGE.....	62
		TEXT BOX.....	62
		MULTIMEDIA MESSAGE MENU OPTIONS.....	62
		VIEW MULTIMEDIA MESSAGE.....	65
		SELECT MULTIMEDIA MESSAGE IN THE LIST OF MESSAGE TYPE.....	66
		CHANGE MESSAGING ACCOUNT OPTIONS.....	66
		CHANGE HOW THE MESSAGE LIST DISPLAYS.....	67
		CREATE A MESSAGE FROM A CONTACT CARD.....	67
		E-MAIL.....	68
		SYNCHRONIZING E-MAIL MESSAGES.....	68
		DURING SYNCHRONIZATION.....	68
		CONNECTING DIRECTLY TO AN E-MAIL SERVER.....	68
		FOLDER BEHAVIOR WITH A DIRECT CONNECTION TO AN E-MAIL SERVER.....	68
		CREATING AN E-MAIL ACCOUNT.....	69
		CREATE AN E-MAIL MESSAGE.....	70
		OVERVIEW OF E-MAIL SECURITY.....	70
		DOWNLOAD A COMPLETE E-MAIL MESSAGE.....	71
		DOWNLOAD AN ATTACHMENT.....	71
		MARK A FOLDER FOR SYNCHRONIZATION.....	71
		ADD A PICTURE TO AN E-MAIL MESSAGE.....	72
		VERIFY THE DIGITAL SIGNATURE ON A SIGNED MESSAGE YOU RECEIVE.....	72
		SEND AND RECEIVE INTERNET E-MAIL MESSAGES.....	73
		ADD A VOICE RECORDING TO AN E-MAIL MESSAGE.....	73

# CONTENTS

SET UP AN INTERNET E-MAIL ACCOUNT MANUALLY .....	73
DELETE A MESSAGE .....	74
DELETE AN ACCOUNT .....	75
EDIT PREDEFINED TEXT .....	75
EMPTY THE DELETED ITEMS FOLDER .....	75
FORWARD A MESSAGE .....	76
INSERT PREDEFINED TEXT INTO A MESSAGE .....	76
MARK A MESSAGE AS READ OR UNREAD .....	76
MOVE A MESSAGE TO A DIFFERENT FOLDER .....	77
OPEN A MESSAGE .....	77
QUICKLY MOVE BETWEEN ACCOUNTS .....	77
SEND A MESSAGE DRAFT .....	78
REPLY TO A MESSAGE .....	78
SAVE A DRAFT OF A MESSAGE .....	78
SPECIFY THE LANGUAGE FOR READING A MESSAGE .....	78
STOP ADDING A SIGNATURE TO MESSAGES .....	79
VIEW AN ATTACHMENT .....	79
VIEW MESSAGE FOLDER CONTENTS .....	79
VIEW THE INBOX MESSAGE LIST .....	80
VIEW THE LIST OF ACCOUNTS .....	80
WHAT IS SSL? .....	80

## CHAPTER 5

<b>ORGANIZER .....</b>	<b>81</b>
ALARM .....	82
USING THE ALARM .....	82
VOICE NOTE .....	83
CREATE A VOICE NOTE .....	83
LISTEN TO A VOICE NOTE .....	83
DELETE A VOICE NOTE .....	83
RENAME A VOICE NOTE .....	84
NOTEPAD .....	85
TO ACCESS NOTEPAD .....	85
CREATING A MEMO .....	85
VIEWING A MEMO .....	85
SENDING A MEMO .....	85
DELETING A MEMO .....	85

CALCULATOR .....	86
USING THE CALCULATOR .....	86
WORLD TIME .....	87
USING THE WORLD TIME .....	87
TASKS .....	88
CREATE A TASK .....	88
CHANGE A COMPLETED TASK TO INCOMPLETE .....	88
ASSIGN A CATEGORY TO A TASK .....	88
DELETE A TASK .....	89
MARK A TASK AS COMPLETE .....	89
LOCATE A TASK .....	89

## CHAPTER 6

<b>AT&amp;T MUSIC .....</b>	<b>91</b>
WINDOWS MEDIA PLAYER® .....	92
COPYING MEDIA FILES .....	92
PLAYING MEDIA FILES .....	93
SETTING UP A PLAYLIST .....	94
SHOP MUSIC .....	96
MUSIC ID .....	97
USING ID SONG! .....	97
USING MANAGE ID'S .....	98
GETTING HELP WITH MUSIC ID .....	98
EXITING FROM THE MUSIC ID APPLICATION .....	98
XM RADIO MOBILE .....	99
MUSIC VIDEOS .....	100
THE BUZZ .....	101
COMMUNITY .....	103

## CHAPTER 7

<b>AT&amp;T MALL .....</b>	<b>105</b>
SHOP TONES .....	106
SHOP GAMES .....	107

# CONTENTS

SHOP GRAPHICS .....	108
SHOP MULTIMEDIA .....	109
SHOP APPLICATIONS .....	110
MEDIA NET HOME .....	111

## CHAPTER 8

<b>CELLULAR VIDEO .....</b>	<b>113</b>
CELLULAR VIDEO .....	114
MEDIA CLIP OPTIONS .....	115
LIBRARY .....	115
PLAY/PAUSE .....	115
STOP .....	115
SHUFFLE/REPEAT .....	115
FULL SCREEN .....	115
OPTIONS .....	115
PROPERTIES .....	116
SETTINGS .....	116
USING THE VIDEO CATEGORIES .....	117
VIEWING A VIDEO CLIP .....	117
CUSTOMIZING CELLULAR VIDEO .....	118
UPDATING THE FAVORITES LIST .....	118
ADDING A VIDEO ALERT .....	118
MY PURCHASES .....	119
PARENTAL CONTROLS .....	120
SETTING UP PARENTAL CONTROL .....	120
CONFIGURING THE FILTERS .....	120

## CHAPTER 9

<b>IM&amp;E-MAIL, MOBIV, MEDIA NET, OFFICE MOBILE .....</b>	<b>123</b>
IM&E-MAIL, MOBIV, MEDIA NET, OFFICE MOBILE .....	124
IM&E-MAIL .....	124
MOBIV .....	124
MEDIA NET .....	125
OFFICE MOBILE .....	125

## CHAPTER 10

<b>CAMERA .....</b>	<b>127</b>
CAMERA / CAMCORDER MODE .....	128
SELECT VIDEO QUALITY .....	128
COPY AN IMAGE TO YOUR PHONE .....	128
TAKE PICTURES USING A TIMER .....	129
ADJUST PICTURES AND VIDEO FOR LIGHTING CONDITIONS .....	129
SELECT WHERE PICTURES ARE SAVED .....	129
CREATE A PICTURES FOLDER .....	129
EDIT A PICTURE .....	130
VIEW PICTURES AS A SLIDE SHOW .....	130
SET A PICTURE AS THE HOME SCREEN .....	131
SEND A PICTURE VIA MULTIMEDIA MESSAGE .....	131
SAVE A COPY OF A PICTURE .....	132
VIEW PICTURES ON YOUR PHONE .....	132
CAMERA / CAMCORDER OPERATIONS .....	133
CAMERA .....	133
VIDEO .....	133
RECORD A VIDEO .....	133
PLAY RECORDED FILE .....	133
TAKE A PICTURE .....	133
TAKE A PICTURE (MULTISHOT) .....	134
SNAPSHOT .....	134
VIEWING SAVED FILE .....	134
CAMERA / CAMCORDER CONTROLS .....	135
CAMERA MENU .....	135
CAMCORDER MENU .....	136
GENERAL SETTINGS .....	137
CAMERA SETTINGS .....	138
CAMCORDER SETTINGS .....	138
OVERVIEW OF THE DEFAULT HARDWARE BUTTON ASSIGNMENTS .....	139

## CHAPTER 11

<b>MOBILE INTERNET EXPLORER .....</b>	<b>141</b>
USING INTERNET EXPLORER .....	142



# CONTENTS

ADD A WEB PAGE TO THE FAVORITES LIST.....	142
CHANGE CONNECTION OPTIONS.....	142
CHANGE WEB PAGE DISPLAY OPTIONS.....	143
CLEAR HISTORY, COOKIES, OR TEMPORARY FILES.....	143
CREATE A NEW FOLDER IN FAVORITES.....	143
DELETE A FAVORITE.....	144
DISCONNECT FROM THE INTERNET.....	144
EDIT A FAVORITE.....	144
GO TO A LINK.....	144
GO TO A WEB PAGE.....	145
GO TO A WEB PAGE IN THE HISTORY LIST.....	145
OPEN INTERNET EXPLORER.....	145
REFRESH A WEB PAGE.....	145
RETURN TO A WEB PAGE YOU VISITED IN THE SAME SESSION.....	145
VIEW A FAVORITE.....	146
VIEW A LIST OF RECENTLY VISITED WEB PAGES.....	146
MOVE A FAVORITE TO A FOLDER.....	146
CHANGE THE SIZE OF TEXT ON WEB PAGES.....	146
SHOW OR HIDE PICTURES ON WEB PAGES.....	146
VIEW A PAGE IN FULL SCREEN MODE.....	147
SEND A LINK VIA E-MAIL.....	147
ADJUST THE SCROLLING SPEED.....	147
CHANGE E-MAIL SECURITY OPTIONS.....	155
EXCLUDE AN E-MAIL ADDRESS FROM REPLY ALL.....	156
<b>BLUETOOTH.....</b>	<b>157</b>
ACCEPT A BLUETOOTH PARTNERSHIP.....	157
CREATE A BLUETOOTH PARTNERSHIP.....	157
END A BLUETOOTH PARTNERSHIP.....	158
MAKE YOUR DEVICE DISCOVERABLE.....	158
RENAME A BLUETOOTH PARTNERSHIP.....	159
TURN BLUETOOTH ON AND OFF.....	159
RECEIVE BEAMED INFORMATION.....	160
BEAM AN ITEM.....	160
SET UP A BLUETOOTH-ENABLED HEADSET.....	161
SET UP A STEREO HEADSET.....	161
TURN WIRELESS POWER ON OR OFF.....	162
CONNECT TO INTRANET URL.....	162
USE A SPECIFIC CONNECTION TO CONNECT TO THE INTERNET.....	163
EDIT A VPN CONNECTION.....	163
<b>OVERVIEW OF BLUETOOTH VIRTUAL COM PORTS.....</b>	<b>164</b>
OUTGOING COM PORT.....	164
SET UP AN OUTGOING BLUETOOTH COM PORT.....	164
CREATE A DIAL-UP CONNECTION.....	165
CREATE A PROXY CONNECTION.....	165
CREATE A VPN CONNECTION.....	166
DELETE A DIAL-UP CONNECTION.....	166
DELETE A PROXY CONNECTION.....	167
DELETE AN INTRANET URL.....	167
DELETE A VPN CONNECTION.....	167
EDIT A DIAL-UP CONNECTION.....	168
EDIT A PROXY CONNECTION.....	168
EDIT AN INTRANET URL.....	168
CONNECTING THE GPS INTERMEDIATE DRIVER TO GPS HARDWARE.....	169

## CHAPTER 12

### **PC CONNECTIVITY, BLUETOOTH AND ACTIVESYNC..... 149**

ACTIVESYNC.....	150
INSTALL AND SET UP ACTIVESYNC.....	150
SET UP AN EXCHANGE SERVER CONNECTION.....	150
CHANGE ACTIVESYNC SETTINGS.....	151
SCHEDULE SYNCHRONIZATION AS ITEMS ARRIVE.....	151
CHANGE THE SYNCHRONIZATION SCHEDULE.....	152
START AND STOP SYNCHRONIZATION.....	153
VIEW INFORMATION ABOUT SYNC STATUS.....	153
CHANGE SETTINGS FOR AN INFORMATION TYPE.....	153
CONNECT THE PHONE.....	154
DEACTIVATE THE USB MODEM.....	154
CONNECT TO A PC USING CHARGEABLE USB CABLE.....	155
CONNECT TO A PC USING BLUETOOTH.....	155

## CHAPTER 13

<b>APPLICATIONS.....</b>	<b>171</b>
DOWNLOAD AGENT.....	172
FILE EXPLORER.....	173
JAVA.....	174

# CONTENTS

SPEED DIAL .....	175	AUTO ANSWER .....	198
VOICE COMMAND .....	176	AUTO LOCK .....	198
1 – ADJUST THE MICROPHONE .....	176	CALL FORWARDING .....	198
2 – SET THE VOICE COMMAND BUTTON .....	176	CALL OPTIONS .....	198
3 – TRY OUT VOICE COMMAND .....	176	TURN CALL WAITING NOTIFICATIONS ON AND OFF .....	199
TRY OUT MORE COMMANDS .....	177	CALLER ID .....	199
TO LEARN MORE .....	177	CHANNELS .....	199
USING THE VOICE COMMAND BUTTON .....	177	FIXED DIALING .....	200
MAKING PHONE CALLS .....	178	SELECT NETWORKS .....	200
SHOWING CONTACTS .....	179	ADD A NETWORK .....	200
READING APPOINTMENTS .....	180	DISPLAY YOUR PHONE NUMBER .....	200
PLAYING MUSIC .....	181	SERVICE DIALING NUMBERS (SDN) .....	201
STARTING PROGRAMS .....	182	SELECT TTY MODE .....	201
GETTING PHONE STATUS .....	182	SOUNDS .....	202
GETTING VOICE COMMAND HELP .....	182	CHANGE OR TURN SOUNDS ON OR OFF .....	202
PERSONALIZATION .....	183	DELETE A SOUND .....	202
GENERAL OPTIONS .....	183	COPY A SOUND FROM YOUR PC TO YOUR PHONE .....	202
PHONE OPTIONS .....	184	PROFILES .....	204
CALENDAR OPTIONS .....	184	VIEW THE LIST OF PROFILES .....	204
MEDIA OPTIONS .....	184	EDIT A PROFILE .....	204
GENERAL TIPS .....	184	CHANGE THE CURRENT PROFILE .....	204
PHONE AND CONTACT TIPS .....	185	HOME SCREEN .....	205
READING APPOINTMENTS TIPS .....	186	CHANGE THE HOME SCREEN APPEARANCE .....	205
PLAYING MUSIC TIPS .....	186	CLOCK & ALARM .....	206
STARTING PROGRAMS TIPS .....	187	CLOCK .....	206
TROUBLESHOOTING .....	187	CONNECTIONS .....	207
TASK MANAGER .....	191	WIRELESS MANAGER .....	207
INTERNET SHARING .....	192	CREATE A BLUETOOTH PARTNERSHIP .....	207
GET TELENV .....	193	CREATE A DIAL-UP CONNECTION .....	208
MY-CAST WEATHER – DEMO .....	194	CREATE A GPRS CONNECTION .....	208
MYSAPCE MOBILE .....	195	CREATE A PROXY CONNECTION .....	209
CLEARVUE PDF .....	196	CREATE A VPN CONNECTION .....	209
		END A BLUETOOTH PARTNERSHIP .....	210
		DELETE A DIAL-UP CONNECTION .....	210
		DELETE A GPRS CONNECTION .....	211
		DELETE A PROXY CONNECTION .....	211
		CHANGE AN INTRANET URL .....	211
		MAKE YOUR DEVICE VISIBLE .....	211
		TURN ON AND OFF BLUETOOTH .....	212
<b>CHAPTER 14</b>			
<b>SETTINGS .....</b>	<b>197</b>		
PHONE .....	198		

# CONTENTS

RECEIVE BEAMED INFORMATION .....	212
BEAM AN ITEM .....	212
SET UP AN OUTGOING BLUETOOTH COM PORT .....	212
SET UP A BLUETOOTH-ENABLED HEADSET .....	213
SECURITY .....	214
ENABLE THE DEVICE LOCK .....	214
DISABLE THE DEVICE LOCK .....	214
VIEW A CERTIFICATE .....	215
DELETE A CERTIFICATE .....	215
ACTIVATING THE SIM PIN .....	216
LOCKING THE SIM CARD .....	216
CHANGING PIN2 .....	216
ENCRYPTION .....	216
MASTER CLEAR .....	217
REMOVE A PROGRAM .....	218
POWER MANAGEMENT .....	219
IPM POWER MODE .....	220
ACCESSIBILITY .....	221
REGIONAL SETTINGS .....	222
ERROR REPORTING .....	223
TURN ERROR REPORTING ON / OFF .....	223
<b>CHAPTER 15</b> .....	
<b>GAMES</b> .....	<b>225</b>
SOLITAIRE .....	226
START A GAME OF SOLITAIRE .....	226
HOW TO MOVE CARDS .....	226
PLAY SOLITAIRE .....	226
BUBBLE BREAKER .....	227
OVERVIEW OF BUBBLE BREAKER .....	227
BREAKER BONUS .....	227
START A GAME OF BUBBLE BREAKER .....	227
VIEW BUBBLE BREAKER STATISTICS .....	228
MIDNIGHT POOL — DEMO .....	229
START A GAME OF MIDNIGHT POOL .....	229
BRAIN CHALLENGE — DEMO .....	230

START A GAME OF BRAIN CHALLENGE .....	230
SCRABBLE BLAST — DEMO .....	231
START A GAME OF SCRABBLE BLAST .....	231
TIGER WOODS PGA TOUR 07 — DEMO .....	232
START A GAME OF TIGER WOODS PGA TOUR 07 .....	232
JEWEL QUEST 2 — DEMO .....	233
START A GAME OF JEWEL QUEST 2 .....	233

## CHAPTER 16

<b>SAFETY AND WARRANTY</b> .....	<b>235</b>
SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES .....	236
EXPOSURE TO RADIO FREQUENCY SIGNALS .....	236
ANTENNA CARE .....	236
DRIVING SAFETY .....	236
ELECTRONIC DEVICES .....	237
PRECAUTIONS .....	239
SAFETY INFORMATION FOR FCC RF EXPOSURE .....	240
BODY-WORN OPERATION .....	240
SAR INFORMATION .....	241
SAFETY INFORMATION FOR BATTERY USAGE .....	242
FCC & INDUSTRY CANADA REGULATORY COMPLIANCE .....	243
FCC HEARING-AID COMPATIBILITY REGULATIONS FOR WIRELESS DEVICES .....	245
FDA CONSUMER UPDATE .....	247
PROTECT YOUR WARRANTY .....	252
MANUFACTURER'S WARRANTY .....	253
12 MONTH LIMITED WARRANTY .....	253



## CHAPTER 1

# BEFORE USING YOUR PHONE

- INSIDE THE PACKAGE
- HANDSET DESCRIPTION
- ACTIVATING YOUR PHONE
- HOME SCREEN
- BATTERY USAGE


## INSIDE THE PACKAGE

This package should include all items pictured below.

If any are missing or different, you should immediately contact the retailer where you purchased the phone.




Handset

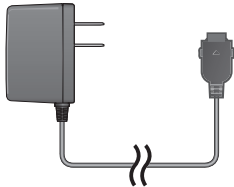

AC Travel Charger



Standard Battery

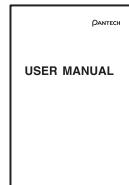

User Manual

# HANDSET DESCRIPTION

The Pantech duo™ weight is 110 g. The dimensions are 102x50x21.1 mm.



## Menu features

	Messaging		Calendar
	Contacts		ActiveSync
	AT&T Music		Cellular Video
	MEdia Net		AT&T Mail
	My Stuff		IM & E-mail
	MobiTV		Call History
	Organizer		Office Mobile
	Games		Internet Explorer
	Applications		Settings

01

02

03

04

05

06

07

08

09

10

11

12


13

14

15

16

# HANDSET DESCRIPTION

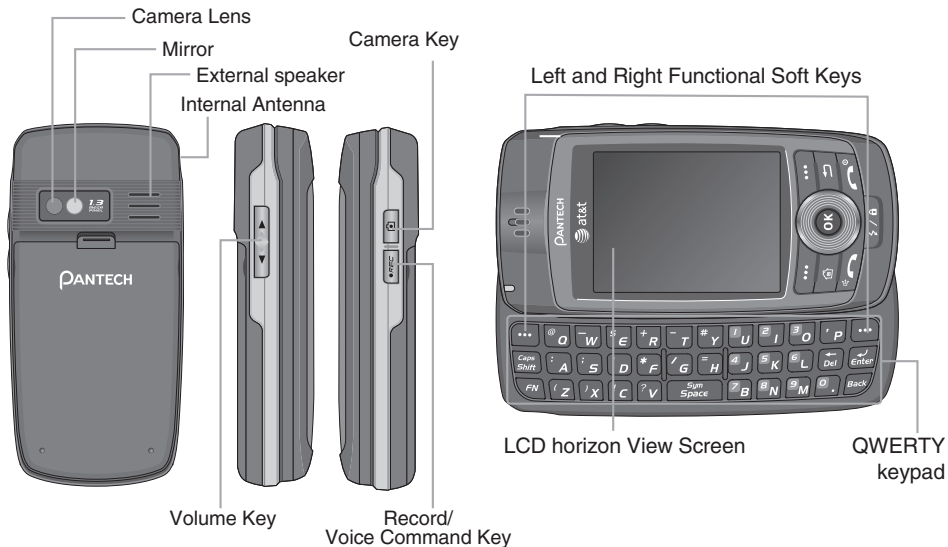

**NOTE**

*Holding device at internal antenna area might affect call quality reception.*

# ACTIVATING YOUR PHONE

If you have purchased Pantech duo™ from the AT&T Store, it has been activated already and is ready to use. If you have upgraded your phone or received a new phone by mail, it probably needs to be activated before you can use it.

To activate your phone, follow these steps:

- 1** Visit an AT&T Store and have your phone activated, and place your cursor on the **MY ACCOUNT** tab available on the home page.
- 2** When the drop-down menu “**HOW To**” **Wireless Guide** displays, select **ACTIVATE YOUR NEW PHONE** and click **GO**, to display instructions needed to activate your phone online.
- 3** After gathering the required materials, select the **Activated New Phone** link and follow the online directions to complete the activation process.

01

02

03

04

05

06

07

08

09

10

11

12

13


14


15

16



# HOME SCREEN

The home screen plays an integral part in the navigational mode of your Smart Device. It is the first screen displayed every time the phone is turned on. You can easily return to the home screen by pressing the .

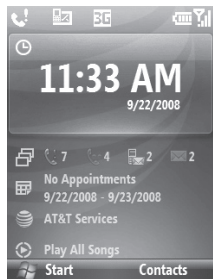










 



- ← Select and press the [OK] to access programs
- ← AT&T Operator Name and date/time
- ← Soft key commands

## HOME SCREEN CUSTOMIZATION








The Home Screen allows you to customize your start page. It can be used to display a variety of information, such as phone-specific status, information from over-the-air services, and information from personal information manager (PIM) applications. You can fully customize the Home Screen by installing new plug-ins and schemes.






 
## HOME SCREEN ICONS






Status icons appear at the top of the screen and on the Home screen. The following table lists common status icons and their meanings.

Indicator	Meaning
	Multimedia message (MMS) or Text message (SMS)
	New voicemail
	New e-mail
	Voice call
	Voice call in progress
	GPRS / EDGE / 3G Data call in progress
	Calls are forwarded
	Call on hold
	Missed call
	Line 1/Line 2
	Battery level
	Low battery
	Battery charging

# HOME SCREEN

 Indicator	Meaning
	No battery
	Signal strength
	No signal
	No wireless coverage
	ActiveSync/Synchronization error
	Phone off
	Silent
<b>abc</b>	Multipress text input mode, lowercase
<b>ABC</b>	Multipress text input mode, uppercase first character only
<b>ABC</b>	Multipress text input mode, uppercase
<b>xt9</b>	XT9 text input mode, lowercase
<b>XT9</b>	XT9 text input mode, uppercase first character only
<b>xT9</b>	XT9 text input mode, uppercase
<b>12#</b>	Numeric input mode
<b>G</b>	GPRS connection available
<b>E</b>	EDGE connection available

Indicator	Meaning
	3G connection available
	Bluetooth ON
	Missing SIM card
	Voice Command Enabled
	microSD card inserted
	Speaker phone on

Keys	Functions
<b>[Send]</b> key 	Press to make or receive a call. Short press: View Recent Calls. Long press: Make a call to the last number called.
<b>[End]</b> key 	Press to turn the phone on/off, to terminate a call or to return to the Home Screen.
<b>[Left]</b> soft key 	Press to access the main menu or the Menu functions displayed on the bottom line.
<b>[Right]</b> soft key 	Press to access Contacts or Menu function displayed on bottom line.
<b>[Quick List]</b> key 	Short press to launch the Quick List. Long press to enter lock mode.

01

02

03

04

05

06

07

08

09

10

11

12



 





 
13



14

15

16

# HOME SCREEN

Keys	Functions
<b>[C/Back]</b> key 	Press to clear a digit from the display or to return to the previous page.
Numeric keypad  key	A short press changes to capital letters or symbols during text entry mode. A long press shows menu for changing letters or symbols.
Numeric keypad  key	Press and hold to insert a '+' for international call
Numeric keypad  key	Press to insert a space and long press to enter choosing symbols during text entry mode.
<b>[Home]</b> key 	Press to return to the Home screen.
<b>[Volume]</b> key 	Press to adjust voice volume during a call, and adjust audio volume in standby mode.
<b>[Recording]</b> key 	Activates Voice Command or Voice Notes. A long press enters voice command state as default.
<b>[Camera]</b> key 	Press to launch the camera application.
Numeric keypad  keys	Press from number 1 to number 9 on numeric key pad, it prints numeric number of corresponding alphabet each situation.

Keys	Functions
Qwerty	  : left / right soft keys A ~ Z: alphabet key. FN: function key. Press and hold this key and press alphabet key at once, it prints blue colored symbols or numbers. Enter: enter key Back: back key Caps Shift: one time press for first word in capital, double press for holding in capitals.


# BATTERY USAGE

The battery is not charged when the phone is first purchased – fully charge the battery before first use. The battery will charge faster if the phone is powered off while charging. Battery operating time gradually decreases over time. If the battery fails to perform normally, you may need to replace it.

## BATTERY INSTALLATION

Be sure to use only the batteries that have been provided with the phone. Installation is easier if you have placed the phone on a flat surface.


- 1 Place the battery on the back of the handset and slide into place.
- 2 Push the battery down until it locks into place.

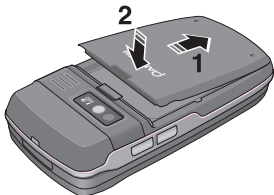

## BATTERY REMOVAL

Again, place the battery on a flat surface and use an even, steady pressure when removing the battery.

- 1 Pull the release latch upwards, lift up the battery.
- 2 Remove the battery from the handset.

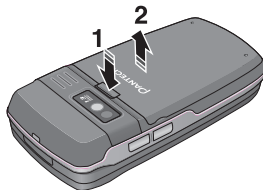

## NOTE

*If the battery is not correctly placed in the compartment, the handset will not turn on and/or the battery may detach during use.*

## BATTERY CHARGING

Make sure the battery is properly installed in the handset. Use all normal cautions when working with a standard wall outlet.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# BATTERY USAGE


## BATTERY STATUS CHECK LED

LED is located at the left side of earpiece.

LED color & blinking	Status	Action
<b>Orange Static</b>	Phone is being Powered On	Turn off after 3 seconds.
<b>Red Static</b>	Now Charging	
<b>Green Static</b>	Charging Complete	
<b>Red Blinking</b>	Charging Error (No Battery, Hot or Cold Battery, Bad Charger, Bad Battery)	Blinking every 1 second.

## POWER CONNECTION

- 1 Plug the AC Charger into a standard outlet.
- 2 Plug the other end of the AC Charger into the bottom of your phone. The battery must be installed in the phone.

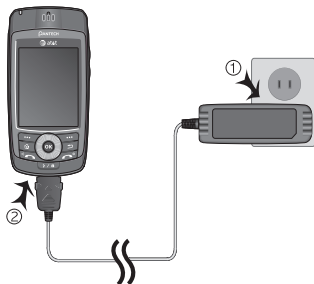

## POWER-OFF CHARGING

- The Pantech duo™ will enter 'power-off charging mode' automatically if you try to charge it with the device powered off.
- Charging state will be displayed according to the current state. (complete, 0% ~ 90% and error )



- Backlight will turn on for 5 seconds if you press any key except **[END]** key.
- Press **[End]** key if you want to exit 'power-off charging mode' and turn on.

# BATTERY USAGE

## NOTE

- The battery may not be fully charged at the time of purchase.
- Fully charge the battery before use.
- The battery must be connected to the phone in order to charge it.
- Battery operating time gradually decreases over time.
- If the battery fails to perform normally, you may need to replace the battery.

## BATTERY USAGE TIMES

The operating time is subject to your handset usage and configuration.

Battery Capacity	Talk Time
STD 1320 mAh	Up to 180 minutes

## BATTERY STANDBY TIMES

The operating time is subject to your handset usage and configuration.

Battery Capacity	Standby Time
STD 1320 mAh	Up to 250 hours

## NOTE

*These times are for a new battery. Usage and Standby times may decrease over time.*

## **BATTERY HANDLING INFORMATION**

The correct usage and handling of batteries can preserve the lifetime of your phone and ensure proper operation. Operating times are subject to the usage and configuration of your handset; please see the label on your battery for your battery's capacity. Follow these suggestions carefully.

## DOs

- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Try to keep the battery in a temperature range of 41°F (5°C) to 95°F (35°C). Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using it.
- Completely drain the battery before recharging. It may take one to four days to completely drain.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# BATTERY USAGE

- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Dispose of and recycle used batteries in accordance with local regulations.

## DON'Ts

- Don't use a damaged battery or charger.
- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't accidentally short circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery. To prevent injury or burns, ensure that no metal objects come into contact with the + and – terminals of the battery.
- Don't dispose of batteries by burning; they may explode.

## CHAPTER 2

### BASIC OPERATION


This chapter addresses and explains the basic features of your phone including:

- TURNING THE PHONE ON/OFF
- USING THE QUICK LIST
- CALL FUNCTIONS
- BASIC FUNCTIONS
- MAKING AN EMERGENCY CALL
- ENTERING TEXT AND NUMBERS




# TURNING THE PHONE ON/OFF

## ● TURNING THE PHONE ON

Press and hold the **END** key  until your “Power On” logo appears.

- If “Password” appears on the display, enter your 4-digit password to unlock your phone.
- If the battery does not have enough charge to turn on the phone, the keypad will not light up. You should charge your phone before turning it on.


## ● TURNING THE PHONE OFF

 
Press and hold the **END** key  until the “Power Off” logo appears.

Immediately change or recharge the battery when the battery low alert window appears on the display as “**Alert** – Main Battery low. To prevent possible data loss, replace or recharge the battery according to the owner’s manual.” The phone’s memory may possibly be damaged if the phone turns off due to the battery completely draining. If the phone turns off, unsaved data may be lost.

# USING THE QUICK LIST

The Quick List provides a list of commands that you can use to quickly perform common actions.

- 1 Press the **Quick List**  key.
- 2 Use the Navigation Key to select the Quick List command you want.

To	Select this command
Turn off the phone.	<b>Power off</b>
Turn on or off any wireless connection, such as a Bluetooth, Cellular phone. (You will not be able to make or receive phone calls.)	<b>Wireless Manager</b>
Lock the keypad so that you cannot make accidental key presses. To unlock the keypad, press <b>Unlock</b> , and then press the  key.	<b>Lock</b>
Make one of these profiles the active profile.	<b>Normal</b> <b>Silent</b> <b>Vibrate</b> <b>Outdoor</b> <b>Automatic</b>

## TIP

*You can turn off wireless connections to preserve battery life when you don't want to make or receive calls, or in environments where cell phones must be turned off. When wireless connections are off you can still use other phone features.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15


16

# CALL FUNCTIONS

Your Pantech duo™ phone has many options. This section will show you how to use basic functions such as making and receiving calls, locking and unlocking your phone, and managing the appearance and settings on your phone.

## ● MAKE A CALL BY ENTERING A CONTACT NAME


Your phone allows you to call someone from your contact list or address book. The screen will auto-fill the contact name as you begin to enter it.

- 1 On the Home screen, begin entering the contact name.
- 2 When you see the contact name you want to call, select it and press left soft key  [Call].

## ● MAKE A CALL BY ENTERING A PHONE NUMBER



On the Home screen, begin entering the phone number.

Do one of the following:

- If you see the number or contact name to call, select it and press left soft key  [Call].
- If you do not see the number or contact name, finish entering the number and press **OK** or **Send** key.

## ● MAKE A CALL FROM AN OPEN CONTACT

You can open contacts from the main screen and make a call from that contact.

- 1 On the Home screen, press the right soft key  [Contacts].
- 2 Select the contact to call and press **OK**.
- 3 Select the phone number to call and press **OK** or left soft key  [Call] or **Send** key.

### ! TIP

*If you have a long list of contacts, you can use a shortcut to find the contact you want. Enter the first few letters of the contact's name. When you do this, the phone searches through the contact list and displays the name. To call the contact, select the phone number and press **OK** or Left Soft Key [Call].*

## ● MAKE A CALL FROM THE CALL HISTORY LIST

Call History displays calls you have made, received, and missed.

- 1 On the Home screen, press [Start] [All Programs] [Call History] using the Navigation Key.

# CALL FUNCTIONS

**2** Select the name or phone number to call.

**3** Press .

## ● MAKE A CALL USING A RECENTLY DIALED PHONE NUMBER

Your phone will maintain a list of recent calls you have made. These calls are always easily accessible for redialing.

**1** On the Home screen, press **SEND** to display a list of recent calls.

**2** Select a name or phone number to make a call.

**3** Press .

## ● MAKE A CALL FROM A HYPERLINK PHONE NUMBER

You can quickly dial a phone number from an e-mail or text message that contains a hyperlink phone number. A hyperlink phone number is underlined in the same manner as a Web site address.

**1** From a message containing a hyperlink phone number, select the phone number and press **OK**.

## ● ANSWER A CALL BY PRESSING ANY KEY

You can set your phone to answer by pressing any key.

**1** On the Home screen, press **[Start] [All Programs] [Settings] [Phone] [Call Options]**.

**2** Use the Navigation key to select “Any Key answer” and press **[OK]** to check on the item and press Left Soft Key **[Done]** to finish.

## ● ANSWER OR IGNORE A CALL

To answer the call, press **SEND** or press Answer. To reject the call, press **END** or press Ignore.

### NOTE

*Selecting Ignore will connect the caller to your voicemail if you subscribe to this service.*

## ● ANSWER A SECOND CALL

To put the first call on hold and answer the second call, press **SEND** key or press **[Answer]**.

To switch between calls, press **[Swap]**.

To end the second call and go back to the first, press **End** key.

01

02

03

04

05

06

07

08

09

10

11

12


13

14

15

16

## ● INSERT A MANUAL PAUSE IN A DIALING SEQUENCE


- 1** On the Home screen, press the right function key  [**Contacts**].
- 2** Press the contact in whose phone number you want to insert a pause.
- 3** Select the phone number and press [**Menu**] [**Edit**].
- 4** Place the cursor where you want to insert the pause.
- 5** Press [**Menu**] [**Insert Wait**]. The letter **w** appears where the manual pause will occur in the dialing sequence.
- 6** Press [**Done**].

### **!** NOTE

*To resume dialing after reaching a manual pause, press **OK**.*


## ● INSERT A THREE-SECOND PAUSE IN A DIALING SEQUENCE

There may be occasions when you wish to pause dialing after you've selected a contact to call. You can insert a three-second pause between selecting a contact to call and when the phone actually dials.

- 1** On the Home screen, press the right function key  [**Contacts**].
- 2** Press the contact in whose phone number you want to insert a pause.
- 3** Select the phone number and press [**Menu**] [**Edit**].
- 4** Place the cursor where you want to insert the pause.
- 5** Press [**Menu**] [**Insert Pause**]. The letter **p** appears after three-second pause will occur in the dialing sequence.
- 6** Press [**Done**].


## ● SETTING UP YOUR VOICEMAIL

### SET UP VOICEMAIL

All unanswered calls to your AT&T Pantech duo™ are sent to voicemail, even if your phone is turned off. You'll want to set up your voicemail and personal greeting as soon as you activate your Pantech duo™. Your service provider has assigned your voicemail number to the  key.


### CHECK VOICEMAIL

When checking your voicemail, all unanswered calls will be played back in the order they were received. After you have entered your voicemail, you will hear options, to save, delete, replay, or skip each message.

- 1** Press and hold  key to call your voicemailbox.
- 2** Follow the instructions to retrieve it.

## ● LOCK THE KEYPAD


Locking the keypad turns off keypad functionality. This is a helpful feature if, for example, the phone is turned on and in your pocket, and you want to prevent accidental key presses.

- 1** Display the Quick List by pressing .
- 2** Select **[Lock]** and press **OK** or press and hold key until it enters in the lock mode directly.
- 3** Once the keypad is locked, the left soft key label changes to Unlock.

### NOTE

*You can still receive calls and make emergency calls when the keypad is locked.*

### TIP

*You can use a shortcut to quickly lock your phone by using one simple button. Press key  and hold until displaying **[Unlock]** on the soft menu.*

01

02

03

04

05

06

07

08

09

10

11

12

13


14

15


16

# BASIC FUNCTIONS

## ● UNLOCK THE KEYPAD

On the Home screen, press **Unlock** and press the  key.

## ● AUTO-LOCK THE KEYPAD

When deactivating the locked key, you have to enter  key additionally. However, with Auto-Lock, you can deactivate the lock function automatically. Activate Auto-Lock as follows before using it.

- 1** Select **[Start] [All Programs] [Settings] [Phone] [Auto Lock]** on the Home screen.
- 2** Change the status of Auto-Lock to 'On'.
- 3** Select **[Done]**.

Once Auto-Lock is activated, the keypad will become locked when the slide is lowered and the screen is turned off. You can unlock the setting in this condition by pressing the key for one second or simply open the slide.

## ● SET THE DATE AND TIME

Your phone is not preset with current date and time. You will need to select the time zone and the date and time.

- 1** On the Home screen, press **[Start] [All Programs] [Settings]** with the Navigation Key, or select **Settings** from the Home screen.
- 2** Select **Clock**, press **OK**, then **Date and Time**.
- 3** In **Time Zone**, select your time zone using the left and right Navigation Keys.
- 4** In **Date**, edit the month, day, or year.
- 5** In **Time**, edit the hour, minute, and second.
- 6** Press **[Done]**.

## ● SET THE IDLE TIMER

Your Pantech duo™ will automatically return to the Home screen after a period of inactivity. You can adjust the amount of time before the Pantech duo™ defaults to the Home screen.

**1** On the Home screen, press **[Start] [All Programs] [Settings]** with the Navigation Key, or select **Settings** from the Home screen and press **OK**.

**2** Select **Home Screen**.

**3** Select **Time out**, use left and right Navigation Keys to set the amount of time for the phone to be idle before the Home screen automatically appears.

**4** Press **[Done]**.

## ● CHANGE THE HOME SCREEN APPEARANCE

The Pantech duo™ allows you to choose from many color schemes and layouts and allows you to use a background image for the main screen.

**1** On the Home screen, press **[Start] [All Programs] [Settings]** with the Navigation Key, or select **Settings** from the Home screen and press **OK**.

**2** Select **Home Screen**.

**3** Under the Home Screen Layout, select a Color scheme, and Background image.

**4** Press **[Done]**.

## ● VIEW OPERATING SYSTEM INFORMATION

There may be instances when you wish to see the basic information about your phone's operating system. This option allows you to see summaries of all the settings on your phone.

**1** On the Home screen, press **[Start] [All Programs] [Settings]** with the Navigation Key, or select **Settings** from the Home screen and press **OK**.

**2** Press **More...**, then select **About**.

### NOTE

To see **About** and more settings, press **More...**

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



## ● ENTER OWNER INFORMATION

Entering and displaying owner information allow someone to return the phone to you in case it is lost.

- 1 On the Home screen, press **[Start] [All Programs] [Settings] [More...] [Owner Information]**.
- 2 Complete the following:
  - In Name, enter your name.
  - In Telephone number, enter a number where you can be reached.
  - In E-mail address, enter your e-mail address.
  - In Notes, enter any other information you want to include.
- 3 Press **[Done]**.

### NOTE

*To see **Owner Information** and more settings, press **More...***

## ● EXPLORE FILES AND FOLDERS

File Explorer lets you browse the contents of folders on your phone. The root folder on the phone is named My Device. My Device is similar to My Computer on a PC and contains the My Documents, Program Files, Temp, Storage Card, and Windows folders among others.

- 1 On the Home screen, press **[Start] [All Programs] [Applications]** and then select **File Explorer** or select **My Stuff**. The My Documents folder and its subfolders are listed.
- 2 To find the folder you want, do the following.
  - Select one of the folders listed in the main window.
  - Press **[Menu]**, and navigate through the folders listed there.
  - Select the item you want to open.

## ● SILENCE THE RING TONE OF AN INCOMING CALL

Press Volume down button until the ring is silenced. You may still answer the call if you want to.

# MAKING AN EMERGENCY CALL

Emergency calls do not depend on the availability of the 911 (or 112) network in your area. The emergency number will work independently of the network area you are in, with or without a SIM card inserted.

Dial 911 (or 112) and press **OK**.

## **NOTE**

*You can make calls to emergency service numbers under any circumstances, even if you have locked the phone.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16


# ENTERING TEXT AND NUMBERS

## ENTERING TEXT AND NUMBERS

You can enter text, numbers and symbols by using the keypad. The phone supports four input modes for entering text, numbers and symbols: Multipress, XT9, Numeric and symbols. Multipress and XT9 modes are used for entering text, Numeric mode is used for entering numbers, and Symbols mode is used for entering symbols like “@”, “/”, “\$” and punctuation marks.

When you select a field that requires text or numbers, the phone automatically selects the appropriate input mode. The status indicator on the top right side of the display screen shows the input mode that you are currently using.

## CHANGE BETWEEN UPPERCASE, LOWERCASE, AND CAPS LOCK

Press the  key to change between uppercase, lowercase, and caps lock within a text input mode.

### TIP

*In both Multipress and XT9 modes, the first letter of a sentence is automatically capitalized.*

 

## CHANGE THE MULTIPRESS TIMEOUT

The Multipress timeout setting controls the amount of time you have to press a single key to get to the next letter on that key. If the time expires, the phone moves the cursor to the next letter in a word or sentence.

- 1 On the Home screen, press **[Start] [All Programs]**.
- 2 Select **Settings**, then press **More...** to select **Accessibility**.
- 3 In Multipress timeout, select the length of the pause between key presses using left and right Navigation Keys.


## DELETE CHARACTERS

You can only delete characters when you are in input mode, either for numbers, names, or text. The Clear key operates similarly to a “backspace” key on a computer.

- 1 To backspace and delete a single character in any input mode, press **Clear**  key.
- 2 To backspace and delete an entire text or numeric field in any input mode, press and hold the **Clear**  key.


# ENTERING TEXT AND NUMBERS

## ● ENTER A SPACE

Either with Multipress or XT9 mode, press the  key.



## ● ENTER A SYMBOL

There may be times when you need to use a symbol that is not displayed on the keypad. Additional symbols are available by accessing a separate page.

- 1 Press and hold the  key.
- 2 In the menu that appears, press Symbols to display the Symbols page.
- 3 Select the symbol you want.
- 4 Press **OK**.

## ● ENTER NUMBERS IN TEXT BOXES

To enter numbers, use Numeric mode. If you need to enter a number within a line of text, change to Numeric mode to enter the number, and then change back to Multipress or XT9 mode to finish entering the text.

- 1 Change to Numeric mode by pressing and holding the  key.
- 2 Enter the number or numbers using the keypad.
- 3 Change back to Multipress or XT9 input mode by briefly pressing the  key, then finish entering your text.


### NOTE

*If a field permits a numeric entry only, such as a phone number, the input mode automatically defaults to Numeric mode.*

## ● ENTER PUNCTUATION IN MULTIPRESS MODE


Press  until you see the punctuation mark.

### TIP

*To see all of the available symbols, press and hold the  key.*

## ● ENTER PUNCTUATION IN XT9 MODE

In a text box when in XT9 text entry mode, do the following:

- 1 Press , and select from a list of common punctuation.

01

02

03

04

05

06

07

08

09

10

11

12

13


 


14



15

16

# ENTERING TEXT AND NUMBERS

## ● ENTER TEXT IN XT9 MODE

To form a word in XT9 mode, press the number keys that contain the letters you want. As you enter letters, XT9 analyzes your key presses and attempts to complete the word. For example, to enter the word shoe, press , , , .

- 1 Press and hold the  key.
- 2 On the popup menu, select **XT9** and press **OK** key.
- 3 The XT9 indicator appears at the top of the screen.
- 4 Enter letters by pressing the keys on which the letters appear. Press a key only once for each letter. If there is more than one choice in the XT9 dictionary for your entry, a list of available words is displayed.
- 5 Press the  key to enter a space after the word is entered, or press one of the available words and the space is added automatically.
- 6 If you do not see the desired word, press **Add Word?** from the list, and then enter the word using Multipress.



## ● START A NEW LINE

When you are entering information in a text box, if you want to add a line break, use the **OK** key.

- 1 In a multi-line text box such as the Notes area of a contact or a calendar appointment, do the following:
- 2 In any input mode, press **OK** key.

## ● TURN ON CAPS LOCK

You can toggle back and forth between having the cap lock on and off, the status indicator will tell you which mode you are in.

- 1 In Multipress or XT9 mode, press the  key until the status indicator for the text input mode appears in all capitals.
- 2 Press the  key to cycle back to lowercase.

# ENTERING TEXT AND NUMBERS


## ● ENTER THE PLUS SIGN FOR INTERNATIONAL CALLS

Before dialing an international call you must insert the plus sign in the number. The “0” functions as the plus sign.

- 1 In a numeric entry field, press and hold .

## ● CHANGE THE INPUT MODE

There are several input modes available on your phone depending on whether you are entering contact information, phone numbers, symbols or text. Be sure you are in the input mode you desire.

- 1 In text input mode, press and hold the  key.
- 2 A popup menu appears; select the input mode you want and press **OK**.
- 3 The status indicator for the selected input mode appears at the top right of the screen.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# USING QWERTY KEYBOARD

Your phone, with a specifically designed QWERTY keyboard, that provides a superior typing experience on a small handheld for easy and comfortable text writing. You can use all of the phone functions with the keyboard either closed or open. When you open the keyboard you have the extra benefit of a full messaging keyboard. The handheld includes a fully-functional QWERTY keyboard you can use to compose text for e-mail messages, notes, and so on.



KEY	FUNCTION
<b>Left soft key</b>	Press to access the main menu or the Menu functions displayed on the left at the bottom.
<b>Right soft key</b>	Press to access Contacts or Menu function displayed on the right at the bottom.

KEY	FUNCTION
<b>Shift</b>	<p>To type upper-case letters, hold down the Shift key and then press one or more letter keys.</p> <p>To type upper-case letters continuously, use the CAPS-LOCK mode. To change to the CAPS-LOCK mode, double-tap the Shift key. Once the CAPS-LOCK mode is set, you can type upper-case letters only. To deactivate, double-tap the Shift key again.</p> <p>To type an upper-case letter for the first letter of a word only, simply press the Shift key once. Then, the first letter you type will be upper case while the rest will be lower-case.</p>
<b>FN</b>	<p>To type a special character or numbers, press the applicable key while holding down the FN key.</p> <p>To type special characters or numbers consecutively, use the FN-LOCK mode. To change to the FN-LOCK mode, double-tap the FN key. You can type special characters or numbers only in this mode. To deactivate, double-tap the FN key again.</p>

# USING QWERTY KEYBOARD

KEY	FUNCTION
	<p>To type a special character or number for the first letter of a word only, simply press the FN key once. Then, the first letter you type will be a special character or number while the rest will be normal letters.</p> <p>To type a special character that is not placed on the keyboard, press FN + Space.</p>
<b>Space key</b>	Press the Space key to type a blank space.
<b>Enter key</b>	Press the Enter key to insert a line break.
<b>Del key</b>	Press the Delete key to delete a character to the left of the text cursor.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



# MEMO

## CHAPTER 3

# CALENDAR, CONTACTS, CALL HISTORY & MY STUFF


This chapter discusses using calendar and contacts menu on your phone.

- CALENDAR
- CONTACTS
- CALL HISTORY
- MY STUFF

# CALENDAR

## SCHEDULE AN APPOINTMENT

Your calendar allows you to schedule appointments and reminders by day, by time, or by event.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Calendar** and press **OK**.
- 3 Press **[Menu]** and select **New Appointment**.
- 4 Enter information about the appointment.
- 5 To schedule an all-day event, under **End time**, select **All day event**.
- 6 Press **[Done]**.


### NOTE

*All-day events do not occupy blocks of time in the Calendar; instead, they appear in banners at the top of the calendar.*

See also 'Change the remainder time'.

## DELETE AN APPOINTMENT

To delete an existing appointment, you will have the option of deleting just one appointment or the entire series if it is a recurring appointment.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Calendar** and press **OK**.
- 3 In Agenda view, select the appointment to delete.
- 4 Press **[Menu]**, then **Delete Appointment**.
- 5 Press **One** to delete only the current appointment.

### NOTE



*When you delete an appointment in Calendar on your phone, it is also deleted on your PC the next time you synchronize. If the appointment has not been synchronized with a PC, it will be deleted only from the phone. Calendar items can be deleted only from Agenda view or from an open calendar appointment. To delete from other views, open the appointment, and Press **[Menu] [Delete]**.*

### TIP

*To cancel a deletion, press **Cancel** key.*


## ● UPDATE AN APPOINTMENT

When your schedule or appointment information changes, you can easily edit the appointment with new information.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Calendar** and press **OK**.
- 3 Select the appointment and press **OK** key and press right soft key  **[Menu]** and select **Edit** and press **OK** key.
- 4 Press **All** to edit the series.
- 5 Make your changes and press **[Done]**.


## ● VIEW AN APPOINTMENT

Your appointments should be easily viewable from the main calendar menu. The Calendar menu is accessible with the Start soft key from the Home screen.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Calendar** and press **OK**.
- 3 Select the appointment to view and press **OK**.

## ● VIEW APPOINTMENTS FOR THE WEEK


Each week's appointments are clearly displayed in the calendar, when you've selected Week view.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Calendar** and press **OK**.
- 3 Press **[Menu]** and select **Week View**.

See also 'Change the display of the workweek'.

## ● VIEW TODAY'S AGENDA

For a single day's schedule, select that day from one of the views in the calendar and select Agenda view.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Calendar** and press **OK**.
- 3 Press **[Menu]** select **Go to Today** and press **OK**.
- 4 From Week or Month view in **Calendar**, press soft key **[Menu]** and select **Agenda View**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## **!** TIP

To view previous or approaching dates, scroll left or right, or press **[Menu]** **[Go to Date]**.

To quickly view today's agenda, on the Home screen, press an upcoming appointment (if one is present).

## **●** VIEW YOUR AGENDA FOR A SPECIFIC DATE

You can also select a specific date to check that day's schedule.

- 1** From the Home screen, press the left soft key **[Start] [All Programs]**.
- 2** Select **Calendar** and press **OK**.
- 3** Press **[Menu]** select **Go to Date** and press **OK**.
- 4** Enter the date to view, and press **[Done]**.

## **●** VIEW YOUR SCHEDULE FOR THE MONTH

The calendar function has week views and month views, for a higher level view of a schedule.

- 1** From the Home screen, press the left soft key **[Start] [All Programs]**.
- 2** Select **Calendar** and press **OK**.

- 3** Press **[Menu]** select **Month View** and press **OK**.


## **●** MAKE AN APPOINTMENT RECURRING

If you've already entered a single appointment in your calendar and would like to change it to a recurring appointment, use the Occurs selection after selecting the appointment.

- 1** From the Home screen, press the left soft key **[Start] [All Programs]**.
- 2** Select **Calendar** and press **OK**.
- 3** Select an appointment and press soft key **[Menu] [Edit]**.
- 4** Scroll to Occurs and use left/right navigation key to select one of the recurrence options.
- 5** Press **[Done]**.

## **●** SHOW WEEK NUMBERS

In many cases the weeks of the year are referred to by number – the calendar function allows you the option of displaying the number of the week, between 1 and 52.


- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Calendar** and press **OK**.
- 3 Press the right soft key **[Menu]** and select **Tools**, and press **OK** key or right navigation key, it shows options menu, then press **OK** key.
- 4 Scroll to **Month view** and click **OK**.
- 5 Select **Show week numbers**.
- 6 Press **[Done]**.

## **NOTE**

*In Week view, the week number appears at the top of the screen. In Month view, the week numbers appear along the left side of the screen.*

## **CHANGE THE WORK WEEK DISPLAY**

Depending on your schedule, you may want to change the default work week displayed. You can choose any day of the week to start and/or finish.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Calendar** and press **OK**.

- 3 Press the right soft key **[Menu]** and select **Tools**, press **OK** key or right navigation key, and press **Options**.

Do one of the following:

- To specify the first day of the week, in **First day of week**, press **Sunday** or **Monday**.
- To specify the number of days you want to appear in a week, in **Week view**, press **5-day week**, **6-day week**, or **7-day week**.

- 4 Press **[Done]**.

## **CHANGE THE REMINDER TIME**

By default, the reminder time is set 15 minutes prior to an appointment.

- 1 In Calendar, press the right soft key **[Menu]** and select **Tools**, press **OK** key or right navigation key, and press **Options**.
- 2 Scroll to **Set reminders** and press **OK**.
- 3 Change the time.
- 4 Press **[Done]**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15


16

# CONTACTS

Using the Contacts feature of your Pantech duo™, you can manage all the phone information you need. There are many options for adding contacts, retrieving contacts, and managing the information for each contact.

## ● CREATE A NEW CONTACT

To enter a new contact manually, without having the caller on the phone, you will use the Contacts selection from the Home screen.



- 1** On the Home screen, press **[Start] [All Programs]**.
- 2** Select **Contacts** using the Navigation key and press **OK**.
- 3** Press the left soft key  **[New]**.
- 4** Enter information for the new contact.
- 5** Press **[Done]**.

### **!** TIP


*If someone who isn't in your list of contacts calls you or sends you a message, you can create a contact from Call History or from the message by pressing **[Menu] [Save to Contacts]**.*

## ● BEAM A CONTACT

It is possible to use your phone to send a contact to another device such as Bluetooth radio. This is called “beaming” your contact. A list of devices will appear when you've selected Beam.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2** Select **Contacts**.
- 3** Select the contact to beam.
- 4** Press the right soft key  **[Menu]**.
- 5** Select **Send Contact** then select **Beam** and press **OK**.
- 6** On the list that appears, scroll to the name of the device you want to beam the contact.
- 7** To beam using Bluetooth, ensure that both Bluetooth radios are turned on and that Bluetooth is discoverable on the receiving device.
- 8** Press **Beam**.
- 9** Status information displays, indicating the name of the device to which the phone is beaming, and whether the beaming process is pending, finished, or was unsuccessful.

If you want to receive a contact by beam, you have to follow these steps.


 
- 1 On the Home screen, press left soft key  **[Start] [All Programs]**.
- 2 Select **Settings** and press **OK**.
- 3 Select **Connections** and press **OK**.
- 4 Select **Beam** and press **OK**.
- 5 Check **Receive incoming beams**.

 **NOTE**

*More information about Bluetooth, see Chapter 12. Bluetooth section.*


 
## ● CALL A CONTACT FROM CONTACT INFORMATION

You can call a contact directly by selecting them from the Contacts page off the Home screen.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]** and then jump to  or directly press right soft key **[Contacts]**.
- 2 Select the contact to call and press **OK**.
- 3 Scroll to the phone number to dial.
- 4 Press **OK** or **SEND**.

## ● CALL A CONTACT FROM THE CONTACT LIST

If you do not select one of the contacts phone numbers, but you press **Send**, your phone will dial the default number for that contact.


- 1 On the Home screen, press the left soft key  **[Start] [All Programs]** and then jump to  or directly press right soft key **[Contacts]**.
- 2 Select the contact to call.
- 3 Press **SEND**. The contact's default phone number is dialed.

 **TIP**

*To call a phone number other than the default, press the contact, press **OK** and scroll to the number you want to dial, then press **SEND**.*

## ● CHANGE THE DEFAULT NUMBER FOR A CONTACT

The default number for the contact will be the first number displayed. If you need to change the default number, you will use the Navigation key to set the default.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16





# CONTACTS

- 2 Select **Contacts** and press **OK**.
- 3 Select the contact whose default number you want to change.
- 4 Press the Navigation Key left or right to select the number or other contact method that you want to set as the default. For example, (m)obile, (h)ome or (w)ork.



## ● DUPLICATE A CONTACT

This feature allows you to copy contacts in Device or SIM to the same area. (Device → Device, SIM → SIM)

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Contacts** and press **OK**.
- 3 Scroll to the contact to duplicate.
- 4 Press the right soft key  **[Menu]**.
- 5 Select **Duplicate Contact** from the popup menu and press **OK**.


## ● COPY TO DEVICE / SIM

This feature allows you to copy selected contacts in Device or SIM to other areas. (Device → SIM, SIM → Device)


- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Contacts** and press **OK**.
- 3 Scroll to the contact to copy.
- 4 Press the right soft key  **[Menu]**.
- 5 When selecting SIM Contact, select **Copy to Device** from the popup menu and press **OK**.  
When selecting Device Contact, select **Copy to SIM** from the popup menu and press **OK**.

## ● COPY ALL TO DEVICE / SIM

This feature allows you to copy all contacts in Device or SIM to other areas. (Device → SIM, SIM → Device)



- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**.

# CONTACTS

- 2 Select **Contacts** and press **OK**.
- 3 Press the right soft key  **[Menu]**.
- 4 When selecting SIM Contact, select **Copy All to Device** from the popup menu and press **OK**.  
When selecting Device Contact, select **Copy All to SIM** from the popup menu and press **OK**.



## ● DELETE A CONTACT

Deleting a contact is very simple, just use the Menu key once you have selected the contact.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Contacts** and press **OK**.
- 3 Scroll to the contact to delete.
- 4 Press the right soft key  **[Menu]**.
- 5 Select **Delete Contact** from the popup menu and press **OK**.


## ● DELETE ALL DEVICE / SIM

This feature allows you to delete all contacts in Device or SIM.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Contacts** and press **OK**.
- 3 Press the right soft key  **[Menu]**.
- 4 When selecting SIM Contact, select **Delete All SIM** from the popup menu and press **OK**.  
When selecting Device Contact, select **Delete All Device** from the popup menu and press **OK**.

## ● CREATE A CONTACT FOR A CALLER

Creating a contact for a caller makes their information easier to retrieve when the call is done. The contact can be added to the Contact list during the call.

- 1 During a call, press the right soft key  **[Menu]**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15



16

# CONTACTS

- 2 Select **Save to Contacts** and press **OK**.
- 3 Select **<New Contact>**.
- 4 Enter information about the contact.
- 5 Press **[Done]**. The contact is added to your Contact list.






 

## FILTER THE CONTACT LIST

Contacts that have categories assigned are displayed in a list when filtered by category.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Contacts** and press **OK**.
- 3 Press the right soft key  **[Menu]**.
- 4 Select **Filter** from the popup menu and press **OK**.
- 5 Select a category to filter.


## FIND A CONTACT

The contact section of your phone has an auto-fill feature that will allow you to find contacts more quickly. While entering the number or name of the contact, the phone will auto-fill the rest of the information as you press the keys, until you find the right contact.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Contacts** and press **OK**.
- 3 Begin entering the name or phone number of the contact you want to find until the contact is displayed. For example, to find “Sandra,” , , , , ,  because these numbers correspond to the letters for that name.




## SEND AN E-MAIL TO A CONTACT

If a contact's e-mail address is entered into their information, you can send an e-mail from within the contact list after selecting the contact.

- 1 On the Home screen, press the left soft key  [Start] [All Programs].
- 2 Select **Contacts** and press **OK**.
- 3 Select a contact and press **OK**.
- 4 Scroll to the e-mail address and press **OK**.
- 5 Select the e-mail account to use.
- 6 Enter a subject, compose your message, and then press **Send**.



### ● SEND A TEXT MESSAGE TO A CONTACT

You can send text message from within the contact list after selecting the contact and pressing the Menu key.

- 1 From the Home screen, press the left soft key  [Start] [All Programs].
- 2 Select **Contacts** and press **OK**.
- 3 Select a contact, and press **OK**.
- 4 Press the right soft key  [Menu] and select **Send Text Message**.
- 5 Compose your message, and press the left soft key  [Send].


### ● VIEW AND EDIT CONTACT INFORMATION

You may want to change or update contact information once it has already been entered. Do this from the Contacts menu of the Home screen.

- 1 On the Home screen, press the left soft key  [Start] [All Programs].
- 2 Select **Contacts** and press **OK**.
- 3 Select a contact, and press **OK**.
- 4 Press the right soft key  [Menu], select [Edit] and press **OK**.
- 5 When finished making changes, press [Done].

### ● ADD A PICTURE TO A CONTACT

You may wish to add a picture to a contact record. You can add an existing picture, or you can put the phone in Camera mode to take the picture and add it to the contact.

- 1 On the Home screen, press the left soft key  [Start] [All Programs].
- 2 Select **Contacts** and press **OK**.
- 3 Select a contact, and press **OK**.

01

02

03

04

05

06

07

08

09

10

11


12

13

14

15

16

**4** Press the right soft key  **[Menu]**, select **[Edit]** and press **OK**.

**5** Using the Navigation Key, scroll down to **Picture**.

Do one of the following:

- Select the picture you want to add.
- Press **Camera** and take a picture.


## ● REMOVE A PICTURE FROM A CONTACT

Once a picture is attached to a contact, it can easily be removed or changed from the Contacts menu by using the soft key and editing the field.

**1** On the Home screen, press the left soft key  **[Start] [All Programs]**.

**2** Select **Contacts** and press **OK**.

**3** Select a contact, and press **OK**.


**4** Press the right soft key  **[Menu]**, select **[Edit]** and press **OK**.

**5** Press **Remove Picture**.

## ● ASSIGN A CATEGORY TO A CONTACT


It may be helpful to group your contacts in categories you define for easier reference. If you know the contact's category you can easily retrieve the contact.

**1** You can use categories to help you organize and group your contacts.

**2** On the Home screen, press the left soft key  **[Start] [All Programs]**.

**3** Select a **Contact**, and press **OK**.

**4** Select a contact, and press **OK**.

**5** Press the right soft key  **[Menu]**, select **[Edit]** and press **OK**.

**6** Using the Navigation Key, scroll down to **Categories**.

**7** Use the left and right Navigation Keys to select the category you want.

**8** Press **[Done]**.



### NOTE

*Categories are shared between your contacts and tasks. A category will remain in the list of shared categories as long as it is assigned to at least one contact or task.*

# CONTACTS



## ● ASSIGN A RING TONE TO A CONTACT

To easily identify who is calling you by the ring tone, you can assign a custom ring tone to each contact.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2** Select **Contacts** and press **OK**.
- 3** Select a contact, and press **OK**.
- 4** Press the right soft key  **[Menu]**, select **[Edit]** and press **OK**.
- 5** Using the Navigation Key, scroll down to **Custom ring tone**.
- 6** Select the ring tone you want.
- 7** Press **[Done]**.

## ● CREATE A SPEED DIAL

You can create a speed dial for a phone number, e-mail address, or Web page address that is stored in Contacts.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]**.
  - 2** Select **Contacts** and press **OK**.
  - 3** Select the contact for whom to create a speed dial and press **OK**.
  - 4** Select the phone number, e-mail address, or Web page address for which to create a speed dial.
  - 5** Press **[Menu]** and select **Add to Speed Dial**, then press **OK**.
  - 6** In Keypad assignment, select the speed dial number to use.
  - 7** Press **[Done]**.
-  **NOTE**  
*The number 1 is reserved for calling your voicemailbox.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# CONTACTS


## USING SPEED DIALS

Set up speed dial codes to allow you to call contacts by pressing only one (or two) buttons from the Home screen.

- 1 On the Home screen, press and hold the number on the keypad that you have assigned as a speed dial for the phone number, e-mail address, or Web page.
- 2 If the speed dial is two digits, press the first digit, and press and hold the second digit.
- 3 The phone dials the phone number, opens a new e-mail message, or goes to the Web page.

## VIEW AND EDIT A SPEED DIAL


You can view or edit all the contacts you've assigned to speed dial by entering the Speed Dial menu from the Start soft key.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **[Applications] [Speed Dial]** and press **OK**.

- 3 Select a contact you want to change and press **OK** key.
- 4 Make any changes and press **[Done]**.


## DELETE A SPEED DIAL

Deleting a Speed Dial can be done at any time by following these instructions.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **[Applications] [Speed Dial]** and press **OK**.
- 3 Select the speed dial to delete.
- 4 Press **[Menu]** and select **Delete** from the popup menu.

# CALL HISTORY

Call history provides details of all calls received, missed and dialed.

**1** From the Home screen, press the left soft key  **[Start] [All Programs]**.

**2** Select **Call History** and **OK**.

## **!** TIP


*To view only missed calls, incoming calls, or outgoing calls, press **[Menu]** select **Filter**, and then press the type of calls to view.*

## **👉** NOTE

*Once you have accessed Call History from the main menu, the icon appears on the top of the Home screen Shortcut bar. Select the icon and press **OK** to go directly to **Call History**.*

## ● VIEW CALL TIMERS

You can time each call that is received or made, and the time and length of each call can be reviewed.

**1** From the Home screen, press the left soft key  **[Start] [All Programs]**.

**2** Select **Call History** and press **OK**.

**3** Press **[Menu]** and select **View Timers** from the popup menu.

## ● RESET CALL TIMERS

When call information is no longer required, the call timers can be set to zero.

**1** From the Home screen, press the left soft key  **[Start] [All Programs]**.

**2** Select **Call History** and press **OK**.


**3** Press **[Menu]** and select **View Timers** from the popup menu and press **OK**.

**4** Press **[Menu]** and select **Reset Timers** and press **OK**.

**5** Press **Yes**. All of the call timers are set to zero (0), except for the Lifetime calls timer.

## ● VIEW DETAILS ABOUT A CALL

To review all the stored information on a call you will access the Call History function.

**1** From the Home screen, press the left soft key  **[Start] [All Programs]**.

**2** Select **Call History** and press **OK**.

**3** Select the call you want to view details for and press **OK**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15


16



# CALL HISTORY

## ● CREATE A CONTACT FROM CALL HISTORY

While you are in the Call History function, you can select any of the calls and automatically add that caller to your contact list.

- 1** From the Home screen, press the left soft key  [**Start**] [**All Programs**].
- 2** Select **Call History** and press **OK**.
- 3** Select the phone number for which to create a contact and press [**Menu**] and scroll to **Save to Contacts** in the popup menu and press **OK**.
- 4** Select **<New Contact>** and press **OK**.
- 5** Enter the remainder of the contact information and press [**Done**]. The new contact appears in your contact list.


## ● DELETE AN ITEM FROM CALL HISTORY

Any entry in the Call History can be deleted by selecting an entry and then by accessing the menu.

- 1** From the Home screen, press the left soft key  [**Start**] [**All Programs**].

- 2** Select **Call History** and press **OK**.

- 3** Select the item to delete.

- 4** Press the right soft key  [**Menu**], then select **Delete** from the popup menu.

### ! TIP

*To delete all items in Call History, press [**Start**] [**All Programs**] [**Call History**] [**Menu**] [**Delete List**].*


## ● DIAL THE LAST NUMBER CALLED

If you need to quickly call the last number you have called, this shortcut allows you to do so without using menus.

- 1** On the Home screen, press **SEND** twice.

## ● FIND A CONTACT FROM CALL HISTORY

There is an option in the Call History for finding contacts from your contact list. The auto-fill feature will help.


- 1** From the Home screen, press the left soft key  [**Start**] [**All Programs**].

# CALL HISTORY

- 2 Select **Call History** and press **OK**.
- 3 Press **[Menu]**, then select **Find Contact** from the popup menu.

## INSERT AN INTERNATIONAL COUNTRY CODE

To make an international call you must include a country code at the beginning of the dialing sequence for the phone number.


- 1 Press and hold  until a plus (+) sign appears, enter the country code, and then enter the rest of the phone number.

### NOTE

*You can insert a plus (+) sign into a contact's phone number or dial it directly from the keypad.*

## SEND AN E-MAIL MESSAGE FROM CALL HISTORY

To use this function, the E-mail address of the person you are sending an E-mail to must be included in their contact information card.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Call History** and press **OK**.
- 3 Select the contact you want to send an E-mail message to and press **[Menu]**.
- 4 Scroll to **E-mail** and press **OK**.
- 5 Select an E-mail account.
- 6 Compose the message and press **Send**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## MY STUFF

The My Stuff displays My Pictures, My Ringtones, My Videos, Notes, and Templates.

My Stuff's menu is same as File Explorer.



## CHAPTER 4

# VOICEMAIL & MESSAGING

This chapter addresses Voicemail, Text, Multimedia Message, Video and E-mail Messaging functions including:


- VOICEMAIL
- TEXT MESSAGING
- MULTIMEDIA MESSAGE
- E-MAIL

# VOICEMAIL

Voicemail is available at all times. When you call your voicemail the messages will be played back in the order they were received. You will have options to save, delete, replay, or skip each message.

## ● CALL YOUR VOICEMAILBOX

Retrieving your voicemail is simple and can be accessed directly from the Home screen.


- 1** On the Home screen, press and hold  to call your voicemailbox.
- 2** Follow the instructions to retrieve it.

# TEXT MESSAGING

You can create a text message, delete a text message, or clear all text messages. Contacts from the contact list can be used to send messages just as they can be used to make calls.

## CREATE A TEXT MESSAGE

The Pantech duo™ allows you to create text messages quickly. You create a text message by typing in a phone number or by selecting a contact first.


- 1 On the Home screen, press the left soft key  **[Start] [All Programs]** select **Messaging** and press **OK**.
- 2 Select **Message** and press **OK**.
- 3 Press the right soft key **[Menu] [New]** **[Text Message]**.
- 4 In "To", enter text message recipient's phone numbers. Insert a semicolon (;) between multiple text message recipient's phone numbers.
- 5 Press **Down** navigation key, and compose message you want to send.
- 6 Press **[Send]**. Text messages are sent immediately.

## TIP

*You can quickly enter text message numbers from your contact cards. In To, press **[Menu]** and select 'Add Recipient' from the list. Then, select the recipient's phone number. To cancel a message, Press **[Menu] [Cancel Message]**.*

## DELETE ALL MESSAGES

To clear all messages in a folder, you will need to show all the folders and select the folder you want.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]** select **Messaging** and press **OK**.
- 2 Select **Messages** and press **OK**.
- 3 Press **[Menu]**, then select **Folders**.
- 4 Press **[Menu]** then select **Show all Folders**.
- 5 Select the folder with the messages you want to delete.
- 6 Press **[Menu] [Clear Messages]**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15


16

# MULTIMEDIA MESSAGE

Multimedia Messaging Service allows you to send multimedia messages to others, which can include text, graphics and ring tones in a message.

## CREATE A MULTIMEDIA MESSAGE

Creating a Multimedia message is simple and you can add images or attachments to the message.

- 1 On the Home screen, press the left soft key  **[Start]** **[All Programs]**, select **Messaging** and press **OK**.
- 2 Select **Message**, press **OK**, then press **[Menu]** **[New]** **[Multimedia Message]**.
- 3 Enter an e-mail address or phone number.
- 4 Input a subject of this Multimedia message.
- 5 Input text message in text box.
- 6 To add an image, press **[Menu]** **[Add Item]** and press **OK**, then select Image.
- 7 Select an image from Picture file browser and the image is added to the Multimedia message.
- 8 Press the left soft key **[Send]** to send message.

If Multimedia message was sent successfully, a 'Message sent successfully' dialog will appear.

## TIP

*You can quickly enter Multimedia message numbers from your contact cards. In To, press **[Menu]** and select 'Add recipient' from the list. Then, select the recipient's phone number. To cancel a Multimedia message, just press **[Menu]** **[Cancel Composer]**.*

## TEXT BOX

Enter the text that you wish to send. English and Spanish languages are supported.

## MULTIMEDIA MESSAGE MENU OPTIONS

The Menu supports advanced MMS composer option.

Menu option	Description
<b>Preview</b>	Press <b>[Menu]</b> <b>[Preview]</b> . Preview is displayed when Multimedia message has content (image, sound, text or video). Preview is not displayed when message is empty.

# MULTIMEDIA MESSAGE

Menu option	Description
<b>Add Recipient</b>	<p>You can add recipients in various ways to select the recipient address from Contact list or Photo Album.</p> <p>Press <b>[Menu] [Add Recipient]</b> to select the recipient address from Contact list or Photo Album.</p> <p>Press <b>[Menu] [Add Recipient] [Contacts]</b>: add a contact from Contact list.</p> <p>Press <b>[Menu] [Add Recipient] [Multi Contacts]</b>: add multiple contacts from Contact list at once.</p> <p>Press <b>[Menu] [Add Recipient] [Photo Album]</b>: add Photo Album.</p> <p>Press <b>[Menu] [Add Recipient] [Bcc]</b>: show Bcc field to add recipients in Bcc field.</p> <p>Press <b>[Menu] [Add Recipient] [Cc]</b>: show Cc field to add recipients in Cc field.</p>
<b>Check Name</b>	<p>Press <b>[Menu] [Check Name]</b>, convert phone number to corresponding name, if that number is registered in contact list.</p>

Menu option	Description
<b>Add Item</b>	<p>You can add content such as text, image, sound, video, vCard, vCalendar, and Attachments.</p> <p>Press <b>[Menu] [Add Item] [Text]</b>: enter a text message in the text box.</p> <p>Press <b>[Menu] [Add Item] [Image]</b>: select image file from My Pictures.</p> <p>Press <b>[Menu] [Add Item] [Sound]</b>: select sound file from My Documents.</p> <p>Press <b>[Menu] [Add Item] [Video]</b>: select video file from My Videos.</p> <p>Press <b>[Menu] [Add Item] [vCard]</b>: select a vCard.</p> <p>Press <b>[Menu] [Add Item] [vCalendar]</b>: select a vCalendar.</p> <p>Press <b>[Menu] [Add Item] [Attachments]</b>: select any file from all of memory.</p>

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



# MULTIMEDIA MESSAGE

Menu option	Description
<b>Create Item</b>	<p>You can add a picture, video or sound from Camera and Voice Note.</p> <p>Press <b>[Menu] [Create Item] [Picture]</b>: Take a picture with Camera and add it to Multimedia message.</p> <p>Press <b>[Menu] [Create Item] [Video]</b>: Record a video with Camcorder and add it to Multimedia message.</p> <p>Press <b>[Menu] [Create Item] [Sound]</b>: Record a Voice Note and add to Multimedia message.</p>
<b>Template</b>	<p>You can add current components as a template, or replace with previous saved templates.</p> <p>Press <b>[Menu] [Template] [Add Template]</b>: Replace current components with previous saved components.</p> <p>Press <b>[Menu] [Template] [Save as template]</b>: Save current components as a new template.</p>
<b>Remove Item</b>	<p>You can remove content such as image, sound, text and video.</p> <p>Press <b>[Menu] [Remove Item]</b>.</p>

Menu option	Description
<b>My Text</b>	<p>Press <b>[Menu] [My Text]</b>. You can add predefined text messages to text field.</p>
<b>Priority Level</b>	<p>You can set the importance of Multimedia Message.</p> <p>Press <b>[Menu] [Priority Level] [High]</b>: set Multimedia Message to be important.</p> <p>Press <b>[Menu] [Priority Level] [Normal]</b>: set Multimedia Message to be normal.</p> <p>Press <b>[Menu] [Priority Level] [Low]</b>: set Multimedia Message to be low.</p>
<b>Page Layout</b>	<p>You can set the layout of Multimedia Message in preview.</p> <p>Press <b>[Menu] [Page Layout] [Image Top]</b>: place image on top and text to below in preview.</p> <p>Press <b>[Menu] [Page Layout] [Text Top]</b>: place text to top and image to below in preview.</p>


# MULTIMEDIA MESSAGE

Menu option	Description
Options	<p>You can set the importance of Multimedia Message.</p> <p>Press <b>[Menu] [Options] [Insert Page]</b>: insert a new page at current page.</p> <p>Press <b>[Menu] [Options] [Delete Page]</b>: delete current page.</p> <p>Press <b>[Menu] [Options] [Move Page]</b>: change the order of current page.</p> <p>Press <b>[Menu] [Options] [Duration]</b>: set durations between pages.</p> <p>Press <b>[Menu] [Options] [Multimedia Msg. Options]</b>: set properties of Multimedia Message such as profile, default edit mode, etc.</p> <p>Press <b>[Menu] [Options] [Per Msg. Setting]</b>: set properties of per message such as delivery report, read report, etc.</p> <p>Press <b>[Menu] [Options] [About]</b>: show information about Multimedia Message client.</p>
Save	Press <b>[Menu] [Save]</b> : Save Multimedia Message in draft folder. Back to Inbox.

Menu option	Description
Cancel Composer	Press <b>[Menu] [Cancel Composer]</b> : Cancel Multimedia Message Back to Inbox.

## VIEW MULTIMEDIA MESSAGE


To view Multimedia Message, simply select Multimedia Message from the Messaging menu and you will see a list of Inbox messages.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**, select **Messaging** and press **OK**.
- 2 Select Multimedia Message which you want to see for list of Inbox messages.
- 3 Press **OK** to play selected message.

# MULTIMEDIA MESSAGE

## ● SELECT MULTIMEDIA MESSAGE IN THE LIST OF MESSAGE TYPE


After selecting Multimedia Message from the Messaging menu, you will use the Menu button to step through each field that is available when composing a message.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]**, select **Messaging** and press **OK**.
- 2** Press **[Menu] [Reply]** to send a reply Multimedia Message to new receiver and “CC”, “BCC”.
- 3** Press **[Menu] [Reply all]** to send a reply Multimedia Message to all senders. Open Multimedia Message editor and display “To” field with “RE”: all sender addresses including “CC”, “BCC” sender.
- 4** Press **[Menu] [Forward]** to forward Multimedia Message, Open Multimedia Message editor.
- 5** Press **[Menu] [Save]** Save to save address to phonebook.

- 6** Press **[Menu] [Details]** to show detailed information about current Multimedia Message, such as message size, sender.
- 7** Press **[Menu] [Delete]** to delete current message in the inbox list.
- 8** Press **[Menu] [Back]** to terminate Multimedia Message viewer and go back to the Inbox message list.

## ● CHANGE MESSAGING ACCOUNT OPTIONS


Multimedia Message, E-mail and text messages can be displayed differently and you can select from many options for each.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]**, select **Messaging** and press **OK**.
- 2** Select Messages or E-mail account and press **OK**.
- 3** Press **[Menu] [Tools] [Options]**.
- 4** Select the type of options to change.
- 5** Press **[Done]**.

# MULTIMEDIA MESSAGE

## ● CHANGE HOW THE MESSAGE LIST DISPLAYS

You can change the order in which messages are displayed and show the date and time that messages were received.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**, select **Messaging** and press **OK**.
- 2 Press **[Menu] [Tools] [Options] [Display]**.
- 3 Change the display options and press **[Done]**.

## ● CREATE A MESSAGE FROM A CONTACT CARD

Just as you can make phone calls from a contact card, you can select a contact and send a message from the contact card.

- 1 On the Home screen, press **[Start] [All Programs]**, select **Contacts** and press **OK**.
- 2 Select a contact.
- 3 Select the messaging address or phone number to use.
- 4 Select the account to use and press **OK**.

- 5 Use left soft key that displays corresponding action, or press right soft key **[Menu]** and select the message you want to use. Ex) **'Send Text Message' 'Send Multimedia Msg.'**

- 6 A new message opens ready for you to complete and send.

### ! TIP

*To cancel a message, press **[Menu] [Cancel Composer]**.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

The Pantech duo™ allows you to send e-mails with several options. You can copy, blind copy, set priority, and store e-mails just as you would from a computer. The Pantech duo™ uses Outlook as the default mail program.

You can send and receive e-mail messages in one of these ways:

- Synchronize e-mail messages with Microsoft Exchange or Microsoft Outlook on your PC.
- Send and receive e-mail messages by connecting directly to an e-mail server through an Internet Service Provider (ISP) or a network.

## ● SYNCHRONIZING E-MAIL MESSAGES

Use the Outlook E-mail account to send and receive e-mail messages by synchronizing e-mail messages with Microsoft Exchange or Microsoft Outlook on your PC. E-mail messages can be synchronized as part of the general synchronization process. You will need to enable Inbox synchronization in ActiveSync.

## ● DURING SYNCHRONIZATION:

- Messages are copied from the mail folders of Exchange or Outlook on your PC to the **Outlook E-mail** folders on your phone.

- E-mail messages in **Outlook E-mail** on your phone are transferred to Exchange or Outlook, and then sent from those programs.

## ● CONNECTING DIRECTLY TO AN E-MAIL SERVER

You can send and receive e-mail messages by connecting to an e-mail server. You'll need to set up a remote connection to a network or an ISP, and a connection to your e-mail server. When you connect to the e-mail server, new messages are downloaded to the phone's Inbox folder. Also messages in the phone's Outbox folder are sent, and messages that have been deleted on the e-mail server are removed from the phone's message folders.

## ● FOLDER BEHAVIOR WITH A DIRECT CONNECTION TO AN E-MAIL SERVER

The behavior of the folders you create depends on whether you are using POP3 or IMAP4.

- If you use POP3 and you move e-mail messages to a folder you created, the link is broken between the messages on the phone and their copies on the mail server. The next time you connect, the mail server will see that the messages are missing from the phone and

delete them. This prevents you from having duplicate copies of a message, but it also means that you will no longer have access to messages that you move to folders created from anywhere except the phone.

- If you use IMAP4, the folders you created and the e-mail messages you moved are mirrored on the server. Therefore, messages are available to you anytime you connect to your mail server. This synchronization of folders occurs whenever you connect to your mail server, create new folders or rename/delete folders when connected.

## ● CREATING AN E-MAIL ACCOUNT

You need to create a new account to be used for retrieving and sending e-mail messages.

### TO MAKE A NEW ACCOUNT:

- 1** From the main **Messaging** screen, select **New E-mail Account**.
- 2** Enter your E-mail address. If you want to set up your account automatically from the Internet, select **Try to get e-mail settings automatically from the Internet**. And press Next soft key.

- 3** If it couldn't find setting, press the **Next** soft key.
- 4** Select your e-mail provider, one or both of Internet e-mail or Exchange server.
- 5** Enter your display name and press the **Next** soft key.
- 6** Enter your **Incoming mail server** and select **Account type** and press the Next soft key.
- 7** Enter your user information, such as user name, password, and press the **Next** soft key.
- 8** Enter the **Outgoing (SMTP) mail server** names and press the **Next** soft key.
- 9** Select how often your phone automatically connects to the server and checks for incoming e-mails.
- 10** Press the **Finish** soft key.

### TO EDIT AN ACCOUNT:

- 1** From the main **Messaging** screen, scroll to the account you want.
- 2** Press the **Menu** soft key and select **Settings**.
- 3** Change the account settings as you would when creating it.

01

02

03

04

05

06

07

08

09

10

11

12

13


14

15

16

## ● CREATE AN E-MAIL MESSAGE

You can create an e-mail message from a contact card, or by typing in the address.

- 1 On the Home screen, press left soft key  [Start] [All Programs], select **Messaging** and press **OK**.
- 2 Select the e-mail account with which you want to send.
- 3 Press right soft key [Menu] [New].
- 4 In To, Cc, and/or Bcc, enter recipient's e-mail addresses. Insert a semicolon (;) between the multiple addresses.
- 5 In **Subject**, enter a subject.
- 6 Enter a message.
- 7 Press **Send**. E-mail messages are stored in Outbox and are sent to recipients the next time you synchronize or connect to your e-mail server and send and receive mail.

## ! TIP

*You can quickly enter e-mail addresses from your contact cards. In To, press **ENTER** and select a recipient from the list. Then, select the recipient's e-mail address.*

*To set the priority, press [Menu] [Message Options].*

*To cancel an E-mail message, press [Menu] [Cancel Message].*

## ● OVERVIEW OF E-MAIL SECURITY

You can help prevent impersonation, tampering, and eavesdropping when sending e-mail messages from your Outlook e-mail account by using Secure Multipurpose Internet Mail Extensions (S/MIME) digital signatures and encryption.

A signature helps prevent impersonation and tampering. Impersonation occurs when a hacker sends e-mail messages and pretends to be someone else. Tampering occurs when a hacker intercepts your e-mail messages and changes the message without the recipient's knowledge.

Signing a message applies the sender's certificate (and public key) to the message. This proves to the recipient that the message is from the sender and not from an imposter.

Encryption helps prevent eavesdropping, which occurs when a hacker intercepts and reads your e-mail messages. Using a cryptographic message format such as S/MIME for encryption helps improve e-mail privacy because it converts plain, readable text of the message into cipher (scrambled) text. The sender's messaging program uses the recipient's public key to encrypt (lock) the e-mail message and attachments. Only the recipient who has the private key that matches the public key you used to encrypt the message can decipher (unscramble) the message.





A certificate is a digital means of proving your identity. When you send a digitally signed message, you are sending your certificate and public key. Certificates can expire or be revoked.

#### NOTE

*S/MIME encryption and digital signatures for Windows Mobile-based devices are available only with Exchange Server 2003 Service Pack 2 or a later version that supports S/MIME. If you aren't using one of these products, or have not yet synchronized, these options are unavailable.*

### DOWNLOAD A COMPLETE E-MAIL MESSAGE

You can save e-mail messages and retrieve them at any time when you synchronize or connect to your mail server.

-  On the Home screen, press the left soft key  **[Start]** **[All Programs]**, select **Messaging** and press **OK**.
-  Select an e-mail account and the message to download.
-  Press **[Menu]** **[Download Message]**. The complete message is retrieved the next time you synchronize or connect to your e-mail server and send and receive e-mail.

### DOWNLOAD AN ATTACHMENT

In an open message with an attachment to download, press the attachment. The attachment is downloaded the next time you synchronize or connect to your e-mail server and send and receive e-mail.

#### NOTE

*If there are multiple attachments in the message, all attachments are downloaded.*

### MARK A FOLDER FOR SYNCHRONIZATION

When you synchronize your Outlook e-mail account with your PC, the same Inbox folders that are in Outlook on your PC are created on your phone.

01

02

03

04

05

06

07

08

09

10

11

12


13

14

15

16



- 1 On the Home screen, press the left soft key  [Start] [All Programs], select **Messaging** and press **OK**.
- 2 Select Outlook E-Mail.
- 3 Press [Menu] [Folders].
- 4 Press [Menu] [Show All Folders].
- 5 Press [Menu] [Manage Folders].
- 6 Select a folder to synchronize and press **Show Sync Folder**.
- 7 Press [Done]. The next time you synchronize, the folder(s) that you marked on your phone are synchronized with the corresponding folders in Outlook on your PC.

### ADD A PICTURE TO AN E-MAIL MESSAGE

You can retrieve pictures that have been downloaded to your phone and insert them into your e-mail messages.

- 1 In the message area of an e-mail message, press [Menu] [Insert] [Picture].
- 2 Select the picture you want to add.

### VERIFY THE DIGITAL SIGNATURE ON A SIGNED MESSAGE YOU RECEIVE

For additional security, you can check digital signatures on messages before opening them. In some cases, the signatures may not be available.

- 1 Open the message that has been digitally signed.
- 2 At the top of the message, press **View Signature Status**.
- 3 Press [Menu] [Check Certificate].

#### NOTE

*There can be several reasons why a digital signature is not valid. For example, the sender's certificate may have expired, it may have been revoked by the certificate authority, or the server that verifies the certificate is unavailable. Contact the sender to report the problem. S/MIME encryption and digital signatures for Windows Mobile-based devices are available only with Exchange Server 2003 Service Pack 2 or a later version that supports S/MIME. If you aren't using one of these products, or have not yet synchronized, these options are unavailable.*

## SEND AND RECEIVE INTERNET E-MAIL MESSAGES

Using the Pantech duo™ you can connect to the Internet to send and receive e-mails.

- 1 On the Home screen, press **[Start] [All Programs] [Messaging]**.
- 2 Select the Internet e-mail account for which you want to send and receive messages.
- 3 Press **[Menu] [Send/Receive]**. The phone connects to your Internet e-mail server and sends and receives your messages.

### NOTE

*To stop this process, press **[Menu] [Stop Send/Receive]**.*

## ADD A VOICE RECORDING TO AN E-MAIL MESSAGE

Inserting a voice recording is useful when you want to verbally explain information that is contained in the message.

- 1 In the message area of an e-mail message, press **[Menu] [Insert] [Voice Note]**.
- 2 Press **Record** and start speaking into the phone's microphone.
- 3 When finished speaking, press **Stop**.

**4** Press **[Done]**.

**5** Press **[Send]**.

## SET UP AN INTERNET E-MAIL ACCOUNT MANUALLY

Before you set up your Internet e-mail account, ensure that you have the necessary information.

Setting	Description
User name	Usually the first part of your e-mail address, which appears before the 'at' sign (@).
Password	Choose a strong password. You will have the option to save your password, so that you do not need to enter it each time you connect to your e-mail server.
Domain	The domain name. This may be required.
Server type	The type of e-mail server that hosts your mailbox (POP3 or IMAP4).
Account name	A name for this account. You must use a different name for each account that you set up.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16


# E-MAIL

Setting	Description
Network	The type of network your e-mail server connects to.
Incoming mail server	The name of your e-mail server (POP3 or IMAP4).
Require SSL connection	Select this to ensure you always receive e-mail for this account using an SSL connection. This enables you to receive personal information more securely. Please note that if you select this and your ISP does not support an SSL connection, you will not be able to connect to receive e-mail.
Outgoing mail server	The name of your outgoing e-mail server (SMTP).
Outgoing server requires authentication	Your outgoing e-mail server (SMTP) may require authentication. NOTE: Your user name and password from above will be used.
Outgoing server settings	Your outgoing e-mail server may require different authentication settings than your incoming e-mail server.

Setting	Description
Use different user name for outgoing server	Check box, where you enter a separate setting for your outgoing e-mail server..
User name	Your user name for the outgoing e-mail server.
Password	Your password for the outgoing e-mail server.
Domain	The domain name of the outgoing e-mail server.
Require SSL connection (Outgoing mail server only)	A connection that enables you to send personal information more securely. Note that if you select this and your ISP does not support an SSL connection, you will not be able to send e-mail.

## DELETE A MESSAGE

Messages from any account can be deleted. Select the Messaging function from the Home screen.

- 1 On the Home screen, press the left soft key  [Start] [All Programs], select **Messaging** and press **OK**.
- 2 Select an account.

**3** Select the message to delete.


**4** Press **[Menu] [Delete]**.

 **NOTE**

*Messages deleted from the Outlook E-mail account will be deleted from Outlook on your PC or Exchange Server the next time you synchronize.*

## ● DELETE AN ACCOUNT

You can delete accounts you have previously set up in the Messaging function.


**1** On the Home screen, press the left soft key  **[Start] [All Programs]**, select **Messaging** and press **OK**.

**2** Select an account.

**3** Press **[Menu] [Delete]**.

## ● EDIT PREDEFINED TEXT

You can edit the predefined text included with the phone to create words or phrases that you frequently use in messages.

**1** On the Home screen, press the left soft key  **[Start] [All Programs]**, select **Messaging** and press **OK**.

**2** Select an account.

**3** Press **[Menu] [New]** and scroll to the body of the message.

**4** Press **[Menu]** then select **My Text**.


**5** Press **[Menu]** then select **Edit My Text**.

**6** Select the text to edit.

**7** Edit the text and press **[Done]**.

## ● EMPTY THE DELETED ITEMS FOLDER

If you don't have a need to store deleted items, you can delete the Deleted Items folder itself.

**1** On the Home screen, press left soft key  **[Start] [All Programs]**, select **Messaging** and press **OK**.

**2** Select an account.

**3** Press **[Menu] [Tools] [Empty Deleted Items]**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## ● FORWARD A MESSAGE

When you have received a message, it is possible to forward the message to another account or user.


- 1 Select message, press **[Menu]** **[Reply]** **[Forward]**.
- 2 Enter a message in the message area.
- 3 Press **Send**.

### NOTE

*If you are forwarding e-mail from the Outlook e-mail account, you will send less data if you do not edit the original message. This may reduce data transfer costs based on your rate plan.*

## ● INSERT PREDEFINED TEXT INTO A MESSAGE

To save time when entering text, you can insert predefined text into messages.

- 1 On the Home screen, press the left soft key  **[Start]** **[All Programs]**, select **Messaging** and press **OK**.
- 2 Select an account and press **[Menu]** **[New]**.
- 3 Press **[Menu]** **[My Text]**.


- 4 Press the text you want to insert.

### TIP

*Quickly insert text by entering its associated number.*


## ● MARK A MESSAGE AS READ OR UNREAD

You have the option of marking messages you've received as Read or Unread for later retrieval.

- 1 On the Home screen, press the left soft key  **[Start]** **[All Programs]**, select **Messaging** and press **OK**.
- 2 Select an account.
- 3 Select the message to mark.
- 4 Press **[Menu]**.
- 5 Press **Mark as Read** or **Mark as Unread**. The message display is changed to reflect its new status: normal text for read messages and bold text for unread messages. When you synchronize or send and receive e-mail, the message is displayed as read or unread in all locations.

## ● MOVE A MESSAGE TO A DIFFERENT FOLDER

Whether a message is open or not, you can move it to another folder from any account.


- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**, select **Messaging** and press **OK**.
- 2 Select an account.
- 3 Scroll to the message to move.
- 4 Press **[Menu] [Move]**.
- 5 Press the folder into which to move the message.

### ! TIP

*You can move an open message in the same manner, by pressing **[Menu] [Move]**.*

## ● OPEN A MESSAGE

To review or use a message you open it from its account in the Messaging function.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**, select **Messaging** and press **OK**.

- 2 Select an account.
- 3 Select the message to open and press **OK**.
- 4 To return to the message list, press **Cancel** key.

### ! TIP

*To open the next message in the list from within an open message, press right Navigation Key; to open the previous message in the list, press left Navigation Key.*

*To create a contact card for the sender, press **[Menu] [Save to Contacts]**.*

## ● QUICKLY MOVE BETWEEN ACCOUNTS

Your messages are stored in accounts and it is convenient to be able to move from account to account quickly.

Do one of the following:

- If you have an account open, you can quickly switch to another account by pressing right or left Navigation Keys.
- Press **[Menu] [Switch Accounts]**.

01

02

03

04

05

06

07

08

09

10

11

12

13


14

15

16

## ● SEND A MESSAGE DRAFT

If you wish to have a message draft reviewed, you can retrieve a stored draft or an open draft and send it to someone else.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**, select **Messaging** and press **OK**.
- 2 Select an account.
- 3 Press **[Menu] [Folders]**.
- 4 Press **Drafts**.
- 5 When you have finished composing the message, press **Send**.

## ● REPLY TO A MESSAGE

You can reply to a message you've received easily from within an open message.

- 1 From an open message, press **[Menu] [Reply]** or **[Reply All]**.
- 2 Enter a message in the message area.
- 3 Press **Send**.

- 4 If you are replying to an e-mail in the Outlook E-mail account, you will send less data if you do not edit the original message. This may reduce data transfer costs based on your rate plan.

## ● SAVE A DRAFT OF A MESSAGE

You can save a draft of a message that you are composing to finish and send later.

- 1 While in a message you are composing, press **[Menu] [Save to Drafts]**.
- 2 A draft of the message is stored in the Drafts folder of the account you are in.

## ● SPECIFY THE LANGUAGE FOR READING A MESSAGE


The Pantech duo™ has many languages and character sets from which to choose. Each message can be composed in whatever language you require.

- 1 From an open message, press **[Menu] [Message Options] [Languages]**.
- 2 In E-mail message language, scroll to the language.

- 3 Press **[Done]**. The message is displayed using the appropriate characters for the selected language.

## ● STOP ADDING A SIGNATURE TO MESSAGES

If you have previously added a signature to an account and wish to stop using it, you can turn the signature off for that account.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**, select **Messaging** and press **OK**.
- 2 Select an account.
- 3 Press **[Menu] [Tools] [Option] [Signatures]**.
- 4 If necessary, scroll right or left to switch to the account that is using the signature.
- 5 Clear Use signature with this account and press **[Done]**. A signature is no longer inserted in messages that you send from this account.

## ● VIEW AN ATTACHMENT

Many e-mail messages come with attachments. You can view attachments for file types that are supported by the phone.


- 1 In an open message containing a downloaded attachment, select the attachment.

### NOTE

*You can view attachments only for file types that are supported by the phone. You may need to add third party software to view documents, spreadsheets, presentations and .pdf files.*

## ● VIEW MESSAGE FOLDER CONTENTS

You can store messages in folders and create the types of folders you need.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**, select **Messaging** and press **OK**.
- 2 Select an account.
- 3 Press **[Menu] [Folders]**.
- 4 Press the folder to view.
- 5 To return to the message list view of the Inbox folder, press **[Menu] [Folders Inbox]**.

### TIP

*To view all Outlook E-mail folders, including those not marked for synchronization, press **[Menu] [Show All Folders]**.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14


15

16



## VIEW THE INBOX MESSAGE LIST

Your messages reside in an inbox. You can review the messages stored in the inbox.

- 1 On the Home screen, press the left soft key  [Start] [All Programs], select **Messaging** and press **OK**.

- 2 Select an account.


- 3 The Inbox message list displays your received messages.

### ! TIP

*To quickly view new messages, press the message notification area on the Home screen.*

## VIEW THE LIST OF ACCOUNTS

If you have added accounts to your phone, you can see a list of all the accounts at one time.

- 1 On the Home screen, press the left soft key  [Start] [All Programs], select **Messaging** and press **OK**.

- 2 The list of accounts displays with the number of unread messages in the Inbox of each account shown in parentheses.

### ! TIP

*You can open an account by selecting it in the list.*

## WHAT IS SSL?

Secure Sockets Layer (SSL) is a security protocol that enables you to send personal information in a more secure manner over the Internet.

When you send a message from an account that you have with an Internet service provider (ISP) or from an account that you access using a VPN server connection (typically a work account), Messaging always tries to use an SSL connection. However, sometimes the e-mail server on the other end doesn't support SSL, so in order to send the message, it is sent without an SSL connection.

To ensure that your e-mail is always sent using an SSL connection or not at all, select '**Require SSL connection**' when you set up your e-mail account.



## CHAPTER 5

### ORGANIZER

- ALARM
- VOICE NOTE
- NOTEPAD
- CALCULATOR
- WORLD TIME
- TASKS

## ● USING THE ALARM

You can use the alarm clock to set a wake-up alarm or set an alarm to remind you of an appointment.

- 1** On the Home screen, press **Start > All Programs > More > Organizer > Alarm > OK**.
- 2** Select **Alarm1** or **Alarm2 > OK**.

### NEW Alarm registration


- Set Time, Alarm1(or 2), Sound, Type, and Volume
  - Alarm1 (or 2) time:** Time for wake-up alarm.
  - Alarm1 (or 2):** Alarm1 or 2 activation on/off.
  - Alarm1 (or 2) sound:** Choose an alarm melody.
  - Alarm1 (or 2) type:** Choose an alarm type.
  - Alarm1 (or 2) volume:** Adjust alarm volume.

# VOICE NOTE

In addition to making and receiving calls, scheduling and keeping contacts, the Pantech duo™ allows you to save your own reminders and messages in voice format.

## ● CREATE A VOICE NOTE

When you wish to create a voice note, after making the selections described here, you will speak into the microphone just as you would speak on a call.

- 1 On the Home screen, press the left soft key **[Start] [All Programs]**, then left soft key **[More...]** and select **Organizer** and select **Voice Note** and press **OK**.
- 2 Briefly press the left soft key  **[Record]** and speak into the microphone to record your voice note.
- 3 Press **[Stop]** to stop recording a voice note.
- 4 The voice note is recorded and appears in the All Notes list of Voice Note.

## ● LISTEN TO A VOICE NOTE

You can retrieve any voice notes you wish. When the voice notes were saved, they were recorded by time and category.

- 1 On the Home screen, press the left soft key **[Start] [All Programs]**, then left soft key **[More...]** and select **Organizer** and select **Voice Note** and press **OK**.
- 2 Select the voice note to play and press the right soft key **[Menu]** and press **[Play]**.
- 3 To stop listening to the voice note, press **[Stop]** while the voice note is playing.

## NOTE

*You can also play a voice note by selecting it in the All Notes list, then press **OK**.*

## ● DELETE A VOICE NOTE

After you have no further need for a voice note, you can delete the note completely from the phone.

- 1 On the Home screen, press the left soft key **[Start] [All Programs]**, then left soft key **[More...]** and select **Organizer** and select **Voice Note** and press **OK**.
- 2 Select the voice note to delete.
- 3 Press **[Menu]**, select **Delete** and press **OK**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15


16

## NOTE

*If you delete a voice note that has a default name, such as Recording001, this name becomes available for a new voice note.*

## RENAME A VOICE NOTE

You have the option of renaming a voice note, or assigning it to a different category.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]**, then left soft key **[More...]** and select **Organizer** and select **Voice Note** and press **OK**.
- 2** Select the voice note to rename.
- 3** Press **[Menu]** then select **Rename** and press **OK**.
- 4** Enter a new name.
- 5** Press **[Done]**.

# NOTEPAD

Using Notepad, you can create memos for important things, and manage them.

## TO ACCESS NOTEPAD

On the Home screen, press the **[Start] [All Programs]** soft key and select **[Organizer] [Notepad]**.

## CREATING A MEMO

- 1 Press the **New** soft key.
- 2 Enter the memo text and press the **Done** soft key.

## VIEWING A MEMO

To view memo details, select the memo you want from the list.

## SENDING A MEMO

You can send your notes as part of a SMS or e-mail message.

- 1 Scroll to the memo you want.

- 2 Press the **Menu** soft key and select **Send via E-mail** or **Send via Text Message**.

- 3 Compose and send a message.

## DELETING A MEMO

- 1 Scroll to the memo you want.
- 2 Press the **Menu** soft key and select **Delete**.
- 3 Press the **OK** soft key to confirm the deletion.

01

02

03

04

05

06

07

08

09

10

11

12

13


14

15

16

## ● USING THE CALCULATOR

Perform standard mathematical operations such as addition, subtraction, multiplication, and division.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]**, then left soft key **[More...]** and select **Organizer** and press **OK**.
- 2** Select **Calculator** and press **OK**.
- 3** Enter a number using the keypad.
- 4** Press the right soft key **Menu** and choose the type of calculation to perform and Equals to perform the operation, then click **OK**.

### **!** TIP

Press  to enter a decimal.

Use the Navigation Key to display the available mathematical symbols: up for plus (+), down for minus (-), right for division (/), and left for multiplication (x).

You can also press the # key to cycle through the operators to perform a calculation.

Press the Cancel key briefly to clear the last digit entered.

Press the left soft key **Clear** to clear the display.

## ● USING THE WORLD TIME

You can set up the world clock with the time zones you want, and then check the current time of the city you need at any time.

- 1** On the Home screen, press the left soft key **[Start] [All Programs]**, then left soft key **[More...]** and select **Organizer** and press **OK**.
- 2** Select **World Time** and press **OK**.
- 3** Select one of the three time zone, and press right soft key **[Menu] [Edit]**.
- 4** Press the **Left** or **Right** Navigation key to move the time zone line. To apply daylight savings to the currently selected time zone, press right soft key **[DST Off/On]**.
- 5** Press the **[Done]** soft key to save the selected time zone.
- 6** Repeat from step 3 to select another time zone.

### NOTE

*World Time Screen, press left soft key **[Local time]** to set this zone as local time.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15


16



# TASKS

## ● CREATE A TASK

The Pantech duo™ allows you to create a new task with reminders for your task list from your phone or from your PC.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]**, then left soft key **[More...]** and select **Organizer** and press **OK**.
- 2** Select **Tasks** and press **OK**.
- 3** In the **Enter new task here** box, enter the task name and press **OK**.


### NOTE

*You can synchronize information on your phone with your PC to keep your task list up to date in both locations.*

*If you create a new task with a reminder on your PC and then synchronize tasks with your phone, the reminder will play at the time it was set on your PC.*


## ● CHANGE A COMPLETED TASK TO INCOMPLETE

If you have marked a task as complete on your list and the status changes, you can easily go back to the task and change its status to incomplete by “activating” the task again.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]**, then left soft key **[More...]** and select **Organizer** and press **OK**.
- 2** Select **Tasks** and press **OK**.
- 3** Select the task and press **Activate**.

## ● ASSIGN A CATEGORY TO A TASK

The categories you can assign to a task are the same as those categories you've defined for appointments and contacts. You can also add categories from the Task menu.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]**, then left soft key **[More...]** and select **Organizer** and press **OK**.
- 2** Select **Tasks** and press **OK**.
- 3** Select **Categories** and check the category you want.
- 4** Press **[Done]**.



### NOTE

*A category will remain in the list of shared categories as long as it is assigned to at least one appointment, contact, or task.*

# TASKS


## ● DELETE A TASK

To remove a task from your list you will delete it. Marking a task as complete will not delete the task from your list.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**, then left soft key **[More...]** and select **Organizer** and press **OK**.
- 2 Select **Tasks** and press **OK**.
- 3 Select the task, and press the right soft key  **[Menu]**.
- 4 Select **Delete Task** and press **OK**.


## ● MARK A TASK AS COMPLETE

To designate a task as inactive or complete you will mark it as complete through the Tasks menu.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**, then left soft key **[More...]** and select **Organizer** and press **OK**.
- 2 Select **Tasks** and press **OK**.
- 3 Select the task, and press the left soft key **[Complete]**.

## ● LOCATE A TASK

There are many options for finding a task on your list; you can view and sort the entire task list, or filter the list by category.

- 1 On the Home screen, press the left soft key  **[Start] [All Programs]**, then left soft key **[More...]** and select **Organizer** and press **OK**.
- 2 Select **Tasks** and press **OK**.
- 3 In the task list, do one of the following:
  - To sort the list, press the right soft key **[Menu]**, select **Sort by** and press **OK**. Choose a sort option and press **OK**.
  - To filter the list by category, to sort the list, press the right soft key **[Menu]**, select **Filter** and press **OK**. Choose the category you want displayed.

### NOTE

*Categories only appear in Tasks that are synchronized with your PC.*

### TIP

*To filter your tasks further, press **Active Tasks** or **Completed Tasks**.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# MEMO

## CHAPTER 6

### AT&T MUSIC

This chapter addresses AT&T Music applications to play, buy, identify and join music communities.

- WINDOWS MEDIA PLAYER®
- SHOP MUSIC
- MUSIC ID
- XM RADIO MOBILE
- MUSIC VIDEOS
- THE BUZZ
- COMMUNITY

# WINDOWS MEDIA PLAYER®

This device comes with Microsoft® Windows Media Player® 10. You can play Windows® Media Audio, Windows Media Video, and MP3 audio files that are stored on your phone, on a memory card, or on the Web.

You can open Windows Media Player like this:

**1** On the Home screen, press the left soft key **[Start] [All Programs]** select **AT&T Music** and press **OK**.

**2** Select **Windows Media Player** and press **OK**.

 **NOTE**

*Content providers use a technology called Digital Rights Management (DRM), to encrypt the files. That makes some options unable to operate. The reason some digital media files are encrypted is to prevent these files from being unlawfully distributed or shared.*

## **COPYING MEDIA FILES**

You can use ActiveSync® to copy media files from a computer to your phone.

**1** Connect your phone to a computer.

**2** Start synchronization.

**3** Open the file directory on the phone using File

Explorer.

**4** Drag the media files and drop them into a folder.

Windows Media Player automatically retrieves. But, if the media files do not appear in Library, update the library by pressing the Windows Media Player's **[Menu]** and selecting **Update Library**.

You can also use the desktop Windows® Media Player® to copy media files. Licenses and protected files are copied. And also make sure that you have Windows® Media Player® 10 or later versions on your desktop computer. If you use different version of your Windows® Media Player®, the procedure to copy files may vary.

**1** Connect your phone to a computer.

**2** Start synchronization.

**3** Open Windows® Media Player® on the computer.

**4** Press the **[Sync]**.

**5** Press **[Edit Playlist]**.

**6** Select the media files.

**7** Press **[OK]**.

**8** Select the saving location.

**9** Select the quality level and press **[OK]**.

**10** Press **[Start Sync]**.

In order to access libraries, you should press the key of **[Menu]** from the player screen and then select **[Library]**. The library screen contains categories, such as My Music, My Videos, My TV and My Playlists.

From the library screen, press **[Menu]** and you can see following options:

- **Queue Up:** adds the selected file to the end of the current playlist.
- **Delete from Library:** deletes the selected file or all files from the library.
- **Now Playing:** opens the current playlist.
- **Library:** Allows you to select the library that you want to view.
- **Update Library:** adds new files to the library by searching your phone or a memory card.
- **Open File:** allows you to find and play files that are stored on your phone or a memory card, but those are not in the library.
- **Open URL:** allows you to specify a URL address for a streaming service.
- **Properties:** displays information about the selected file.

- **Player:** closes the Library screen and displays the player screen.

## ● PLAYING MEDIA FILES

If you have copied media files to your phone's memory or memory card, you can play them from Media Player.

### PLAYING MEDIA FILES FROM A LIBRARY

- 1** On the library screen, if necessary, press the **[Menu]** soft key, select **Library**, and select the memory from which you want to retrieve files.
- 2** Press the **[Menu]** soft key and select **Update Library**.
- 3** When libraries have been updated, press the **[Done]** soft key.
- 4** Select a category.
- 5** Scroll to the library you want to play and press the **[Play]** soft key.

If the file does not appear in a library, on the Library screen, press the **[Menu]** soft key and select **Open File**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

Then select the file you want to play. The player screen appears and the selected file plays. Use the following options during playback:

- To adjust the Windows Media volume, press the **Up** or **Down** key. You can view the volume level on the screen.
- To adjust the earpiece volume, press ▲ / ▼.
- To move backward in a file, press and hold the **Left** key.
- To move forward in a file, press and hold the **Right** key.
- To access the next file, press the **Right** key.
- To access the previous file, press the **Left** key.
- To pause or resume playback, press **OK**.
- To play the files in the playlist randomly or repeatedly, press the **[Menu]** soft key and select **[Shuffle/Repeat]** **[Shuffle]** or **[Repeat]**.
- To view the video on a full screen, press the **[Menu]** soft key and select **Full Screen**.
- To stop playback, press the **[Menu]** soft key and select **Stop**.

## PLAYING MEDIA FILES ON A NETWORK

- 1** On the **Library** screen, press the **[Menu]** soft key and select **Open URL**.

- 2** Enter a URL address in the **URL** field, or scroll to one of the URL address that you have used from the History field.
- 3** Press the **OK** soft key.

### **NOTE**

*To play media streaming, you must be connected to a network.*

## **SETTING UP A PLAYLIST**

You can add media files on the Library screen to a temporary playlist. It lists the currently playing file, as well as any files that have been queued up to play next.

## CREATING A PLAYLIST

- 1** On the library screen, select the category you want and scroll to the file you want to play. If the file does not appear on the list, press the **[Menu]** soft key and select **Update Library**.
- 2** Press the **[Menu]** soft key and select **Queue Up** to add the file to the playlist.
- 3** Repeat steps 1 and 2 to add more files.
- 4** Press to return to the player screen or **[Menu]** **[Player]**.

- 5 Press **OK** to start playing the files.
- 6 To save the playlist, press the **[Now Playing]** soft key and then the **[Menu]** soft key, and select **Save Playlist**.
- 7 Enter the list name and press the **Done** soft key. The list is saved in the My Playlists library.

## OPENING THE PLAYLIST

On the player screen, press the **[Now Playing]** soft key. You can use various options by pressing the **[Menu]** soft key.

## EDITING THE PLAYLIST

- To change the play order, press the **[Menu]** soft key and select **Move Up** or **Move Down**.
- To delete the selected files, press the **[Menu]** soft key and select **Remove from Playlist**.
- To clear the playlist, press the **[Menu]** soft key and select **Clear Now Playing**.

## CHANGING THE WINDOW MEDIA PLAYER SETTINGS

You can customize the appearance and functionality of Windows Media Player.

On the player screen, press the **[Menu]** soft key and select **Options**. You can use the following options:

- **Playback:** Select the options for playback. You can select the way time is displayed on the player screen, or whether or not to pause playback when you launch another program, and resume playback after a phone call.

- **Video:** Select the viewing options for playing videos on a full screen.

***Note:** If there is a problem while playing MP4 files, deselect the **Scale to fit window** option. The problem occurs because the file has been resized.*

- **Network:** Change the connections speed and protocol for playing music and streaming video.
- **Library:** Select whether the player screen or the Library screen is displayed when you open Windows Media Player.
- **Skins:** Change the appearance of the player screen by selecting a new skin.
- **Buttons:** Assign Windows Media Player functions to the keys on your phone to quickly control playback without having to use the menus.

01

02

03

04

05

06

07

08

09

10

11

12

13

14


15

16




# SHOP MUSIC

This menu connects to AT&T's music download site.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]** select **AT&T Music** and press **OK**.
- 2** Select **Shop Music** and press **OK**.

# MUSIC ID

This menu allows you to find out title, artist and other information about the song by just sending the sound of the song.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]** select **AT&T Music** and press **OK**.
- 2** Select **Music ID** and press **OK**.
  - **ID song!:** Allows you to find out information of unknown music by sending the sound of the unknown music to the web. If the web identifies the song, it displays relevant information about the song.
  - **Manage IDs:** Once a song has been identified through the Music ID, you can see the list of songs in this folder.
  - **Help me out:** Information for how to use this application.
  - **Exit:** Ends the application and exits.

## USING ID SONG!

- 1** Highlight **ID Song!** And press the **OK** key.
- 2** Place the handset's microphone up to the source of the song, which can be from either a radio, stereo, or headset. The handset then begins to analyze the audio signal. If a song match is found, the screen displays the Artist Name, Track Title, and Album cover art.
- 3** To purchase the song (with ringtone and wallpaper if available), highlight **get:**, and press the **OK** key.
- 4** To share the song ID with another user, highlight **Share ID** press the **OK** key. Enter the recipient's phone number and press the **Share ID!** Soft key. Within a short time, he will receive a message containing a Music ID link to the song.
- 5** If the song cannot be found, the handset displays a "Sorry, No Match Try Again!" message. Press the **New ID!** Soft key and try analyzing the song again.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## USING MANAGE ID'S

- 1 Highlight **Manage ID's** and press the **OK** key. The screen displays a list of the most recent successful song ID's which were made.
- 2 Highlight a song and press the **Options** soft key.
- 3 Highlight one of the following options and press the **OK** key.
  - **ID Info:** displays the Artist Name, Track Title, and Album cover art of the identified song.
  - **Delete ID:** deletes the selected song from the list of identified songs.
  - **New ID!:** begins the song analysis process again. Hold the microphone to the song source and wait for analysis.

## GETTING HELP WITH MUSIC ID

- 1 Highlight **help me out** and press the **OK** key to select a topic. The screen displays a list of helpful topics related to the Music ID application.

These topics cover:

- **IDing a Song:** provides information about the analysis process.
- **Recommendations and More!:** describes the process following the successful identification of a song. You can choose to purchase the song and wallpaper (if available) or send the Music ID as a link to another phone number.
- **Subscription:** provides details about the general usability and monthly term information.
- **About Music ID:** provides information about the Music ID software version.


## EXITING FROM THE MUSIC ID APPLICATION

There are two ways to exit from the Music ID application:

- 1 Highlight **exit** and press the **OK** key to select a topic.
- 2 Exit the application at any time by simply pressing the **END** key.

# XM RADIO MOBILE

Selecting XM Radio Mobile from the AT&T Music sub menu launches an application which allows the user to listen to streaming audio.

- 1** On the Home screen, press the left soft key  [Start] [All Programs] select **AT&T Music** and press **OK**.
- 2** Select **XM Radio Mobile** and press **OK**.

01

02

03

04

05

06

07

08

09

10

11

12

13


14

15

16

# MUSIC VIDEOS

Selecting Music Videos from the AT&T Music sub menu launches the browser to provide you with links to the most popular multimedia contents.

**1** On the Home screen, press the left soft key  [Start] [All Programs] select **AT&T Music** and press **OK**.

**2** Select **Music Videos** and press **OK**.


You are then taken to your CV Music homepage. This homepage provides you with several sections of accessible content:

- **Music:** allows you to choose from some recently uploaded video clips from the Music Choice channel, which can include news, cuts, and ringtone reports.
- **Music Channels:** provides some general content categories from which to begin searching for media: Sounds Live, Music Choice Premium, Music Videos, MTV, VH1, CMT, and Hip Hop Official.
- **Entertainment:** exits from the Music Videos section of the homepage and launches an entertainment page which provides further streaming multimedia content.
- **Cellular Video:** exists from the Music Video application and launches the Cellular Video homepage.
- **Media Net:** exists from the Music Video application and launches the Media Net homepage.
- **Help:** provides basic on-line assistance which answers most of the common issues users come across while this feature.

**3** Highlight the desired media clip or select from one of the available categories and press the **OK** key.

# THE BUZZ

Selecting The Buzz from the AT&T Music sub menu launches a preinstalled java application (e.g. Billboard). The application allows the user to obtain relevant music industry news and information about your favorite music artists, access to an artists main page (containing discographies, ringtones, concert dates, etc.), concert information, games, and setup options for your own personal billboard notifications.

- 1** On the Home screen, press the left soft key  [Start] [All Programs] select **AT&T Music** and press **OK**.
- 2** Select **The Buzz** and press **OK**.
- 3** Highlight **The Buzz** and press the **OK** key.
- 4** Press the **Trial** soft key to accept the terms of the trial period. You have only a few days to use the service before the trial period expires. If at any time you wish to purchase a subscription to this service, press the buy soft key and follow the on screen prompts.
- 5** Enter an area code, phone number (without dashes), and Zip code into the appropriate fields on the Customize screen. Use UP or DOWN Navigation key to switch between fields.

- 6** Press the **Confirm** soft key to accept and save your information.
- 7** Once the phone number has been successfully registered, press the **OK** soft key to continue onto the main Billboard mobile menu where you are given a list of categories to choose from:
  - **CHARTS:** provides you with a top 20 list of popular Ringtones, and tunes such as R&B/Hip Hop, Rock, Pop, Latin, Country, and Rap.
  - **NEWS & REVIEWS:** provides you with links to some of the latest news about your favorite artists.
  - **ARTISTS:** features a personalized artist web page for an available artist that includes a bio, discography info, ringtones, tour dates, etc.
  - **CONCERTS:** allows you to search for a concert by using either the artist name, venue, type, or city/state/zip information.
  - **GAMES:** allows you to use your keypad to play an entertainment-based guessing game by entering in names, dates, places.

01

02

03

04

05

06

07

08

09

10

11

12

13

14


15

16

## THE BUZZ

- **MY BILLBOARD:** allows you to refine your Billboard mobile experience by configuring your text message preferences, personal settings, and alerts.
- 8 Exit the application at any time by simply pressing the **END** key.

Selecting Community from the AT&T Music sub menu launches the browser to either one or more of the hot user communities. This menu allows you to interact with your friends and the community.

**1** On the Home screen, press the left soft key  [Start] [All Programs] select **AT&T Music** and press **OK**.

**2** Select **Community** and press **OK**.

**3** Use the UP or DOWN Navigation key to select a fan site and press the **OK** key.

- **Wallpaper:** provides you with color graphic files which can be used as a wallpaper on your handset. Highlight an entry and press **OK** key.
- **Photos:** allows you to view some artist-specific photos. Use the Next and Back buttons to navigate through these pages.
- **Bio:** provides a biographical description of the artist/band.
- **Artist Info:** provides more specific group member information.
- **Discography:** provides a description of the artist's albums and their corresponding release dates.

- **Tour Dates:** provides a listing of the artist's current tour dates.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



# MEMO

# CHAPTER 7


## AT&T MALL

This chapter addresses AT&T Mall applications to shop for Tones, Games, Graphics, Multimedia, and Accessing the Media Net Home site.

- SHOP TONES
- SHOP GAMES
- SHOP GRAPHICS
- SHOP MULTIMEDIA
- SHOP APPLICATIONS
- MEDIA NET HOME


# SHOP TONES

Selecting this menu launches the Web browser to AT&T's Tones menu.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]** select **AT&T Mall** and press **OK**.
- 2** Select **Shop Tones** and press **OK**.
- 3** Follow the on-screen options. The downloaded files can be stored into the **Main Memory** or **Storage Card** found within the My Stuff (Phone) location. Music Tone categories include:
  - Featured Artists
  - Answer Tones
  - Search for a specific audio file by name
- 4** Select an audio file and press the **OK** key.
- 5** When you are ready to purchase the audio file, press the **Buy Now** button to charge your e-wallet account and complete the transaction.

# SHOP GAMES

Selecting this menu launches the Web browser to AT&T's Game menu.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]** select **AT&T Mall** and press **OK**.
- 2** Select **Shop Games** and press **OK**.
- 3** Follow the on-screen options. The downloaded files can be stored in the **Java** folder found within the Applications menu. Categories include:
  - New Arrivals
  - Retro
  - 3D Games
  - Game Clubs
  - Search for a specific game by name
- 4** Select a game entry and press the **OK** key.
- 5** When you are ready to purchase the game, press the **Buy Now** button to charge your e-wallet account and complete the transaction.

01

02

03

04

05

06

07

08

09

10

11

12

13


14

15

16


## SHOP GRAPHICS

Selecting this menu launches the Web browser to AT&T's Graphics.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]** select **AT&T Mall** and press **OK**.
- 2** Select **Shop Graphics** and press **OK**.
- 3** Follow the on-screen options. The downloaded files can be stored in the **My Pictures** folder found within the My Stuff (Phone) location. These images can be used as wallpaper or included into multimedia messages.
- 4** Select an image entry and press the **OK** key.
- 5** When you are ready to purchase the image, press the **Buy Now** button to charge your e-wallet account and complete the transaction.

# SHOP MULTIMEDIA

Selecting this menu launches the Web browser to AT&T's Multimedia menu.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]** select **AT&T Mall** and press **OK**.
- 2** Select **Shop Multimedia** and press **OK**.
- 3** Follow the on-screen options. The downloaded files can be stored in the **My Videos** folder found within the My Stuff (Phone) location. These files can be included in multimedia messages.
- 4** Select a video file entry and press the **OK** key.
- 5** When you are ready to purchase the file, press the **Buy Now** button to charge your e-wallet account and complete the transaction.

01

02

03

04

05

06

07

08

09

10

11

12

13


14

15

16

# SHOP APPLICATIONS

Selecting this menu launches the Web browser to AT&T's Applications menu.

- 1** On the Home screen, press the left soft key  **[Start] [All Programs]** select **AT&T Mall** and press **OK**.
- 2** Select **Shop Applications** and press **OK**.
- 3** Follow the on-screen options. The downloaded apps. can be stored in the **My Stuff** folder found within the My Stuff (Phone) location. These files can be included in multimedia messages.
- 4** When you are ready to purchase the application, press the **Buy Now** button to charge your e-wallet account and complete the transaction.

The **MEdia Net Home** menu option allows you to quickly access your AT&T MEdia Net homepage using the built-in browser. This page gives you quick access to information such as local weather, sports scores, horoscope information and quick links to the previously mentioned shopping sites.

To access this menu option, use the following steps:

- 1** On the Home screen, press the **[Start] [All Programs]** select **AT&T Mall** and **MEdia Net Home**.
- 2** Press **OK** key.
- 3** The **MEdia Net Home** menu launches the built-in browser and launches this AT&T homepage.

01

02

03

04

05

06

**07**

08

09

10

11

12

13

14

15

16



# MEMO



## CHAPTER 8

# CELLULAR VIDEO

- MEDIA CLIP OPTIONS
- USING THE VIDEO CATEGORIES
- CUSTOMIZING CELLULAR VIDEO
- MY PURCHASES
- PARENTAL CONTROLS

# CELLULAR VIDEO

Your phone is equipped with a WAP (Wireless Application Protocol) browser which allows you to access Internet and then upload media files directly to your phone. These media files are displayed using the built-in Media Player. Cellular Video (CV) is a media service which allows you to not only navigate to your favorite web sites but stream media content (Weather, News/Sports highlights, etc.) directly to your phone.

- 1** On the Home screen, press the **[Start] [All Programs] [Cellular Video]**.
- 2** Press **OK**.
- 3** You are then taken to your default Cellular Video homepage. This homepage provides you with several sections of accessible content:
  - **Address Bar:** allows you to enter a new address.
  - **Favorites:** allows you to choose from some recently uploaded video clips from among the following media providers: CNN, ESPN, HBO Mobile Preview, or Access Hollywood.
  - **Add to Favorites:** allows you to add media websites to the Favorites list.

- **Video Categories:** provides some general content categories from which to begin searching for media: TV to Go, Entertainment, Sports, News & Weather, HBO Mobile, and Premium Channel.
  - **Customize Cellular Video:** allows you to access the Cellular Video Settings menu where you can configure most of the settings associated with Cellular Video.
  - **Parental Control:** provides you with settings which can be configured to restrict certain media content from being displayed on the phone.
  - **MEdia Net:** exits from the Cellular Video application and launches the MEdia Net homepage.
  - **Help:** provides basic on-line assistance which answers most of the common issues users come across while using this feature.
- 4** Highlight the desired media clip or select from one of the available categories and press the **Select** soft key or the **OK** key.

# MEDIA CLIP OPTIONS

With the media currently active on the phone (either playing or paused), press the **[Menu]** soft key to open a list of the following streaming media options.

## LIBRARY

This feature launches the Windows Media Library showing My Music, My Videos, My TV, My Playlists, and Now Playing.

## PLAY/PAUSE

This feature allows you to toggle the state of the current video between being Paused or Resuming playback.

## STOP

The feature stops the current media, exits the media player and returns you to the main Cellular Video homepage.

## SHUFFLE/REPEAT

This feature allows you to toggle between the shuffle or repeat options for your videos you have played and saved to your device.

## FULL SCREEN

This feature changes the screen content to remove or include the information regarding the soft key menu options or to display the video only. Press the key to switch between screen options.

## OPTIONS

The following options are available:

### ■ Playback

- Show time as: set the show time elapsed or remaining.
- Set the Pause playback while using another program to stop the video if you launch another program.
- Resume playback after a phone call to continue the video after your phone call is ended.

### ■ Video

- Play video in full screen: choose from Never, Only when oversized, or always.
- Scale to fit window: allows you to fit the picture to the screen.

### ■ Network

- Internet connection speed: choose the internet connection speed to download the videos.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# MEDIA CLIP OPTIONS

- Detect connection speed: sets the default speed the data connection allows.
- Protocol: select the UDP or TCP protocol, or the Port number.
- **Library:** allows you to start the player from the library screen.
- **Skins:** allows you to select the screen display (Skin) for your video clips. Use the Right or Left Navigation key to make your selection. Press **OK** to make your selection.
- **Buttons:** displays the buttons and their options for the media clip application.

## ● PROPERTIES

Displays a Media Player window which gives file specific information such as title, and duration.

## ● SETTINGS

This feature pauses the content and navigates you to the Player Settings menu where you can configure the Media Player's Volume setting.

- 1** Use the **Up** or **Down** Navigation key to increase/decrease the current volume setting for the player while in Portrait mode. Use your **Left** or **Right** Navigation key to increase/decrease the current volume setting for the player while in Landscape mode.
- 2** Press the Save soft key to save your changes.
  - This feature allows you to configure the current server profile being used by the on-board WAP.

# USING THE VIDEO CATEGORIES

This grouping of media categories provides access to an additional listing of streaming media. Where the previous Favorites list of media stream can be user edited and updated, this list of categories is defined by AT&T's homepage and cannot be changed.

## VIEWING A VIDEO CLIP

- 1** From the **Home** screen, press the **[Start] [All Programs]** soft key. Highlight **Cellular Video** and press the **OK** key.
- 2** Use the **Up** or **Down** Navigation key to highlight the video clip from within the Favorites section and press the **Select** soft key or the **OK** key.
- 3** After the stream has been buffered into memory, you can choose to either **Pause** or **play** the content. Pressing the **OK** key toggles the **Play** and **Pause** functionality.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# CUSTOMIZING CELLULAR VIDEO

## ● UPDATING THE FAVORITES LIST

The list of media providers which appears in the Favorites section of the Cellular Video homepage can be edited and changed by the user.

- 1** From the **Home** screen, press the **[Start] [All Programs]** soft key. Highlight **Cellular Video** and press the **OK** key.
- 2** Use the **Up** or **Down** Navigation key to highlight the **Edit** button from the upper-right of the homepage (adjacent to the **My Favorites** title) and press the **OK** key.
- 3** From the **Customize Cellular Video – Options** listing, highlight **Edit My Favorites** and press the **OK** key.
- 4** Navigate to the **Add to Favorites** section of the page and highlight one the additional streaming media channels which are not currently in your Favorites list (ex: Cartoon Network).
- 5** Press the **Options** soft key. Highlight **Add to Favorites** and press the **Select** soft key or the **OK** key.

## ● ADDING A VIDEO ALERT

When new media is available for upload to your phone (such as breaking news), you can set your phone to notify you of the new available content.

- 1** From the **Home** screen, press the **[Start] [All Programs]** soft key. Highlight **Cellular Video** and press the **OK** key.
- 2** Use the **Up** or **Down** Navigation key to highlight the **Customize Cellular Video** button from the bottom of the homepage and press the **Select** soft key or the **OK** key.
- 3** From the **Customize Cellular Video – Options** listing, highlight **My Video Alerts** and press the **OK** key.
- 4** Navigate to the **Add to My Alerts** section of the page and highlight one the available services (ex: Breaking News).
- 5** Press the **Options** soft key. Highlight **Add to Favorites** and press the **OK** key.

## MY PURCHASES

The Cellular Video homepage can be used to shop for streaming multimedia content. The **My Purchases** section can help keep track of your purchase history and view any new resale products.

- 1** From the **Home** screen, press the **[Start] [All Programs]** soft key. Highlight **Cellular Video** and press the **OK** key.
- 2** Use the **Up** or **Down** Navigation key to highlight the **Customize Cellular Video** button from the bottom of the homepage and press the **OK** key.
- 3** From the **Customize Cellular Video – Options** listing, highlight **My Purchases** and press the **OK** key.
- 4** Highlight **Purchase History** and press the **OK** key. This provides you with an on screen listing of your “to date” purchase history for media content.
- 5** Highlight **My Account** and press the **Select** soft key or the **OK** key. This provides you with an on screen description of your account details.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



# PARENTAL CONTROLS

Your phone can be configured to block both purchased and streamed media content. Before filtering, you must first establish a PIN/password and a contact e-mail address.

Once those have been established, you can choose one of the two available filter options: **Content Filter** and **Purchase Blocker**.

- **Content Filtering** let you restrict access to inappropriate content both on and outside of MEdia Net.
- **Purchase Blocking** lets you restrict the ability to buy ringtones, downloads, games, etc., from this phone.

## ● SETTING UP PARENTAL CONTROL

- 1** From the **Home** screen, press the **[Start] [All Programs]** soft key. Highlight **Cellular Video** and press the **OK** key.
- 2** Use the **Up** or **Down** Navigation key to highlight the **Customize Cellular Video** button from the bottom of the homepage and press the **OK** key.
- 3** From the **Customize Cellular Video – Options** listing, highlight **Parental Controls** and press the **OK** key.

- 4** Highlight the **OK** button and press the **OK** key to access the MEdia Net parental setup fields.
- 5** From the **Parental Control Setup** screen, use your keypad to enter information into the following fields: **PIN Code**, **Re-enter PIN code**, contact **e-mail address**.
- 6** Use the Navigation keys to highlight the **Save** button and press the **OK** key. Allow a few minutes for your information to be received and accepted by MEdia Net. You can then use this information to activate the parental filters.

## ● CONFIGURING THE FILTERS

- 1** From the **Home** screen, press the **[Start] [All Programs]** soft key. Highlight **Cellular Video** and press the **OK** key.
- 2** Use the **Up** or **Down** Navigation key to highlight the **Customize Cellular Video** button from the bottom of the homepage and press the **OK** key.
- 3** Highlight the **OK** button and press the **OK** key.
- 4** When prompted, enter the PIN and e-mail address which was registered with MEdia Net in the previous section.

## PARENTAL CONTROLS

- 5 Highlight **Content Filters** and press the **OK** key.
- 6 Highlight the **On** button and press the **Select** soft key or the **OK** key to toggle the On/Off state.
- 7 Highlight **Purchase Blocker** and press the **Select** soft key or the **OK** key.
- 8 Highlight the **On** button and press the **Select** soft key or the **OK** key to toggle the On/Off state.
- 9 Press the **Back** soft key or the key. This activates.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# MEMO



## CHAPTER 9

### IM&E-MAIL, MOBIV, MEDIA NET, OFFICE MOBILE

- IM&E-MAIL
- MOBIV
- MEDIA NET
- OFFICE MOBILE

## IM&E-MAIL

### INSTANT MESSAGING

Your handset comes with the ability to sign onto Instant Messaging. You must first create an active account using your PC, and then you can connect and chat using the following applications:

- AOL Instant Messenger
- Windows Live Messenger
- Y! Messenger

**1** On the Home screen, press the **[Start] [All Programs] [More...]** **[IM & E-mail] [IM]**. Press the **OK** key.

## MOBITV

With MobiTV your phone becomes a portable TV. See channels you watch at home, made for mobile programming, and the latest primetime shows from NBC, like Friday Night Lights. The Emmy® Award winning service is available through your wireless carrier and offers over 100 TV channels worldwide, such as MSNBC, ABC News Now, CNN International, FOX News Channel, Fox Sports, ESPN 3GTV, NBC Mobile, Bravo To Go, Sci Fi Pulse Mobile, Telemundo Mobile, Discovery Channel, TLC, The Weather Channel and others that deliver the latest music videos, cartoons, comedy, and more.

**1** On the Home screen, press the **[Start] [All Programs] [More...]** **[MobiTV]**. Press the **OK** key.

For more information, connect to the web site.  
[www.mobitv.com](http://www.mobitv.com)

## **MEDIA NET**

See MEdia net home in Chapter 7. AT&T Mall.

## **OFFICE MOBILE**

### **DATA ANALYSIS ON THE GO**

View spreadsheets, even when you're out of the office. You can use the Chart Wizard to view Microsoft Office Excel Mobile charts on the go.

### **PRACTICE MICROSOFT POWERPOINT**

#### **PRESENTATIONS**

Practice and view your slides with Microsoft Office PowerPoint Mobile while you're on the road.

### **VIEW MICROSOFT WORD DOCUMENTS**

View Word documents while away from your desk.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# MEMO



## CHAPTER 10

# CAMERA

This chapter addresses picture and video functions including:

- TAKING, VIEWING AND EDITING PICTURES
- USING THE CAMERA
- USING THE CAMCORDER




# CAMERA / CAMCORDER MODE

Use the Camera program to take, view, and edit pictures as well as record and launch video clips stored on your device or on a storage card. You can also send pictures and video clips to others, or set a picture as the background in the Home screen. You can see your pictures individually, as thumbnails, or as part of a slide show. You can edit your pictures by cropping, rotating, and adjusting the brightness and contrast.

## SELECT VIDEO QUALITY

You can specify the quality (video resolution and sound fidelity) and size of the video clips you record.

- 1 On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **Camera**.
- 2 Press  key to change the mode to Camcorder.
- 3 Or press **[Menu]** and select **Camcorder**.
- 4 Select **Quality**, and then select the setting you want. Select **OK**.

## NOTE

*Video clips of higher quality require more memory.*

## COPY AN IMAGE TO YOUR PHONE

You can upload standard image files from a PC to your phone. You should customize the size and resolution of your images for display on the phone screen.

- 1 Connect the phone to your PC.
- 2 On your PC, copy the image file you want. The file format must be .gif, .jpg, or .bmp.
- 3 In ActiveSync on your PC, click Explorer and double-click My Windows Mobile-Based Device.

Do one of the following:

- Double-click My Documents, double-click My Pictures, and paste the image file into that folder.
- If you plan to use the image as your Home screen background, double-click **Application Data**, double-click Home, and paste the image into that folder.

## NOTE

*For best results, use images with the same screen resolution as your phone's screen resolution, either 240 x 320 pixels, or 176 x 200 pixels, depending on the phone. See also, 'Change the Home screen appearance'.*

## TAKE PICTURES USING A TIMER

Using the timer, you can be in the picture you take. Just place the phone on a stable support and press the camera button, then get into position.

**1** On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **Camera**.

**2** Press **[Menu]** and select **Camera**.

**3** Select **Self-Timer**, and then select the setting you want.

**4** After the timer interval, the picture is taken and automatically saved to the default storage location.

## TIP

*Take a test picture to find out how long the timer runs.*

## ADJUST PICTURES AND VIDEO FOR LIGHTING CONDITIONS

White balance settings optimize pictures and video clips for the type of ambient light. If you are not sure what to select, try the Automatic setting.

**1** Select a **White balance** setting that matches the available light source.

## SELECT WHERE PICTURES ARE SAVED

You can set the default location where pictures are saved. If you select main memory, pictures are saved to permanent storage on your device, which may require that you consider the storage needs of other programs.

**1** Press **[Menu]** and select **OK**.

**2** Select **Storage**, and then select the setting you want.

## CREATE A PICTURES FOLDER

You can organize and store your pictures and images in separate folders you will create.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## CAMERA / CAMCORDER MODE

- 1 On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **File Explorer**, select **My Pictures**.
- 2 Press **[Menu] [Edit] [New Folder]**.

### EDIT A PICTURE

You can actually edit pictures and videos on the Pantech duo™ using the Menu key.

- 1 On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **File Explorer**, select **My Pictures**.
- 2 Select the picture to edit, and press **OK**.
- 3 Press **[Menu] [Edit]** and press **OK**.

Do one of the following:

- To rotate a picture 90 degrees counterclockwise, press **[Menu] [Rotate]**.
- To crop a picture, press **[Menu] [Crop]**. Then, position the selection cursor to mark the upper left corner of the picture, press **[Next]**, and then position the cursor to mark the lower right corner of the picture. Press **[Finish]** to see the cropped picture.

- To auto correct a picture, press **[Menu] [Auto Correct]**.
- Press **[Done]**.

### TIP

To undo an edit, press **[Menu] [Undo]**.  
To cancel all unsaved edits made to the picture, press **[Menu] [Cancel]**.

### VIEW PICTURES AS A SLIDE SHOW

However you have stored the pictures and videos, you can review them consecutively in a slide show format.

- 1 On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **File Explorer**, select **My Pictures**.
- 2 Select the picture.
- 3 Press **[Menu] [Play Slide Show]**.

### TIP

To stop the slide show, press the **Cancel** button. You can also rotate the view using up and down navigation keys. To move forward or backward through the slides, press left and right Navigation Keys.

**● SET A PICTURE AS THE HOME SCREEN**

Any picture you have uploaded can be saved as the background for the Home screen.

- 1** On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **File Explorer**, select **My Pictures**.
- 2** Select the picture to set as the background, and press **OK**.
- 3** Press **[Menu] [Use as Home Screen]**.
- 4** Use Navigation Keys to select the portion of the picture you want to use, and press **[Next]**.
- 5** Use Adjust the transparency to select a higher percentage for a more transparent picture or a lower percentage for a more opaque picture.
- 6** Press **[Finish]**.

**● SEND A PICTURE VIA MULTIMEDIA MESSAGE**

You can attach pictures to messages and send them to someone else.

- 1** On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **File Explorer**, select **My Pictures**.
- 2** Select the picture to send.
- 3** Press **[Menu] [Send via Multimedia Msg.]**.
- 4** A new message is created with the picture attached.
- 5** Enter the recipient's name and subject, and press **[Send]**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## ● SAVE A COPY OF A PICTURE

Store pictures in your phone by saving them to a pre-created folder.

- 1** On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **File Explorer**, select **My Pictures**.
- 2** Select the picture to save and press **OK**.
- 3** Press **[Menu] [Save] [Save As...]**.
- 4** Enter a name for the picture and press **[Done]**.

### ! TIP

*To cancel all unsaved changes, press **[Cancel]** soft key.*

## ● VIEW PICTURES ON YOUR PHONE

You can view pictures stored on your phone or on a plug-in storage card.

- 1** On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **File Explorer**, select **My Pictures**.
- 2** Select the picture and press **OK**.

### ! TIP

*To view pictures located on a storage card, press **[Start]**, **[More...]** select **Applications** and select **File Explorer**, select **My Pictures**. Press **[Menu] [Storage Card]**. (You may need to scroll to view this option.)*

# CAMERA / CAMCORDER OPERATIONS

## CAMERA



- Supports JPEG File Format (jpg)

## VIDEO

- Supports QCIF(176x144), QVGA (320x240) size of video
- Supports 3gp File Format (3gp)

## RECORD A VIDEO




By using the camera function, you can take pictures or you can record video by selecting the Camcorder option.

- 1 On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **Camera** and press **OK**.
- 2 Press  on the keypad. The first left icon in upper Menu bar changes to Camcorder icon .
- 3 Aim your camera and press **OK**.
- 4 To stop recording, press **OK** again or **[Stop]** soft key.

- 5 You can see the first frame of recording file. Press **OK** or **[View Finder]** soft key to preview, select **[Menu] [Delete]** is delete the recording file just now, and **[Menu] [Send Via Multimedia Msg.]** that is attached to Multimedia message.

## PLAY RECORDED FILE

After you've recorded and stored a video file, you can retrieve it at any time and play it back on the phone.

- 1 Press  on the keypad. The first left icon in upper Menu bar changes to Camcorder icon .
- 2 Press left soft key  **[My Video]**.
- 3 Choose the file that you want to play, and press **OK**.

## TAKE A PICTURE

- Supports 176x144, 320x240, 640x480, 1280x024 size of video
- Stored JPEG file format (jpg)
- You can choose low, medium or high quality.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15



16

## ● TAKE A PICTURE (MULTISHOT)

- Supports maximize resolution of 176x44, 320x240
- Supports multi still shot. Maximum of 9 shots




## ● SNAPSHOT

To take a quick picture, you will use the snapshot feature of the phone. After taking a picture, you can store it, delete it, or forward it.

- 1** On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **Camera** and press **OK**.
- 2** Press  on the keypad. The first left icon in upper Menu bar changes to picture icon .
- 3** Aim your camera and press **OK**.
- 4** Change camera screen to review screen.
- 5** Press **OK** or **[View Finder]** soft key to return to preview, select **[Menu] [Delete]** to delete the captured file, and **[Menu] [Send Via Multimedia Msg.]** to attach to Multimedia Message.

## ● VIEWING SAVED FILE

After a file has been saved, it is very simple to view the saved file from the **My Photo** feature.


- 1** Press  on the keypad. The first left icon in upper Menu bar changes to picture icon .
- 2** Press left soft key  **[My Photo]**.
- 3** Choose the file that you want to view, and press **OK**.

# CAMERA / CAMCORDER CONTROLS

Just as with an ordinary camera, your phone can be adjusted to control the brightness, color, resolution, etc. From the Menu you have access to all the image parameters you will want to adjust.

## CAMERA MENU

The menu is reached after selecting Camera from the Home screen and gives you access to these parameters: storage, balance, white balance, and color effect.

- 1 On the Home screen, press **[Start]** **[All Programs]** **[More...]**, select **Applications** and select **Camera** and press **OK**.
- 2 Press right soft key  **[Menu]**.
- 3 Change values using Navigation Keys.
- 4 Press **OK** to apply the chosen values.

Item	Description
<b>Take Mode</b>	Choose Take Mode in list. Change Multi Shot mode. Resolution must be 176 X 144, 320 X 240 on Multi Shot mode.

Item	Description
<b>Quality</b>	Choose Quality in list. Default value is " <b>Middle</b> ". Low quality is a small file size and High quality is a large file size. <b>[Low]</b> Low quality setting for still shot. <b>[Middle]</b> Middle quality setting for still shot. <b>[High]</b> High quality setting for still shot.
<b>Storage</b>	Choose storage in list. Default value is " <b>Phone</b> ". <b>[Phone]</b> Capture files stored in the Device of file box. <b>[External]</b> capture files stored in the 'SD Memory Card'.
<b>White Balance</b>	Choose white balance in list. Default value is 'Auto'. <b>[Auto]</b> : Auto control of the white value. <b>[Sunny]</b> : Sunny setting of the white value. <b>[Cloudy]</b> : Cloudy setting of the white value. <b>[Incandescent]</b> Incandescent setting of the white value.
<b>Self-Timer</b>	Choose Self Timer in list. Default value is 'Off'. <b>[Off]</b> Push 'OK' to take a photograph instantly. <b>[3 (Sec)]</b> Push 'OK' to take a photograph after 3 sec. <b>[5 (Sec)]</b> Push 'OK' to take a photograph after 5 sec. <b>[10 (Sec)]</b> Push 'OK key' take a photograph after 10 sec.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



# CAMERA / CAMCORDER CONTROLS

Item	Description
<b>Resolution</b>	Choose a Resolution in list. Default value is '1280 X 1024'. [176 X 144] Camera resolution is in 176 X 144. [320 X 240] Camera resolution is in 320 X 240. [640 X 480] Camera resolution is in 640 X 480. [1280 X 1024] Camera resolution is in 1280 X 1024.
<b>Effects</b>	Choose color effect in list. Default value is "Normal". [Normal] Color effect is normal. [Gray] Color effect is gray. [Sepia] Color effect is sepia. [Negative] Color effect is negative.

## CAMCORDER MENU

The Camcorder Menu allows you to control video features such as resolution and quality, and allows you to select the mode and turn the audio on and off.

- 1 On the Home screen, press **[Start]** **[All Programs]** **[More...]**, select **Applications** and select **Camera** and press **OK**.

- 2 Press **[Tab]** key to access **Camcorder**.
- 3 Press right soft key **[Menu]**.
- 4 Change values using Navigation Keys.
- 5 Press **OK** to apply the chosen values.


Item	Description
<b>Storage</b>	Choose storage in list. Default value is ' <b>Phone</b> '. [Phone] Capture files stored in the Device of file box. [External] capture files stored in the "SD Memory Card"
<b>Profiles</b>	Choose Profiles in list. Default value is '176 X 144'. [176 X 144] Recording resolution is in 176 X 144. [320 X 240] Recording resolution is in 320 X 240.
<b>White Balance</b>	Choose white balance in list. Default value is "Auto". [Auto] Auto control of the white value. [Sunny] Sunny setting of the white value. [Cloudy] Cloudy setting of the white value. [Incandescent] Incandescent setting of the white value.

# CAMERA / CAMCORDER CONTROLS

<b>Effect</b>	<p>Choose color effect in list. Default value is "Normal".</p> <p><b>[Normal]</b> Color effect is normal.</p> <p><b>[Gray]</b> Color effect is gray.</p> <p><b>[Sepia]</b> Color effect is sepia.</p> <p><b>[Negative]</b> Color effect is negative.</p>
---------------	--

## ● GENERAL SETTINGS

Camera/Camcorder Settings allows you to control the backlight, auto hide, review, shutter sound and time out.

- 1** On the Home screen, press **[Start]** **[All Programs]** **[More...]**, select **Applications** and select **Camera** and press **OK**.
- 2** Press right soft key  **[Menu]**.
- 3** Select **Settings**, select **General** and press **OK**.
- 4** Change values using Navigation Keys and press **OK** key.
- 5** Press left soft key **[Done]** to apply the chosen values. The Camera screen is displayed.
- 6** If you do not wish to apply new value, press **Cancel** key.

Item	Description
<b>Keep backlight on during previewing and recording</b>	Check Keep backlight on during previewing and recording in list. Default is checked.
<b>Full Screen</b>	Check Full Screen in list. Default is unchecked. This item operates while in Landscape mode. If Full Screen is checked, preview is displayed in full screen.
<b>Review file after Capture</b>	Check Review file after Capture in list. Default is checked. If it checked Review file after Capture.
<b>Time Out</b>	Choose Time Out in list. Default value is "1 min". <b>[1 min]</b> Time Out is 1 min. <b>[2 min]</b> Time Out is 2 min. <b>[3 min]</b> Time Out is 3 min. <b>[Never]</b> Time Out is off.

01

02

03

04

05

06

07

08

09

10

11

12

13

14


15

16

# CAMERA / CAMCORDER CONTROLS

## CAMERA SETTINGS

Camera Settings allows you to control the multi shot count and image prefix.

- 1 On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **Camera** and press **OK**.
- 2 Press right soft key  **[Menu]**.
- 3 Select **Settings**, select **Camera** and press **OK**.
- 4 Change values using Navigation Keys.
- 5 Press left soft key **[Done]** to apply the chosen values. The Camera screen is displayed.
- 6 If you do not wish to apply new values, press **Cancel** key.


Item	Description
Multi Shot Count	Choose Multishot in list. Default value is "4". <b>[4]</b> Make a photograph 4 times in a row. <b>[6]</b> Make a photograph 6 times in a row. <b>[9]</b> Make a photograph 9 times in a row.
Image Prefix	Change image prefix. Default image prefix is "Image".

### Shutter Sound

Choose Shutter Sound in list.  
It is used only in camera mode.  
Default value is "Shutter.wav".  
**[Shutter.wav]** Shutter sound is default sound.  
**[Cheese.wav]** Shutter sound is Cheese sound.  
**[Smile.wav]** Shutter sound is Smile sound.

## CAMCORDER SETTINGS

Camcorder Settings allows you to control the Limit Recording and File Extension.

- 1 On the Home screen, press **[Start] [All Programs] [More...]**, select **Applications** and select **Camera** and press **OK**.
- 2 Press right soft key  **[Menu]**.
- 3 Select **Settings**, select **Camcorder** and press **OK**.
- 4 Change values using Navigation Keys.
- 5 Press left soft key **[Done]** to apply the chosen values. The Camera screen is displayed.
- 6 If you do not wish to apply new values, press **Cancel** key.

# CAMERA / CAMCORDER CONTROLS

Item	Description
<b>Limit Recording</b>	Choose Limit Recording in list. Default value is "No Limit". <b>[No Limit]</b> Recording did not stop. <b>[1 min]</b> Recording stopped after 1 min. <b>[3 min]</b> Recording stopped after 3 min. <b>[5 min]</b> Recording stopped after 5 min. <b>[10 min]</b> Recording stopped after 10 min.
<b>Video Prefix</b>	Change video prefix. Default video prefix is "Video".

## OVERVIEW OF THE DEFAULT HARDWARE BUTTON ASSIGNMENTS

By default, these hardware buttons are assigned to Camera functions.

Hardware Button	Camera/Camcorder Function
<b>OK</b>	Start Record Video/Stop Record Video, Take a picture
<b>NAVIGATION left</b>	Brightness down
<b>NAVIGATION right</b>	Brightness up
<b>NAVIGATION up</b>	Zoom in
<b>NAVIGATION down</b>	Zoom out
<b>1</b>	Swap Mode between Camera, Multi shot and Camcorder.

<b>2</b>	Resolution set in Camera / Camcorder mode.
<b>3</b>	Picture Quality set in Camera mode. Recording Quality set in Camcorder mode.
<b>4</b>	Storage path in Camera / Camcorder mode.
<b>5</b>	White balance in Camera / Camcorder mode.
<b>6</b>	Self Timer set in Camera / Camcorder mode.
<b>7</b>	Color effect set in Camera / Camcorder mode.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# MEMO



## CHAPTER 11

# MOBILE INTERNET EXPLORER

This chapter addresses Internet services and web browsing. For more detailed information contact your service provider.

### ■ USING INTERNET EXPLORER

# USING INTERNET EXPLORER

## ADD A WEB PAGE TO THE FAVORITES LIST

Internet Explorer functions on your phone much the same as it does on your PC. You can maintain a list of web sites in your favorites list. Add each site to the list through the Internet Explorer menus.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Press **[Menu] [Address Bar]**, enter the address of the page you want to add and press **Go**.
- 3 Press **[Menu] [Add to Favorites]**.
- 4 Confirm or change the name and Web page address.
- 5 In Folder, select a location for this favorite.
- 6 Press **Add**.

### **!** TIP

*A quick way to add favorites to your phone is to synchronize with your PC using ActiveSync. For more information, see ActiveSync Help on your PC.*

### See also

Go to a Web page.

## CHANGE CONNECTION OPTIONS

Depending on your location and your access settings, you can connect to different networks through Internet Explorer.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Press **[Menu] [Tools] [Options]**.
- 3 Press **Connections**.

Do one of the following:

- Default setting – Uncheck **Automatically detect settings and WAP Network** – make surfing internet to any web site through service provider Proxy server. (recommended)
- Checking **Automatically detect settings** can surf Internet Using ActiveSync. In this setting, you can't access sites like Media Net.

- 4 Press **[Done]**.

## ● CHANGE WEB PAGE DISPLAY OPTIONS

There are Web page display options to choose from: Text Size, one column, Fix To Screen, and desktop.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Select one of the web sites.
- 3 Press **[Menu] [View]**.

Do one of the following:

- **Text Size.** The text on the Web pages displayed on your phone can be made larger or smaller.
- **One Column:** Arranges the content into one column that is as wide as the screen. This means that you will rarely have to scroll horizontally.
- **Fit To Screen:** Maintains a layout similar to what you see on a desktop computer, but makes items smaller and arranges the content so that you can see most of it without having to scroll horizontally.
- **Desktop:** Keeps the same layout and size as on a desktop computer, which will require both horizontal and vertical scrolling.

## ● CLEAR HISTORY, COOKIES, OR TEMPORARY FILES

Internet Explorer typically stores a list of the sites you've visited, cookies (files simplifying return to a site), or temporary files. Clearing these files is simple.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Press **[Menu] [Tools] [Options]**.
- 3 Press **Memory**.
- 4 Select the type of memory to clear and press **Clear**.
- 5 Press **Yes**, and then press **[Done]**.

## ● CREATE A NEW FOLDER IN FAVORITES

If you have more than a few web sites in your Favorites list, it may be convenient to arrange the sites in folders on your favorites list.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Press **Favorites**.
- 3 Press **[Menu] [Add Folder]**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



# USING INTERNET EXPLORER

**4** In Name, enter a name for the folder.

**5** Press **Add**.

## ● DELETE A FAVORITE

Any favorite can be deleted from your favorites list at any time.

**1** From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.

**2** Press **Favorites**.

**3** Select the favorite to delete.

**4** Press **[Menu] [Delete]**.

**5** Press **Yes** to confirm the deletion.

## ● DISCONNECT FROM THE INTERNET

Be sure to disconnect from the Internet when you are finished using it. Connections will time out automatically if there is no activity, but it is a good idea to disconnect manually.

**1** Press  key, select **Wireless Manager** and press **OK**.

**2** Press right soft key **[Menu]**.

**3** Press **Disconnect Cellular Data**.

## ● EDIT A FAVORITE

You can change the name, URL, or description of a web site in your favorites list.

**1** From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.

**2** Press **[Favorites]**.

**3** Select the favorite to edit.

**4** Press **[Menu] [Edit]**.

**5** Make your changes and press **[Done]**.

## ● GO TO A LINK

If you have previously set up links, you can access them from the main page of Internet Explorer.

**1** From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.

**2** Scroll vertically or horizontally to see all available links.

**3** Press the link or press left soft key **[GO]** key.

# USING INTERNET EXPLORER

## GO TO A WEB PAGE

The Internet Explorer on your phone accesses web pages by letting you enter the address in the address bar after pressing the menu key.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Press **[Menu] [Address Bar]**.
- 3 Enter the address, and press **[Go]**.

## GO TO A WEB PAGE IN THE HISTORY LIST

You also have access to web pages you've visited by using the History list in Internet Explorer.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Press **[Menu] [History]**.
- 3 Select the Web page, and press **[Go]**.

### NOTE

To return to the Web page you were viewing, press **Cancel** key.

## OPEN INTERNET EXPLORER

Internet Explorer is one of the easily accessible options from the Home Screen.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.

## REFRESH A WEB PAGE

To refresh a web page use the Menu soft key and select **Refresh**.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 If necessary, select the Web page in your Favorites or History list, and press **[Go]**.
- 3 Press **[Menu] [Refresh]**.

## RETURN TO A WEB PAGE YOU VISITED IN THE SAME SESSION

You can return to a web page or scroll back through pages you've visited in a session just as you would use the "Back" button on a PC.

- 1 On a Web page, press **Cancel** key repeatedly until the page appears.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# USING INTERNET EXPLORER

## VIEW A FAVORITE

To view a favorite site at any time, just go into the Favorites list and select the site you wish to visit.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Press **Favorites**.
- 3 Select a favorite and press **[Go]**.

## VIEW A LIST OF RECENTLY VISITED WEB PAGES

The History function of Internet Explorer allows you to select a site you've already visited and go to that site.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Press **[Menu] [History]**.

## MOVE A FAVORITE TO A FOLDER

After you've created folders in your Favorites list, you can move any of the sites already on the list into one of the folders.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Press **Favorites**.
- 3 Select the favorite to move.
- 4 Press **[Menu] [Edit]**.
- 5 Under Folder, scroll to the folder to which you want to move the favorite.
- 6 Press **[Done]**.

## CHANGE THE SIZE OF TEXT ON WEB PAGES

The text on the Web pages displayed on your phone can be made larger or smaller.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Press **[Menu] [View] [Text Size]** and select the size you want.

## SHOW OR HIDE PICTURES ON WEB PAGES

The images in the Web pages can be hidden or not on screen.

# USING INTERNET EXPLORER

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Press **[Menu] [View] [Show Pictures]**.
- 3 A check mark next to Show Pictures indicates that pictures will be displayed on Web pages.

## VIEW A PAGE IN FULL SCREEN MODE

You can toggle back and forth between a full screen or a minimized screen on your phone's display.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Press **[Menu] [View] [Full Screen]**.

### ! TIP

*To exit full screen mode, press either soft keys, and then press **[Menu] [View] [Full Screen]** to cancel the selection.*

## SEND A LINK VIA E-MAIL

One of the options your phone provides is sending a link through e-mail. You will use the Tools menu on the Internet Explorer menu bar.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Go to the Web page you want to send.
- 3 Press **[Menu] [Tools] [Send Link]**.
- 4 Select Message or E-mail account.
- 5 A new message is created with the page address inserted in the message body.

## ADJUST THE SCROLLING SPEED

You will use the scrolling feature of the phone to view web pages – it can be adjusted to scroll as slowly or as quickly as you need.

- 1 From the Home screen, press **[Start] [All Programs]** and select **Internet Explorer**.
- 2 Open a Web page.  
Do one of the following:
  - Press **navigation key** to scroll from link to link on the page.
  - Press and hold **navigation key** for more than three seconds to accelerate scrolling.

**See also,**

Change Web page display options.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# MEMO

A decorative header section featuring a grid of dots. The dots are arranged in a pattern that is denser on the right side and fades out towards the left. The dots are in shades of gray and white.

## CHAPTER 12

# PC CONNECTIVITY, BLUETOOTH AND ACTIVESYNC

This chapter addresses Bluetooth and ActiveSync functions.

- ACTIVESYNC
- BLUETOOTH
- OVERVIEW OF BLUETOOTH VIRTUAL COM PORTS

Microsoft ActiveSync synchronizes data between your phone and PC. ActiveSync is already installed on your phone, but you need to install it on your PC before you can synchronize data.

## ● INSTALL AND SET UP ACTIVESYNC

Install ActiveSync on your PC as described on the Windows Mobile Getting Started Disc. After Setup completes, the Sync Setup Wizard automatically starts when you connect your phone to the PC.

Follow the instructions on the screen to complete the wizard. In the Sync Setup Wizard, you can:

- Create a synchronization relationship between your PC and the phone.
- Configure an Exchange Server connection to synchronize directly with Exchange Server. To synchronize your phone with Exchange Server, obtain the name of the Exchange Server, your user name, password, and domain name from your administrator before completing the wizard.
- Choose information types to synchronize.

## 📌 NOTE

*When you finish the wizard, ActiveSync synchronizes your phone automatically. Once synchronization completes, you can disconnect your phone from your PC.*

## See also

Connect the phone.

Change ActiveSync settings.

## ● SET UP AN EXCHANGE SERVER CONNECTION

To complete this configuration, you will need to get the name of the server and the server domain name from your service provider or system administrator. You must also know your Exchange user name and password.

**Before changing synchronization settings on the phone, disconnect it from your PC.**

- 1** In the phone Home screen, press left soft key **[Start]** **[All Programs]**, select **ActiveSync** and press **OK**.
- 2** Press **[Menu]** select **Configure Server** and press **OK**. If you have not yet set up sync with Exchange Server, this will say Add Server Source.

- 3** In **Server address**, enter the name of the server running Exchange Server, and press left soft key [**Next**].
- 4** Enter your user name, password, and domain name, and press [**Next**].
- 5** If you want the phone to save your password so that you will not need to enter it again when connecting, select the **Save password** check box and press **OK**.
- 6** Select the check boxes for the types of information items that you want to synchronize with Exchange Server.
- 7** To change available synchronization settings, select the type of information, and press [**Menu**] select **Settings** and press **OK**.
- 8** To change the rules for resolving synchronization conflicts, press [**Menu**] select **Advanced** and press **OK**.
- 9** Press [**Finish**].

## ● CHANGE ACTIVESYNC SETTINGS

Once you set up synchronization using the Sync Setup wizard on the PC, you can later change your synchronization settings:

- If you want to change ActiveSync settings for synchronizing with a PC, use ActiveSync on the PC. For more information, see “Changing the amount of information synchronized” in ActiveSync Help on the PC.
- If you want to change ActiveSync settings for synchronizing with Exchange Server, use ActiveSync on your phone, as described in “Change settings for an information type.”

### See also

Install and set up ActiveSync.

Connect the phone.

Change settings for an information type.

## ● SCHEDULE SYNCHRONIZATION AS ITEMS ARRIVE

You can schedule automatic synchronization between your phone and Exchange Server every time an item arrives or is changed in Exchange Server if your company is running Exchange Server with Exchange ActiveSync, and after your first full synchronization with Exchange Server.

- 1** On the phone Home screen, press [**Start**] [**All Programs**] select **ActiveSync** and press **OK**.
- 2** Press the right soft key [**Menu**] to select **Schedule** and press **OK**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



Do one or both of the following:

- In Peak times, select '**As items arrive**'.  
This is more cost-efficient to synchronize at regular intervals when mail volume is high.
- In Off-peak times, select '**As items arrive**'.  
This can be more cost-efficient than synchronizing on a regular schedule when mail volume is low.

**3** Press [Done].

 **NOTE**

*Before changing the phone settings for synchronization, disconnect the phone from your PC.*

## CHANGE THE SYNCHRONIZATION SCHEDULE

Before changing synchronization settings, disconnect the phone from your PC.

- 1** On the phone Home screen, press **[Start] [All Programs]**, select **ActiveSync** and press **OK**.
- 2** Press right soft key **[Menu]** select **Schedule** and press **OK**.

**3** Do one or more of the following:

To sync	Do this
When you are working, or e-mail volume is high	Select an appropriately frequent interval in the Peak times list.
When e-mail volume is low	Select a longer interval or As items arrive in the Off-peak times list.
While roaming	Select the Use above settings while roaming check box. To minimize roaming charges, clear the check box, and synchronize manually while roaming.
When you Press Send in Messaging on the phone	Select the Send outgoing items immediately check box.

 **IMPORTANT NOTE**

*The device power-down timer is reset each time you synchronize. If you schedule a synchronization interval that is shorter than the time interval set for the device to automatically power down, the device will never turn off to save battery power.*

**TIP**

To change peak time settings to more accurately adjust to periods of e-mail volume for you, press **[Menu]** **[Peak Times]**.

**START AND STOP SYNCHRONIZATION**

The ActiveSync program allows you to access a PC to keep information on both the PC and the phone current. There are several types of information you will want to keep updated on both.

- 1** On the phone Home screen, press **[Start]** **[All Programs]**, select **ActiveSync** and press **OK**.
- 2** Press the left soft key **[Sync]** and press **OK**.
- 3** To stop synchronizing, press **[Stop]**.

**NOTE**

*You can start and stop synchronization only if your phone already has a sync relationship with a PC or Exchange Server.*

**VIEW INFORMATION ABOUT SYNC STATUS**

ActiveSync keeps synchronization status messages on a status page for you to view at any time. You can view status in one of the following ways:

- When alert text is displayed on the ActiveSync main page, press the alert text to open the status page.
- Press **[Menu]** to select **Status** and press **OK**.

**NOTE**

*Some errors interfere with automatic synchronization. If you suspect that a scheduled synchronization has not occurred, you should attempt to manually synchronize your information. Successfully completing manual synchronization resets automatic synchronization. For more information, see "Synchronizing Information" in ActiveSync Help on the PC.*

**CHANGE SETTINGS FOR AN INFORMATION TYPE**

Before changing synchronization settings on the phone, disconnect it from your PC.

- 1** On the Home screen, press **[Start]** **[All Programs]**, select **ActiveSync**, press **OK**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

**2** Press **[Menu]**, select **Options** and press **OK**.

**3** Select one of the information types.

Do one of the following:

- To view or change settings for an information type (when available), press **Settings**.
- To view or change settings for a computer or Exchange Server, press **[Menu]** select **Settings** and click **OK**.

**4** Change the amount of information to be synchronized or other settings.

**5** Press **[Done]** (or **Finish** in the Exchange Server settings wizard).

## CONNECT THE PHONE

There are several options for connecting your phone to your PC. Both devices will need to use the ActiveSync program.

### ! IMPORTANT NOTE

*To synchronize using ActiveSync, you must install ActiveSync on your PC before connecting your phone to the PC.*

**1** Turn on the phone.

**2** Connect your phone to your PC using a serial cable, USB cable, or Bluetooth connection. For more detailed information, see “Connecting a mobile device to a PC” in ActiveSync Help on your PC.

### See also

Install and set up ActiveSync.

Change ActiveSync settings.

## DEACTIVATE THE USB MODEM

This will allow you to use the ActiveSync program.

**1** On the Home screen, press **[Start]** **[All Programs]**, select **Settings** and press **OK**.

**2** Scroll to **Connections** and press **OK**.

**3** Select **Modem Link** and press **OK**.

**4** Use the left and right Navigation Keys to select status.

**5** Select **Inactive**.

**6** Press **[Done]**.

## NOTE

*You must deactivate the USB modem if you want to use ActiveSync.*

## CONNECT TO A PC USING CHARGEABLE USB CABLE

The Pantech duo™ provides a USB connector for transferring data to and from your computer via USB cable.

- 1** Plug the USB Data Cable into a standard USB connector of your computer.
- 2** Plug the other end of the USB Data Cable into the bottom of your phone.

## CONNECT TO A PC USING BLUETOOTH

Follow the instructions in ActiveSync Help on the PC for configuring Bluetooth on your PC to support ActiveSync.

- 1** In the phone Home screen, press **[Start] [All Programs]**, select **ActiveSync** and press **OK**.
- 2** Press **[Menu] [Connect via Bluetooth]**. Ensure that the phone and PC are within close range.

- 3** If this is the first time you have connected to this PC via Bluetooth, you must complete the Bluetooth wizard on the phone and set up a Bluetooth partnership with the PC before synchronizing.

- 4** Press **Sync**.

- 5** When finished, press **[Menu]** and select **Disconnect Bluetooth**.

- 6** To preserve battery power, turn off Bluetooth.

## CHANGE E-MAIL SECURITY OPTIONS

ActiveSync lets you set up S/MIME e-mail encryption and signing. You will have to obtain a valid certificate for signing or encrypting e-mail before you will be able to sign or encrypt e-mail successfully.

- 1** In the phone Home screen, press **[Start] [All Programs]**, select **ActiveSync** and press **OK**.
- 2** Press the right soft key **[Menu]** select **Options** and press **OK**.
- 3** Scroll to E-mail and press the right soft key **Settings**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

- 4** Press **[Menu]** to select **Advanced** and press **OK**.

Do one or both of the following:

- To sign all outgoing messages so that a recipient can be certain that the message as received was sent by the claimed sender, and has not been altered in any way, check **Sign messages**.
- To encrypt all outgoing e-mail so as to protect the contents of the message from being viewed by anyone other than the intended recipient, check **Encrypt messages**.

- 5** Press **[Menu]** and select **Choose Certificate** to select a certificate for signing or encrypting outgoing e-mail. You can select certificates to sign or encrypt e-mails individually even if you do not want to sign or encrypt all outgoing e-mail.

 **NOTE**

*Synchronizing e-mail using S/MIME encryption or signing is available only with Exchange Server 2003 Service Pack 2, or later.*

**EXCLUDE AN E-MAIL ADDRESS FROM REPLY ALL**

ActiveSync can help you manage your e-mail by ignoring a specified e-mail address when you reply to all senders from the phone. If you specify your own primary e-mail address, this can reduce the number of e-mails you receive by ensuring that you do not receive your own e-mail.

- 1** In the phone Home screen, press **[Start]** **[All Programs]**, select **ActiveSync** and press **OK**.
- 2** Press **[Menu]** **[Options]**.
- 3** Select **E-mail**, and press **Settings**.
- 4** Press **[Menu]** select **Advanced** and click **OK**.
- 5** Enter the e-mail address you want to remove when replying to all senders in **Primary e-mail address**.

# BLUETOOTH

One remote networking option that is available to you with the Pantech duo™ is Bluetooth wireless. By activating Bluetooth you can exchange information easily with other devices.

## ● ACCEPT A BLUETOOTH PARTNERSHIP

A Bluetooth partnership is a direct link to other devices. Both devices that wish to connect must establish or accept a “partnership” through Bluetooth.

- 1** Ensure that Bluetooth is turned on and that your phone is discoverable.
- 2** When prompted to accept a Bluetooth partnership with the other device, press Yes.
- 3** In PIN, enter a personal identification number (PIN) between 1 and 16 characters, and press **[Done]**. You must enter the same PIN that was entered on the device requesting the Bluetooth partnership.
- 4** The Bluetooth partnership is created. You can now exchange information with the other device.

## See also

Turn Bluetooth on and off.

Make your device discoverable.

## ● CREATE A BLUETOOTH PARTNERSHIP

Ensure that the two devices are within close range and that both Bluetooth-enabled devices are discoverable.

- 1** On the Home screen, press **[Start]** **[All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Select Bluetooth.
- 4** Select **'Add new device...'**, and press **OK**. Your phone searches for other Bluetooth-enabled devices and displays them in the list.
- 5** Select the device with which you want to create a Bluetooth partnership and press **[NEXT]**.
- 6** If you want to use a passkey (recommended for enhanced security), enter an alphanumeric passkey between 1 and 16 characters, and press **[Next]**. Otherwise, leave Passkey blank and press **[Next]**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

- 7 Enter the same passkey on the other device.

## **!** TIP

*Once you create a partnership, the Bluetooth-enabled devices don't need to be discoverable to beam information between them; Bluetooth needs only to be turned on.*

## **●** END A BLUETOOTH PARTNERSHIP

Through the connections menu, all Bluetooth partnerships that have been enabled are displayed. You can end a partnership at any time.

- 1 On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2 Scroll to **Connections** and press **OK**.
- 3 Select **Bluetooth**.
- 4 Select the Bluetooth partnership you want to end.
- 5 Press **[Menu]** then **Delete**.
- 6 Press **[Yes]** when confirm pop-up windows shows.

## **See also**

Make your device discoverable.  
Turn Bluetooth on and off.  
Create a Bluetooth partnership.

## **●** MAKE YOUR DEVICE DISCOVERABLE

To receive beamed information, beaming devices or computers must be able to detect your device.

- 1 On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2 Scroll to **Connections** and press **OK**.
- 3 Select **Bluetooth**.
- 4 Use left and right Navigation Keys to select **Turn on Visibility** and press **[Done]**.

Other Bluetooth-enabled devices can now detect your phone and attempt to beam information to it, establish a Bluetooth partnership, or use a Bluetooth service.

## **📝** NOTE

*Selecting Discoverable also turns on Bluetooth. Turning off Bluetooth will make your device not discoverable, and it will also prevent you from sending a Bluetooth beam.*

## See also

End a Bluetooth partnership  
Create a Bluetooth partnership

## RENAME A BLUETOOTH PARTNERSHIP

You can give a more meaningful name to a Bluetooth partnership to help you recognize it when selecting from a list of partnerships.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Select **Bluetooth**.
- 4** Select partnership to rename, press **OK**.
- 5** Enter a new name for the Bluetooth partnership, and press **[Next]**.
- 6** Press **[Done]**.

## See also

Make your device discoverable  
Turn Bluetooth on and off  
End a Bluetooth partnership  
Create a Bluetooth partnership

## TURN BLUETOOTH ON AND OFF

By default Bluetooth is turned off. If you turn it on, and then turn off your device, Bluetooth also turns off. When you turn on your device again, Bluetooth turns on automatically.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Select **Bluetooth** and press **OK**.
- 4** Press **[Menu]**, select **Turn On Bluetooth** or **Turn Off Bluetooth**, and Press **OK**.

### NOTE

*You can also turn off Bluetooth using Wireless Manager.*

## See also

Make your device discoverable  
End a Bluetooth partnership  
Create a Bluetooth partnership  
Turn wireless power on or off

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



## RECEIVE BEAMED INFORMATION

Your phone can automatically receive beamed information, but you must enable the phone to do so through the Connections menu.

- 1 On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2 Scroll to **Connections** and press **OK**.
- 3 Select **Beam** and press **OK**.
- 4 Check Receive incoming beams.
- 5 To receive beams by using Bluetooth, ensure Bluetooth is turned on and that your phone is discoverable and within close range.
- 6 Press **[Done]**.

### NOTE

*Once you select Receive incoming beams, your phone automatically receives beams until you clear this check box. Your phone can receive all types of beamed files, but you may not be able to view all types of files on the phone. You may need to copy some files to a PC for viewing.*

## BEAM AN ITEM

In the Calendar, Contacts, Tasks, and Pictures programs, you can beam files and information to other devices using Bluetooth.

- 1 From the program, select the item you want to beam, such as an appointment in Calendar, a task in Tasks, a contact card in Contacts, or a picture in Pictures. In Calendar, first open the appointment in Agenda view.
- 2 Press **[Menu]** and select **Beam**.
- 3 If using Bluetooth, select the device to which you want to send the item.
- 4 Press **Beam**.

### TIP

*When using Bluetooth, if the device that you want to beam to doesn't appear in the list, ensure that the device is turned on, discoverable, and within close range of your phone. Also, ensure that Bluetooth is turned on.*

### See also

Make your device discoverable  
Receive beamed information

## ● SET UP A BLUETOOTH-ENABLED HEADSET

You can use a Bluetooth-enabled headset (or other Bluetooth-enabled hands-free device) with your device when you create a Bluetooth partnership between your device and the Bluetooth headset.

- 1 Make sure that the two devices are turned on and within close range, and that the Bluetooth-enabled headset is discoverable.
- 2 On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 3 Scroll to **Connections** and press **OK**.
- 4 Select **Bluetooth** and press **OK**.
- 5 Select **'Add new device...'**, and press **OK**.
- 6 Your device searches for other Bluetooth-enabled devices and displays them in the list.
- 7 Select the Bluetooth-enabled, hands-free device, and press **Add**.
- 8 Enter the alphanumeric passkey for the Bluetooth-enabled hands-free device in **Passkey**. You can find this in the manufacturer's documentation for your hands-free device. Press **Next**.

- 9 Select the check box for the **Hands Free** service, and press **Finish**.

## ● SET UP A STEREO HEADSET

Windows Mobile-based devices support A2DP (Advanced Audio Distribution Profile), which is used by Bluetooth-enabled stereo headsets. Make sure that your stereo headset also supports A2DP.

- 1 Make sure that your device and the stereo headset are turned on, discoverable, and within close range.
- 2 On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 3 Scroll to **Connections** and press **OK**.
- 4 Select **Bluetooth** and press **OK**.
- 5 Select **'Add new device...'**, and press **OK**.
- 6 Your device searches for other Bluetooth-enabled devices and displays them in the list.
- 7 Select **stereo headset**, and press **Add**.
- 8 In **Passkey**, enter the alphanumeric passkey for the Bluetooth-enabled stereo headset. You can find this in the manufacturer's documentation for your hands-free device. Press **Next**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

 
- 9 Check the Hands Free service, and press **Finish**.

 **NOTE**

If the headset becomes disconnected, turn the headset on and repeat steps 1-4 above. Select the **stereo headset** and press **[Menu]** then select **Set as Wireless Stereo**.

## ● TURN WIRELESS POWER ON OR OFF

You can turn the power off to your wireless connections in a single location. This is a quick way to preserve battery power or to prepare your device for an airplane flight.

- 1 Press the  briefly to display the Quick List.
- 2 Press **Wireless Manager**.

Do one of the following:

- Press the button for a desired wireless connection type (such as Bluetooth or Phone) to turn it off or on. If it is already turned off, the button is a lighter color and displays an icon marked with an X.
- Press **All** to turn all wireless power on or off (available only when more than one wireless type exists on your device).

 **NOTE**

To change settings for one of the displayed wireless connection types, press **[Menu]** and press the type of settings you want to change.

## ● CONNECT TO INTRANET URLS

Some companies use periods in their intranet URLs (for example, intranet.companyname.com). A Work URL exception tells Internet Explorer Mobile to look on the Work network to find the URL instead of searching the Internet.

- 1 On the Home screen, press **[Start]** **[All Programs]**, select **Settings**, press **OK**.
- 2 Scroll to **Connections** and press **OK**.
- 3 Press **[Menu]** select **Advanced** and click **OK**.
- 4 Press **[Menu]**, select **Work URL Exceptions** and press **OK**.
- 5 Press **[Menu]** then **Add**.
- 6 In URL Pattern, enter the URL, and press **[Done]**. Separate multiple URLs with a semicolon (;).

## NOTE

*You should not create URL exceptions for URLs on the Internet.*

## See also

Change an intranet URL

Delete an intranet URL

## USE A SPECIFIC CONNECTION TO CONNECT TO THE INTERNET

When you create the connection, be sure to set the Connects to setting to The Internet.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Press **[Menu]** then **Advanced**.
- 4** In Internet connection, select the connection you want to use and press **[Done]**.

## TIP

*After you use the connection once, you may want to change your Internet Connection back to Automatic.*

## See also

Make your device discoverable

## EDIT A VPN CONNECTION

If you have access to a Virtual Private Network (VPN) you can use your phone on the VPN. You will want to establish and edit the VPN connection first.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Select **VPN** and press **OK**.
- 4** Select the connection to edit.
- 5** Press **[Menu] [Edit]**.
- 6** Change any information, and press **[Done]**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# OVERVIEW OF BLUETOOTH VIRTUAL COM PORTS

Some programs can connect only through a serial (COM) port. This can be true even if the device itself is Bluetooth-enabled. To make it possible for such programs to use a Bluetooth connection, you must set up a virtual COM port. Once created, this virtual port can be used like any other COM port. You can use a virtual COM port for programs that, for example, or to connect to a Bluetooth-enabled printer.

Here are some examples of how to use incoming and outgoing virtual COM ports.

## OUTGOING COM PORT

You have a program on your device that cannot use Bluetooth directly but can print to a serial (COM) port. You can create a Bluetooth partnership with a Bluetooth-enabled printer, and then set up an outgoing COM port (for example, COM 1). The program can then send print data to COM 1, which reaches the Bluetooth-enabled printer.

## SET UP AN OUTGOING BLUETOOTH COM PORT

The New Outgoing Port menu command is available only if one or more Bluetooth-connected devices support serial (COM) connections.

Make sure that your device is currently connected to the other device via Bluetooth.

- 1** On the Home screen, press **[Start]** **[All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Select **Bluetooth** and press **OK**.
- 4** Press **[Menu]**, select **COM Ports** and press **OK**.
- 5** Press **[Menu]** and select **New Outgoing Port**.
- 6** Select a numbered COM port from the list and press **[Done]**.

### NOTE

*If the port cannot be created, it is in use. Select a different numbered port. To use this COM port to communicate only with devices with which your device has a Bluetooth partnership, select the Secure Connection check box.*

### See also

Overview of Bluetooth virtual COM ports  
Set up an incoming Bluetooth COM port  
Create a Bluetooth partnership

## ● CREATE A DIAL-UP CONNECTION

Every network connection is different. You should gather all of the relevant information or network settings you need before starting this process.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Select **Dial-up** and press **OK**.
- 4** Press **[Menu]** and select **Add**.

Enter the following information and press **[Done]**.

- **Description:** enter a name for the connection.
- **Connects to:** select the network.
- **Phone number:** enter the phone number to be used to dial the network.
- **User name:** enter your network user name, if required.
- **Password:** enter your password, if required.
- **Domain:** enter the domain name, if required.

## See also

Create a VPN connection

## ● CREATE A PROXY CONNECTION

Every network connection is different. You should gather all of the relevant information or network settings you need before starting this process.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Select **Proxy** and press **OK**.
- 4** Press **[Menu]** and select **Add**.

Enter the following information, and press **[Done]**.

- **Description:** enter a name for the connection.
- **Connects from:** select the type of network from which you will connect.
- **Connects to:** select the type of network to which you will connect.
- **Proxy [name:port]:** enter the proxy server name and port number in this form: server name:port number.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# OVERVIEW OF BLUETOOTH VIRTUAL COM PORTS

- **Type:** select the type of proxy connection to create.
- **User name:** enter your user name for the network to which you will connect.
- **Password:** enter your password.

## CREATE A VPN CONNECTION

Every network connection is different. You should gather all of the relevant information or network settings you need before starting this process.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Select **VPN** and press **OK**.
- 4** Press **[Menu]** and select **Add**.

Enter the following information, and press **[Done]**.

- **Description:** enter a name for the connection.
- **VPN type:** select the type of VPN.
- **Server:** enter the VPN server name.

- **Connects from:** select the type of network from which you will connect to the VPN (typically the Internet).
- **Connects to:** select the type of network to which you will connect (typically My Corporate Network).
- **User name:** enter your user name for the VPN.
- **Password:** enter your password.
- **Domain:** enter the domain name, if required.
- **IPSec authentication:** If you selected IPSec in VPN type, select the type of authentication: Pre-Shared Key or Certificate.
- **IPSec Pre-shared key:** If you selected Pre-Shared Key in IPSec authentication, enter the key.

## DELETE A DIAL-UP CONNECTION

If a dial-up connection is no longer need, delete it from the Connections menu. As with all options, you can control all the different connections possible through the phone.

# OVERVIEW OF BLUETOOTH VIRTUAL COM PORTS

- 1 On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2 Scroll to **Connections** and press **OK**.
- 3 Select **Dial-up** and press **OK**.
- 4 Press **[Menu]** and select **Delete**.
- 5 Press **Yes**, and press **[Done]**.

## DELETE A PROXY CONNECTION

If a proxy connection is no longer needed, delete the connection from the Connections menu.

- 1 On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2 Scroll to **Connections** and press **OK**.
- 3 Select **Proxy** and press **OK**.
- 4 Press **[Menu]** and select **Delete**.
- 5 Press **Yes**, and press **[Done]**.

## DELETE AN INTRANET URL

You may have stored URLs in your Work URL Exceptions list. When a URL is no longer needed there, delete it through the Advanced Connections menu.

- 1 On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2 Scroll to **Connections** and press **OK**.
- 3 Press **[Menu]**, select **Advanced** and press **OK**.
- 4 Press **[Menu]** select **Work URL Exceptions** and press **OK**.
- 5 Press **[Menu]**, and press **Delete**.

## See also

Connect to intranet URLs  
Change an intranet URL

## DELETE A VPN CONNECTION

When you are sure a VPN connection will no longer be needed – delete it from the Connections menu.

- 1 On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2 Scroll to **Connections** and press **OK**.
- 3 Select **VPN** and press **OK**.
- 4 Press **[Menu]** and select **Delete**.
- 5 Press **Yes** then press **[Done]**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



# OVERVIEW OF BLUETOOTH VIRTUAL COM PORTS

## ● EDIT A DIAL-UP CONNECTION

To edit a Dial-up connection, go to the Connections menu and select the connection to delete.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Select **Dial-up** and press **OK**.
- 4** Press **[Menu]** and select **Edit**.
- 5** Change information and press **[Done]**.

## ● EDIT A PROXY CONNECTION

To edit a proxy connection, go to the Connections menu and select the connection to delete.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Select **Proxy** and press **OK**.
- 4** Press **[Menu]** and select **Edit**.
- 5** Change information and press **[Done]**.

## ● EDIT AN INTRANET URL

To edit an Intranet URL, go to the Connections menu and the Advance menu, and select the connection to delete.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Press **[Menu]**, select **Advanced** and press **OK**.
- 4** Press **[Menu]** select **Work URL Exceptions** and press **OK**.
- 5** Press **[Menu]**, and press **Edit**.
- 6** Edit the URL and press **[Done]**.

### See also

Connect to intranet URLs  
Delete an intranet URL

## ● CONNECTING THE GPS INTERMEDIATE DRIVER TO GPS HARDWARE

Some programs can connect only through GPS Intermediate Driver to GPS Hardware. To make it possible for such programs to use the GPS Intermediate Driver, you must set up a GPS COM port.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Settings**, press **OK**.
- 2** Scroll to **Connections** and press **OK**.
- 3** Select **More...** and press **OK**.
- 4** Select **GPS COM Port Setting** and press **OK**.
- 5** Select a numbered COM port from the list and press **[Done]**.

### **NOTE**

*If the port cannot be created, it is in use. Select a different numbered port.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# MEMO

## CHAPTER 13

### APPLICATIONS

- DOWNLOAD AGENT
- FILE EXPLORER
- JAVA
- SPEED DIAL
- VOICE COMMAND
- TASK MANAGER
- CLEARVUE PDF
- GET TELENV
- MY-CAST WEATHER
- MYSPACE MOBILE

# DOWNLOAD AGENT

This phone has Download Agent for updating OS images.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Applications**, press **OK**.
- 2** Scroll to **Download Agent** and press **OK**.
- 3** Scroll to the image package file and press **[Install]**.

# FILE EXPLORER

This phone has File Explorer, which opens an explorer window. This is very similar to the one that Microsoft Windows® has. File Explorer will allow you to navigate to folders and files, and it will allow you manage, delete, copy, or edit files and folders on your phone.

**1** On the Home screen, press **[Start] [All Programs]**, select **Applications**, press **OK**.

**2** Scroll to **File Explorer** and press **OK**.

Enter the following options, and press **[Menu]**.

- **Send:** Send a file as part of an Outlook® E-mail message.
- **Beam:** Send a file via Bluetooth.
- **Edit:** Access file editing options, such as Cut, Copy, Paste, Delete, Rename and New Folder
- **Properties:** Access the file or folder properties.
- **View:** Change the view mode of the files from Icons or List.
- **Sort By:** Change the sort order of the files by Name, Date, Size or Type
- **My Device:** Access the file directory of your phone.

- **Storage Card:** Access the files residing on the storage card.
- **My Documents:** Access the My Documents folder.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# JAVA

Enables Java programs launch and run under the Windows Mobile Application.

# SPEED DIAL

This phone has Speed Dial, with access to a phone number with a short cut number for speed dialing or to an e-mail or URL address for quick access.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Applications**, press **OK**.
- 2** Scroll to **Speed Dial** and press **OK**.
- 3** Press the **[Menu]** soft key and select **Run or Go**.
- 4** Follow the on-screen instructions to change, add or deleted an entry.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



# VOICE COMMAND

The Pantech duo™ has the most advanced voice command technology available in cell phones. You can manage and use your phone without pressing buttons by setting up the Voice Command systems.

## Follow these three easy steps:

- 1 Adjust the Microphone.
- 2 Set the Voice Command Button.
- 3 Try out Voice Command.

### 1 - ADJUST THE MICROPHONE

To get better speech recognition:

- 1 If there is a microphone setting available, turn off Automatic Gain Control and set the microphone gain level to a medium level.

After completing this task, press **Done** and **Back** as needed to return to help.

### 2 - SET THE VOICE COMMAND BUTTON

The Voice Command Button is used to activate voice recognition. To set the Voice Command Button:

- 1 Press **[Start] [All Programs] [Applications] [Voice Command]**.
- 2 In **Voice Button**, select the button you want to assign and press **Done** to accept.

### 3 - TRY OUT VOICE COMMAND

Let's try the "**Help**" command to learn how to answer a question. If you have any problems read Troubleshooting:

- 1 Hold your device about 2" away.
- 2 Press and release the Voice Command Button.

#### NOTE

*A short melody will play and a microphone icon will appear at the top of your screen.*

- 3 In a clear voice say, "**Help**".
- 4 After Voice Command finishes speaking, answer "**General**".

#### NOTE

*You may also press the Voice Command Button anytime during a question to interrupt. Once the microphone icon is visible you may say your answer.*

## ● TRY OUT MORE COMMANDS

- “What’s my next appointment?”
- “What is my battery level?”
- “What time is it?”
- “Start Solitaire”

## ● TO LEARN MORE

- Read the feature topics in this document.
- You can also use the “**Help**” command at any time.
- To return to this help file, press **[Start] [All Programs] [Applications] [Voice Command] [Menu] [Help]**.

## ● USING THE VOICE COMMAND BUTTON

The Voice Command Button is used to activate or cancel voice recognition:

- Press and release to talk or interrupt.
- Press and hold to cancel. (\*Not available on all devices)

There are two ways to cancel voice recognition:

- Press and hold the Voice Command Button to cancel.  
(\*Not available on all devices)
- Press and release the Voice Command button then use the command “**Cancel**”.

Notes:

- When Voice Command asks you a question, it will listen automatically when it is done speaking.
- While Voice Command is listening, it displays a microphone icon at the top of the screen.
- You may also press the Voice Command Button anytime during a question to interrupt. Once the microphone icon is visible you may say your answer.

To change the button:

- 1** Press **[Start] [All Programs] [All Programs] [Applications] [Voice Command]**.
- 2** In **Voice Button**, select the button you want to assign and press **Done** to accept.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## MAKING PHONE CALLS

You can call contacts and dial numbers with voice commands.

### SAY

- “**Call <contact>**” to call a contact whose phone number is stored on your device.
- “**Call <contact> at/on <location>**” to call a contact at a specific phone number.
- “**Dial <number>**” to dial a phone number.
- “**Callback**” to return the last call received.
- “**Redial**” to repeat the last call made.

**<CONTACT>** SUPPORTS THE FOLLOWING FORMATS:

- Nickname
- First Last
- First Last Suffix
- First Middle Last
- First Middle Last Suffix
- Company (if shown in contacts list view)

**<LOCATION>** REPRESENTS ONE OF THESE PHONE NUMBERS:

- Home, Home2, Work, Work2, Mobile, Car, Radio, Pager, Assistant

**<NUMBER>** REPRESENTS ONE OF THE FOLLOWING DIGIT SEQUENCES:

- nnn-nnnn
- nnn-~~nnn~~-nnnn
- 1-~~nnn~~-nnn-~~nnnn~~
- n-1-1
- international dialing with + and 0 prefixes

### WHEN CONFIRMING, SAY

- “**Yes**” or “**Correct**” to call.
- “**No**” or “**Incorrect**” to try again.

### WHEN ASKED WHICH LOCATION, SAY

- an offered “**<location>**” to call.
- “**No**” to try again or continue on to next contact in a list.

## EXAMPLES

- “Call Karen Archer”
- “Call Karen Archer on mobile”
- “Call City, Light and Power”
- “Dial 555-0100”
- “Dial 1-800-555-0100”
- “Dial +46 555 1212 555”
- “Dial 411”
- “Redial”

## NOTES

- SIM contacts are not included. Copy SIM entries to Contacts application to enable with Voice Command.
- Sometimes the name differs from the FileAs property shown in the Contacts list.
- Contacts without a phone number cannot be called.
- The recommended maximum number of contacts is 1000 for 32 MB devices.

## **SHOWING CONTACTS**

You can show a contact card using voice commands.

### SAY

- “Show <contact>”
- “Lookup <contact>”

Then, the devices display the contact on screen.

### **<CONTACT> SUPPORTS THE FOLLOWING FORMATS:**

- Nickname
- First Last
- First Last Suffix
- First Middle Last
- First Middle Last Suffix
- Company (if shown in contacts list view)

### EXAMPLES

- “Show Robert Barker”
- “Show City, Light and Power”

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## NOTES

- SIM contacts are not included. Copy SIM entries to Contacts application to enable with Voice Command.
- When multiple contacts sound similar, they are returned as a list, use No to Continue on to the next contact.
- Sometimes the name differs from the FileAs property shown in the Contacts list.
- The recommended maximum number of contacts is 1000 for 32 MB devices.

## READING APPOINTMENTS

You can request information from your calendar using voice commands. There are several variations of each calendar command. Use the one you find the most natural.

Calendar reminders are read aloud as they occur. This can be turned on and off.

## SAY

- **“What’s my next appointment?”** to hear the next upcoming appointment.
- **“What’s my schedule today?”** to hear today’s upcoming appointments.
- **“What’s my schedule tomorrow?”** to hear appointments for tomorrow.
- **“Reminders On”** to enable reminder announcements.
- **“Reminders Off”** to disable reminder announcements.

## VARIATIONS FOR NEXT

- **“What’s my next meeting?”**
- **“What’s my next appointment?”**

## VARIATIONS FOR TODAY

- **“What are my appointments (today)?”**
- **“What are my meetings (today)?”**
- **“What’s my schedule (today)?”**
- **“What’s my calendar (today)?”**
- **“What’s my calendar for today?”**

## VARIATIONS FOR TOMORROW

- **“What are my appointments tomorrow?”**
- **“What are my meetings tomorrow?”**
- **“What’s my calendar for tomorrow?”**
- **“What’s my schedule tomorrow?”**

## WHILE LISTENING TO APPOINTMENTS, YOU CAN PUSH THE VOICE COMMAND BUTTON TO INTERRUPT AND SAY

- **“Next”** for the next appointment
- **“Previous”** for the previous appointment
- **“Repeat”** to hear the current appointment again
- **“Cancel”** to stop reading appointments

## NOTES

- If no day is specified, appointments for today are spoken.

## ● PLAYING MUSIC

You can easily play music grouped by album, artist, or genre and you can control Windows Media using voice commands.

## SAY

- **“Play anything”** to play all media.
- **“Play music”** to have Voice Command guide you through selecting music. (Variant: **“Play media”**).
- **“Play album”**, to choose from available albums. (Also: **“Play artist”** and **“Play genre”**).

- **“Play <album>”** to listen a specific album. (Also: **“Play <artist>”**, **“Play <genre>”** and **“Play album by <artist>”**).
- **“Next Track”**, **“Previous Track”**, **“Play”**, **“Pause”**, or **“Stop”** to control Windows Media.
- **“Turn Shuffle On”** to play tracks randomly. (Also: **“Turn Shuffle Off”**).
- **“What song is this?”** to hear about the current track. (Variant: **“What track is this?”**).

## WHILE LISTENING TO OPTIONS, YOU CAN PUSH THE VOICE COMMAND BUTTON TO INTERRUPT AND SAY

- **“That One”** to choose the current option
- **“<choice>”** to choose an option

## EXAMPLES

- **“Play Artist”**
- **“Play Scott Bishop Band”**
- **“Play Album by Scott Bishop Band”**
- **“Play Rock”**
- **“What track is this?”**
- **“Stop”**

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## STARTING PROGRAMS

You can start and switch to programs located in the Start menu, Programs folder or its subfolders using voice commands.

### SAY

- **“Start <program>”** to start or switch to a program.

### VARIATIONS

- **“Show <program>”**
- **“Open <program>”**

### ALIASES

The following are aliases for common programs:

- Internet Explorer: IE, Pocket IE, Browser
- Messaging: E-mail, Inbox

## GETTING PHONE STATUS

You can set the ring volume and configure flight mode plus learn the battery level, signal strength, date and time using voice commands.

### SAY

- **“What time is it?”** to hear the current time.
- **“What date is it?”** to hear the current date.
- **“What is my battery level?”** to hear the current battery level.
- **“Turn flight mode on”** to turn on flight mode and disable all wireless radios including Bluetooth, WIFI and cellular phone.
- **“Turn flight mode off”** to turn off flight mode and restore the previous state of all wireless radios including Bluetooth, WIFI and cellular phone.
- **“Set Profile <profile name>”** to select the specified profile.
- **“What is my signal strength?”** to hear the current state of the phone on the network.
- **“What calls have I missed?”**
- **“What missed calls do I have?”** to hear each missed call and reset the missed call count.

## GETTING VOICE COMMAND HELP

Context sensitive help is always available to assist you with the currently available commands.

## VARIATIONS

- “Help”
- “What can I say?”
- “What are my choices?”

WHILE LISTENING TO CHOICES, YOU CAN PUSH THE VOICE COMMAND BUTTON TO INTERRUPT AND SAY

- “<choice>” to choose that choice

## PERSONALIZATION

Navigate through [Start] [Applications] [Voice Command] so as to begin the personalization.

## GENERAL OPTIONS

There are many choices in the Voice Command feature of your phone. You can enable, disable, password protect, and control availability.

- **Voice Enabled** - When yes, Voice Command is running and waiting for you to press and release the Voice Button.

- **Voice Button** - choose the hardware button that works best for you. Note, some buttons will have another behavior which will be replaced with or compete with Voice Command.

### ■ Availability -

- When set to **Always Available**, Voice Command will always react to the Voice Button.
- When set to **Password Protected**, Voice Command is disabled before the system password is entered or when button lock is engaged. This prevents others from using voice commands to access your data while the device is locked. Note if the current security policy prevents overriding the password screen in this manner, this checkbox will not appear.

### ■ Announcement Routing -

- When set to **Speaker Only**, Voice Command will announce through the speaker.
- When set to **Bluetooth Only**, Voice Command will announce through the Bluetooth.
- When set to **Bluetooth if Available**, if Bluetooth is connected the device, will announce through the Bluetooth, otherwise will announce through the speaker.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



# VOICE COMMAND

## PHONE OPTIONS

When using the Voice Command feature to place and receive calls, you will have the option of having your commands confirmed before being carried out.

- **Call Confirmations** – When yes, Voice Command asks you to confirm that the correct name was recognized before placing the call.
- **Dial Confirmations** – When yes, Voice Command asks you to confirm that the correct number was recognized before placing the call. This also applies to callback and repeat
- **Announce Calls** – When yes, Voice Command will speak the calling name or number aloud interleaved with the current ring tone.

## CALENDAR OPTIONS

Voice command can give verbal reminders of appointments in your calendar according to the schedule you specify.

- **Calendar Reminders** – Voice Command reads Calendar reminders aloud based on the value of this option. Choices are: Yes or No.

## MEDIA OPTIONS

Voice command can also give you background information on any media file you choose to play.

- **Media Selections** – When yes, Voice Command announces the name of the album, artist, or genre that you choose.

## GENERAL TIPS

Voice command has many features to manage. This section describes some of the simple ways to manage Voice command.

**How do I get Help?** – Say “**Help**”, it is context sensitive and will assist you with currently available commands.

**Do I have to wait until a question finishes to answer?** – No. You can press the Voice Command Button anytime during a question to interrupt. As soon as you see the microphone icon, you can speak your answer.

**What’s a quick way to cancel?** – Try one of the following:

- You can press and hold the Voice Command Button to cancel the current interaction. (\*Not available on all devices)
- You can respond with “**Cancel**”.

**Changing the Voice Command Button** – To select a Voice Command Button, see Using the Voice Command Button.

**Longer command variations are easier to recognize** – If you are having trouble with recognition, try using the longest command variation. For example, speak “Correct” instead of “Yes” to place a phone call.

**Does Voice Command work better if I yell at it?** – No. When your voice is too loud, distorted audio is sent to Voice Command. Likewise, if you speak too close to the microphone, it will be more difficult to recognize your speech.

**How do I get the best recognition results?** – For best results, adjust your microphone gain setting as described in Getting Started and speak normally.

**Pause before speaking** – Wait until after the microphone icon appears before speaking. If you speak too soon, Voice Command will miss the beginning of your response.

## PHONE AND CONTACT TIPS

You will want to use some of the information in this section to make using your phone and contacts list with Voice command easier.

- **How do I call voicemail?** – Make a contact named ‘voicemail’ and add each of your voicemail numbers. Now you can simply say “Call Voicemail at Home”.
- **Feel free to use friendly names** – You can name contacts with friendly names such as Home, Mom, or Dentist. After doing this, call by simply saying “Call Home”.
- **Synchronizing fewer contacts** – (For desktop sync only, doesn’t work with server sync) You can save memory and improve recognition by synchronizing only the contacts you need. Open ActiveSync on your PC, and choose **Tools → Options → Contacts → Settings**. Select either individual contacts or categories to sync.
- **Redial and callback are easier than dialing** – Use “Redial” to call the last person you called, and “Callback” to call the last person who called you.
- **Don’t make long pauses during digit dialing** – If you pause for a long time, Voice Command will attempt to recognize the incomplete number.
- **Call a contact at a location** – Speed up calling by including the location. For example, “Call Karen Archer at home”.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

- **What's the best way to enter couples as a contact?** – If you know A & B Smith, try putting '& B' into the middle name field. This way you can either “**call A Smith**” or “**call A and B Smith**”.
- **What's the best way to enter company abbreviations?** – If you are having trouble getting recognition on a company of the form 'ABC Painting' try renaming to 'A. B. C. Painting' to clarify that these letters are spoken individually.

## READING APPOINTMENTS TIPS

Voice command will act as you have instructed when you want it on or off in different situations.

- **Quiet Voice Command during a meeting or a movie** – Voice Command will not make any noise if the device volume is off or set to vibrate.
- **Does the reminder stop when I press the Dismiss button?** – Yes. Voice Command cancels the reminder announcement when the reminder window disappears.
- **Put names of meeting attendees in appointments** – Try including meeting attendee names in the subject or location of an appointment so you'll hear them when it is announced.

## PLAYING MUSIC TIPS

There are some standard commands the Voice command is already designed to receive. Using these commands will make playing music on your phone easier.

- **What song is this?** – Easily identify music by asking “**What song is this?**”
- **Random Play** – Say “**Shuffle on**” to play your selection in random order.
- **How do I select an album by a specific artist?** – Say “**Play Album by <Artist>**”.
- **Is there a faster way to choose music?** – Yes. If you don't want to be guided through your selection, say “**Play <album>**”, “**Play <artist>**”, “**Play <genre>**”, or “**Play album by <artist>**”.
- **How can I choose the current selection?** – You can interrupt Voice Command and say “**That One**” to select the current album, artist, or genre.
- **How do I change the Media Player skin?** – Use the Skin Chooser: tap [**Start**] [**AT&T Music**] [**Windows Media Player**] [**Menu**] [**Options**] [**Skins**] and choose a different skin. The included Voice Command skin only works in the portrait 240x320 screen size.

- **Sometimes the artist isn't what I expect**  
– Voice Command uses the AlbumArtist property to organize tracks by artist. This is different from the Artist property displayed by Windows Explorer and by default in Windows Media Player.
- **How do I modify the AlbumArtist?** – To view the AlbumArtist property in Windows Media Player, switch to Media Library, right-click on the column headings and select “**Album Artist**”. You may edit this property once it is visible.
- **How do I use DRM content?** – In order to play files that have been secured using Digital Rights Management (DRM) you must copy them to your device using the Copy to CD or Device feature in Windows Media Player.
- **What's the fastest music layout?** – Store all your tracks in one folder for fastest access to media.

## STARTING PROGRAMS TIPS

To start programs on your phone without pushing buttons, use Voice command to access programs you have already identified.

- **Voice-enable IE Favorites** – If you copy a favorite from \Windows\Favorites and paste it into \Windows\Start Menu, you can open it by saying “**Start <favorite>**”.
- **Rename a program so it's easier to say** – You can change the name of a program directly on the device using a File Explorer type application or using the Explore functionality in ActiveSync.

## TROUBLESHOOTING

The following troubleshooting tips will help you work around common problems:

General Troubleshooter  
Phone and Contacts Troubleshooter  
Reading Appointments Troubleshooter  
Playing Music Troubleshooter  
Starting Programs Troubleshooter

## GENERAL TROUBLESHOOTER

This section contains answers to some of the most common questions you will have when using Voice command with your Pantech duo™.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

**The Voice Command Button doesn't work when the password screen is displayed** – The password screen blocks the Voice Command Button to avoid other people from placing phone calls while your device is locked. To enable, uncheck the 'Password Protected' option. Note some organizations prevent this override from working due to increased corporate security measures.

**I only hear a thunk sound but don't see the microphone** – This means that you are holding the Voice Command Button too long. This can be activated with the press and hold to disable the feature, which is helpful in meetings when it isn't convenient to speak cancel aloud.

**The Voice Command melody doesn't play** – Try the following:

- Tap the speaker icon at the top of the screen. Verify that the volume is loud enough and not muted.
- Verify that the System Sound volume within the current profile is loud enough.

**The microphone icon doesn't display** – Try the following:

- Make sure the button you're pressing is assigned to Voice Command.

- Make sure you are not holding the button long enough to engage the press and hold to cancel feature.

**I can't use the Voice Command Button reliably** – On some devices, one of the available buttons is a rocker switch. On this type of button it is very easy to accidentally press the UP or DOWN rocker instead of the button. Try assigning Voice Command to another button.

**Voice Command says "Try again" or the microphone icon disappears** – Try the following:

- Pause longer before speaking.
- Move your device further away.
- Speak in a normal tone to avoid pausing between words.
- Move to a less noisy environment.
- Make sure you didn't disable the command in Voice Command settings.
- Use the Notes application to record your voice and playback at full volume. If the playback sound volume is very soft, this device may be optimized for close talk use and you will need to move the device closer.

**Recognition doesn't work** – Some devices require a reset before Voice Command will operate.

## PHONE AND CONTACT TROUBLESHOOTER

These are common questions users have about using Voice command with their phones.

**I can't use Voice Command during a call** – Voice Command is temporarily disabled during phone calls.

**I say a contact name but it is not recognized** –

- Contacts without phone numbers cannot be called. Make sure that this contact has at least one phone number.
- Sometimes contacts are filed as a different name. Make sure that the name displayed in the contact list is the same as the first, middle, last name (or company) of the contact.
- Sometimes names have pronunciations that are not apparent to Voice Command. Try changing the spelling of the name.

**I can't access my contacts** – Contacts may become unavailable due to insufficient memory. Try increasing the amount of program memory, or try synchronizing fewer contacts to the device.

**Phone OFF/SIM Lock** – If you turn the phone off or have SIM lock enabled, phone commands will be recognized, but will not work.

## READING APPOINTMENTS TROUBLESHOOTER

**Calendar reminders are not being announced**

- Verify that the Announce Calendar Reminders option is enabled.
- If you want appointments announced during meetings, make sure that the 'Only during free time' is not enabled.
- See Personalization for more information on these options.

## PLAYING MUSIC TROUBLESHOOTER

**Playing the first song takes a long time** – Store all your tracks in one folder for fastest access to media.

**My device cannot find my files** – If your device cannot find files on your storage card, try removing it and re-inserting it.

**Voice Command can't find some tracks** – If your media files lack track information, Voice Command may not find them. Add track information with Windows Media Player on your desktop. Voice Command supports only WMA and MP3 files in its index.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## STARTING PROGRAMS TROUBLESHOOTER

**Why am I getting a program when I ask to show a contact?** – In order to support the most natural command style the word show is shared between show application and show contact. To specify an application try the variation 'start application'. To specify a contact try the variation 'lookup name'.

# TASK MANAGER

Task Manager will help you resolve problems when the phone freezes. It can also help you solve memory problems and allow you to terminate unnecessary tasks.

- 1** On the Home screen, press **[Start] [All Programs]**, select **Applications**, press **OK**.
- 2** Scroll to **Task Manager** and press **OK**.
- 3** Press **[Stop]** to terminate programs.

If you want to check the battery status, memory and storage, press **[Menu]** and select **[Status Info]**.

You can check the remaining battery power level. And also get information of remaining memory in use for memory and storage.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



## INTERNET SHARING

You can select PC connection. And also change Bluetooth settings.

## GET TELENAV

Your handset comes with GPS navigation. Select 'Get Telenav', and then follow the on-screen instructions.

But this device does not have built-in GPS capabilities, so you need GPS receiver.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## MY-CAST WEATHER – DEMO

Now you can get weather on your cell phone!  
Anytime and anywhere you are.

For more information, check the website  
<http://www.my-cast.com>

# MYSFACE MOBILE

MySpace Mobile is a new service that will allow customers to interact with MySpace through their mobile phones. Customers will pay an extra charge per month plus data charges in order to send and receive MySpace messages, update Myspace blogs, read and post comments, browse and search for Myspace friends, and upload photos directly to MySpace.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

Open and view PDF files received via e-mail, downloaded from the Internet or transferred over the network on the Smartphone with Westtek's ClearVue PDF. With the integrity of the original files intact, the information can be accessed just as the author intended. ClearVue PDF does not require any file conversion, desktop connection or ActiveSync® filters. All files are accessible from whenever and wherever.

For more information, check the website  
<http://westtek.com>

## CHAPTER 14

# SETTINGS

Choosing the Settings option from the Home screen allows you to view and in some cases change the status of your phone, the hardware and software version, the phone number and other important reference information about your phone.

- PHONE
- SOUNDS
- PROFILES
- HOME SCREEN
- CLOCK
- CONNECTIONS
- SECURITY
- REMOVE PROGRAMS
- POWER MANAGEMENT
- IPM POWER MODE
- ACCESSIBILITY
- REGIONAL SETTINGS
- ERROR REPORTING

## AUTO ANSWER

Set how quickly calls are automatically answered during hands-free operation. These settings do not apply when the ring type is Silent.

## AUTO LOCK

Refer Basic functions of the Chapter 2 Basic Operation.

## CALL FORWARDING

- 1 On the Home screen, click **[Start] [All Programs] [Settings] [Phone] [Call Forwarding]**.
- 2 Choose one of the following:
  - **Unconditional** to forward all calls.
  - **No Reply** to forward calls when your line is not answered.
  - **Busy** to forward calls when your line is busy.
  - **Unavailable** to forward calls when your phone is off or out of service range.
  - **Data calls** to forward all data calls.
  - **Fax calls** to forward all fax calls.

- 3 Enter the number to which you want the calls forwarded.
- 4 Make sure **Enable call forwarding** is selected.
- 5 Click **Done**.

## CALL OPTIONS

You can customize settings related to call functions, such as an answering option, voicemail and SMS access.

- 1 On the Home screen, click **[Start] [All Programs] [Settings] [Phone] [Call Options]**.
- 2 Available Setting Options:
  - **Any key answer:** When this option is activated, you can answer incoming calls by pressing any key
  - **Show SIM contacts:** With this option is activated, the contact cards stored on the SIM card display in Contacts.
  - **Phone number:** Check your phone number.
  - **Voice mail number:** When you insert your SIM card into your phone, the phone automatically detects and sets your voicemail number.

- **Text messages service center:** When you insert your SIM card into your phone, SMS accesses the number by default. If not, you can manually enter the numbers obtained from your service provider.
- **Country code:** You can enter a country code used will be automatically added before a phone number when dialing.
- **Area code:** You can enter an area code. The code used will be automatically added before a phone number when dialing.

**3** Click **Done**.

## TURN CALL WAITING NOTIFICATIONS ON AND OFF

During a phone conversation, you will be notified of an incoming call if this option is selected.

- 1** On the Home screen, click **[Start] [All Programs] [Settings] [Phone] [Call Waiting]**.
- 2** Select or clear **Provide call waiting notifications**, then click **Done**.

## CALLER ID

When you place a call, your phone number can be displayed to or hidden from the person to whom you are calling. Using this option, you can enable or disable the display of your caller identification. You can choose from Everyone, No one, or Only my contacts.

## CHANNELS

This option allows you to set the cell broadcast (CB) message receipt and set up broadcast channels from which you want to receive CB messages.

- **Enable channels:** Select to enable the receipt of CB messages.
- **Receive channel list:** Select to receive a list of all available broadcast channels from the network.
- **Language:** Select your preferred languages to display CB messages.



### NOTE

*To edit the channel list, press the Menu soft key and select Edit Channels. Then press the Menu soft key and select the options for adding, deleting or editing channels.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



## ● FIXED DIALING

When this option is activated, your phone allows outgoing calls only to the limited set of phone numbers. You can call only those numbers that are included in the Fixed Dialing Number list or which begin with the same digit(s) as a phone number on the list.

## ● SELECT NETWORKS

- 1 On the Home screen, click **[Start] [All Programs] [Settings] [Phone] [Networks]**.
- 2 Choose one of the following:
  - **Manual** to select a specific network
  - **Automatic** to select more networks automatically
- 3 Click **Menu** and choose one of the following:
  - **Find a New Network**
  - **Select a Network**


Click the network you want to use, then click **Done**.

## ● ADD A NETWORK

- 1 On the Home screen, click **[Start] [All Programs] [Settings] [Phone] [Networks]**.
- 2 Click **Menu > Find a new Network**.
- 3 Do one of the following:
  - Select the network checkbox(es) you want to add. Then click **Done**.
  - If you don't see the network you want, click **[Menu] [Add]** and select a network from the list.

## ● DISPLAY YOUR PHONE NUMBER

For a display of your phone number, the “Owner Number” selection from the settings page will display the number.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Settings** and press **OK**.
- 3 Select **[Phone] [More...] [Owner Number]**.

## SERVICE DIALING NUMBERS (SDN)


You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers include emergency numbers, customer service numbers and directory inquiries.

### NOTE

*This menu is available only when your SIM card supports Service Dialing Numbers.*

## SELECT TTY MODE

Your phone is able to operate with TTY (Teletypewriter) digital modes. This feature is system dependent and may not be available in all areas.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Settings** and press **OK**.
- 3 Scroll to **[Phone] [More...]** **[TTY Mode]** and press **OK**.
- 4 Select TTY mode (**Full, Talk, Hear, Off**).
- 5 Press **[Done]**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14


15

16

The Pantech duo™ comes with a large standard set of ringtones and sounds. You can also add your own as long as they are in the correct format.

## ● CHANGE OR TURN SOUNDS ON OR OFF

Any sound can be toggled on or off at any time, or you can turn the phone's sound off altogether.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Settings** and press **OK**.
- 3 Scroll to **Sounds** and press **OK**.
- 4 Select the sound setting for a ring tone or an event you wish to change and use the left and right Navigation Keys to alter settings. Press **None** if you don't want to hear a sound.
- 5 Repeat for each event, and press **[Done]**.

### NOTE


*For ring tones, you can use sounds in .wav, .mid, mp3, or .wma file formats.*

### TIP

*When you select a sound, it plays. To hear it again, select **[Menu] [Play]**.*

## ● DELETE A SOUND

You can only delete sounds that you have added. You cannot delete sounds pre-installed in the phone.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Settings** and press **OK**.
- 3 Scroll to **Sounds** and press **OK**.
- 4 Press **[Menu] [Delete Sounds]** and then **OK**.
- 5 Select the sound to delete.
- 6 Press **Yes**.

### NOTE

*You can only delete sounds that you have added. You cannot delete sounds pre-installed in the phone.*

## ● COPY A SOUND FROM YOUR PC TO YOUR PHONE

After a sound file is located on your phone, you can use it for a ring tone. Sound files in .wav, .mid, mp3 or .wma formats can be used.

- 1** Connect the phone to your PC using a USB connection.
- 2** On your PC, copy the sound file you want.
- 3** In ActiveSync on your PC, click Explorer and double-click My Windows Mobile-Based Device.

Do one of the following:

- To save the sound file on your phone, double-click Application Data, double-click Sounds, and paste the file into Sounds folder.
- To save the sound file on your storage card, double-click Storage Card, and paste the file into the folder you want.

### See also

Specify the sound for an event.

01

02

03

04

05

06

07

08

09

10

11

12

13

14


15

16

# PROFILES


## VIEW THE LIST OF PROFILES

You can store a set of parameters and options for your phone in what is known as a “profile”. By developing and selecting a profile you will be establishing the baseline features of operation for the phone.

- 1 From the Home screen, press the left soft key  [**Start**] [**All Programs**].
- 2 Select **Settings** and press **OK**.
- 3 Scroll to **Profiles** and press **OK**.

## EDIT A PROFILE

To edit a profile you’ve already created, you will open that profile, change its settings, and save it again with the same name.

- 1 On the Home screen, use the up and down Navigation Keys to select **Profile** and press **OK**.
- 2 Select the profile to edit.
- 3 Press the right soft key  [**Menu**] and select [**Edit**] from popup menu.

- 4 Modify the settings and press [**Done**].

- 5 To cancel without saving changes, press **Cancel**.

### ! TIP

 
*To revert to the default profile settings, Select a profile and press [**Menu**] [**Reset**] to default.*

## CHANGE THE CURRENT PROFILE

If you have more than one profile on your phone, there are two simple methods of changing to another profile.

- 1 On the Home screen, use the up and down Navigation Keys to select **Profile** and press **OK**.
- 2 Select a different profile from the list.
- 3 Press [**Done**].

### ! TIP

*You can also change the profile by using the Quick List. Press the  key to access the Quick List as quickly as possible.*

## ● CHANGE THE HOME SCREEN APPEARANCE

- 1** On the Home screen, click **[Start]** **[All Programs]** **[Settings]** **[Home Screen]**.
- 2** Under **Home screen layout**, **Color scheme**, and **Background image**, select the options you want.
- 3** Under **Time out**, select the length of time you want the Home screen to be displayed if you are not using the device, and click **Done**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## CLOCK

### SET THE DATE AND TIME

- 1** On the home screen, press **[Start]** **[All Programs]** **[More]** **[Settings]** **[Clock & Alarm]** **[Date and Time]**.
- 2** In **Time Zone**, select your time zone.
- 3** In **Date**, edit the month, day, or year.
- 4** In **Time**, edit the hour, minute, and second.
- 5** Click **[Done]**.

### AUTO UPDATE

**On** – The time is set by importing local time from the network. The user can change the time, but when local time is sent from the network again, like when you change to a different network or move to a different area, the time is reset to the current local time automatically.

**Off** – The time is set by the user regardless of the time information sent from the network.

In both cases, when there is any problem, like the network fails to send the local time, the time is set to the default value, May 9, 2005.

## WIRELESS MANAGER

You can turn the power off to your wireless connections in a single location. This is a quick way to preserve battery power or to prepare your device for an airplane flight.

- 1 On the Home screen, click **[Start] [All Programs] [Settings] [Connections]**.
- 2 Click **Wireless Manager**.
- 3 Do one of the following:
  - Press the button for a desired wireless connection type (such as Bluetooth or Phone) to turn it off or on. If it is already turned off, the button is a lighter color and displays an icon marked with an X.
  - Press All to turn all wireless power on or off (available only when more than one wireless type exists on your device).

### NOTE

To change settings for one of the displayed wireless connection types, press **[Menu]** and press the type of settings you want to change.

### TIP

If you connect wireless LAN card to microSD slot, you can use a WI-FI.

## CREATE A BLUETOOTH PARTNERSHIP

Ensure that the two devices are within close range and that both Bluetooth-enabled devices are visible.

- 1 On the Home screen, click **[Start] [All Programs] [Settings] [Connections] [Bluetooth]**.
- 2 Click **[Add New Device]**. Your device searches for other Bluetooth-enabled devices and displays them in the list.
- 3 Select the device with which you want to create a Bluetooth partnership, and click **[Next]**.
- 4 In **Passcode**, if you want to use a Passcode (recommended for enhanced security), enter an alphanumeric Passcode between 1 and 16 characters, and click **[Next]**. Otherwise, leave **Passcode** blank, and click **Next**.
- 5 Enter the same passkey on the other device.

### TIP

Once you create a partnership, the Bluetooth-enabled devices don't need to be visible to beam information between them; Bluetooth needs only to be turned on.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



## CREATE A DIAL-UP CONNECTION

Every network connection is different. You should gather all of the relevant information or network settings you need before starting this process.

- 1 On the Home screen, click **[Start] [All Programs] [Settings] [Connections]**.
- 2 Click **Dial-up**.
- 3 Click **[Menu] [Add]**.
- 4 Enter the following information:
  - In **Description**, enter a name for the connection.
  - In **Connects to**, select the network.
  - In **Phone number**, enter the phone number to be used to dial the network.
  - In **User name**, enter your network user name, if required.
  - In **Password**, enter your password, if required.
  - In **Domain**, enter the domain name, if required.
  - Click **Done**.

## CREATE A GPRS CONNECTION

Every network connection is different. You should gather all of the relevant information or network settings you need before starting this process.

- 1 On the Home screen, click **[Start] [All Programs] [Settings] [Connections]**.
- 2 Click **GPRS**.
- 3 Click **[Menu] [Add]**.
- 4 Enter the following information:
  - In **Description**, enter a name for the connection.
  - In **Connects to**, select the type of network to which you will connect.
  - In **Access point**, enter the access point name.
  - In **User name**, enter your user name for the GPRS network, if required.
  - In **Password**, enter your password, if required.
  - In **Primary DNS**, enter the primary Domain Name System (DNS) address, if required.
  - In **Secondary DNS**, enter the secondary DNS address, if required.

- In **IP address**, enter the Internet Protocol (IP) address for the device, if required.

**5** Click **Done**.

The device uses this connection when you open a program that connects to the Internet.

## ● CREATE A PROXY CONNECTION

Every network connection is different. You should gather all of the relevant information or network settings you need before starting this process.

**1** On the Home screen, click **[Start] [All Programs] [Settings] [Connections]**.

**2** Click **Proxy**.

**3** Click **[Menu] [Add]**.

**4** Enter the following information:

- In **Description**, enter a name for the connection.
- In **Connects from**, select the type of network from which you will connect.
- In **Connects to**, select the type of network to which you will connect.

- In **Proxy [name:port]** enter the proxy server name and port number in this form: server name:port number.

■ In **Type**, select the type of proxy connection to create.

■ In **User name**, enter your user name for the network to which you will connect.

■ In **Password**, enter your password.

**4** Click **Done**.

## ● CREATE A VPN CONNECTION

Every network connection is different. You should gather all the relevant information or network settings you need before starting this process.

**1** On the Home screen, click **[Start] [All Programs] [Settings] [Connections]**.

**2** Click **VPN**.

**3** Click **[Menu] [Add]**.

**4** Enter the following information:

- In **Description**, enter a name for the connection.
- In **VPN type**, select the type of VPN.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

- In **Server**, enter the VPN server name.
  - In **Connects from**, select the type of network from which you will connect to the VPN (typically **The Internet**).
  - In **Connects to**, select the type of network to which you will connect (typically **My Corporate Network**).
  - In **User name**, enter your user name for the VPN.
  - In **Password**, enter your password.
  - In **Domain**, enter the domain name, if required.
  - If you selected **IPSec** in **VPN type**, in **IPSec authentication**, select the type of authentication: **Pre-Shared Key** or **Certificate**.
  - If you selected **Pre-Shared Key** in **IPSec authentication**, in **IPSec Pre-shared key**, enter the key.
- 5** Click **Done**.

## END A BLUETOOTH PARTNERSHIP

- 1** On the Home screen, click **[Start] [All Programs] [Settings] [Connections] [Bluetooth]**.
- 2** Click **[Menu] [Devices]**.
- 3** Select the Bluetooth partnership you want to end.
- 4** Click **[Menu] [Delete]**.

## DELETE A DIAL-UP CONNECTION

- 1** On the Home screen, click **[Start] [All Programs] [Settings] [Connections]**.
- 2** Click **Dial-up**.
- 3** Select the connection to delete.
- 4** Click **[Menu] [Delete]**.
- 5** Click **Yes**, and click **Done**.

## DELETE A GPRS CONNECTION

- 1 On the Home screen, click **[Start]** **[All Programs]** **[Settings]** **[Connections]**.
- 2 Click **GPRS**.
- 3 Select the connection to delete.
- 4 Click **[Menu]** **[Delete]**.
- 5 Click **Yes**, and click **Done**.

## DELETE A PROXY CONNECTION

- 1 On the Home screen, click **[Start]** **[All Programs]** **[Settings]** **[Connections]**.
- 2 Click **Proxy**.
- 3 Select the connection to delete.
- 4 Click **[Menu]** **[Delete]**.
- 5 Click **Yes**, and click **Done**.

## CHANGE AN INTRANET URL

- 1 On the Home screen, click **[Start]** **[All Programs]** **[Settings]** **[Connections]**.

- 2 Click **[Menu]** **[Advanced]** **[Menu]** **[Work URL Exceptions]**.
- 3 Select the URL to edit.
- 4 Click **[Menu]** **[Edit]**.
- 5 Edit the URL, then click **Done**.

## MAKE YOUR DEVICE VISIBLE

In order for your device to receive beamed information, beaming devices or computers must be able to detect it.

- 1 On the Home screen, click **[Start]** **[All Programs]** **[Settings]**.
- 2 Click **[Connections]** **[Bluetooth]**.
- 3 Select **Turn on Visibility**, and click **Done**.

Other Bluetooth-enabled devices can now detect your device and try to beam information to it, establish a Bluetooth partnership, or use a Bluetooth service.

### **!** TIP

*If you no longer want your device to be visible, select **Turn off Visibility**.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## TURN ON AND OFF BLUETOOTH

By default Bluetooth is turned off. If you turn it on, then turn off your device, Bluetooth also turns off. When you turn on your device again, Bluetooth turns on automatically.

- 1 On the Home screen, click **[Start] [All Programs] [Settings] [Connections] [Bluetooth]**.
- 2 Select or clear **Turn on Bluetooth**, and click **Done**.

### NOTE

*You can also turn off Bluetooth using Wireless Manager. Click **[Start] [Settings] [Wireless Manager]**.*

## RECEIVE BEAMED INFORMATION

- 1 On the Home screen, click **[Start] [All Programs] [Settings]**.
- 1 Click **[Connections] [Beam]**.
- 1 Check **Receive incoming beams**.
- 1 Click **Done**.

### NOTE

*To receive beams using Bluetooth, ensure that Bluetooth is turned on and that your device is visible and within close range.*

## BEAM AN ITEM

In the Calendar, Contacts, Notes, Tasks, and Pictures programs, you can beam files and information to other devices using Bluetooth.

- 1 From the program, select the item you want to beam, such as an appointment in Calendar, a task in Tasks, a contact card in Contacts, or a picture in Pictures. In Calendar, first open the appointment in Agenda view.
- 2 Click **[Menu] [Beam]**.
- 3 Select the device to which you want to send the item.
- 4 Click **Beam**.

## SET UP AN OUTGOING BLUETOOTH COM PORT

The **New Outgoing Port** menu command is available only if one or more Bluetooth-connected devices support serial (COM) connections.

- 1 Make sure that your device is connected to the other device via Bluetooth.
  - 2 On the Home screen, click **[Start] [All Programs] [Settings] [Connections]**.
  - 3 Click **[Bluetooth] [Menu] [COM Ports]**.
  - 4 Click **[Menu] [New Outgoing Port]**.
  - 5 Select a numbered COM port from the list. If the port cannot be created, it is in use. Select a different numbered port.
  - 6 To use this COM port to communicate only with devices with which your device has a Bluetooth partnership, select the **Secure Connection** check box.
  - 7 Click **Done**.
- 2 On the Home screen, click **[Start] [All Programs] [Settings] [Connections]**.
  - 3 Click **[Bluetooth]**.
  - 4 Click **[Add new device]**. Your device searches for other Bluetooth-enabled devices and displays them in the list.
  - 5 Click the name of the Bluetooth-enabled hands-free device.
  - 6 In **Passcode**, enter the alphanumeric passcode for the Bluetooth-enabled hands-free device. You can find this information in the manufacturer's documentation for your hands-free device. Click **Next**.
  - 7 Enter a name for the device, and click **Next**. Then click **Done**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16


## SET UP A BLUETOOTH-ENABLED HEADSET

You can use a Bluetooth-enabled headset (or other Bluetooth-enabled hands-free device) with your device when you create a Bluetooth partnership between your device and the Bluetooth headset.

- 1 Make sure that the two devices are turned on and within close range, and that the Bluetooth-enabled headset is visible.

Your Pantech duo™ has several easy-to-use security features. You can enable the device lock, or you can enable security certificates such as SSL.


## ● ENABLE THE DEVICE LOCK

- 1** From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2** Select **Settings** and press **OK**.
- 3** Scroll to **Security** and press **OK**.
- 4** Select **Device Lock** and press **OK**.
- 5** Use the left/right Navigation keys or **OK** key to enable and activate **'Prompt if device unused for'**.
- 6** Use the Navigation Keys to set the amount of time for the phone to be inactive before the lock is automatically activated.
- 7** Enter and confirm your password.
- 8** Press **[Done]**.

## ! IMPORTANT NOTE


*To ensure you can always make emergency calls at any time, do not begin your password with the digits of your local emergency number.*

## ! TIP

*To quickly lock the phone, press the  briefly to access the Quick List, select **Lock**.*


## ● DISABLE THE DEVICE LOCK

When you disable a device lock, remember to disable the automatic feature that locks the device if it is unused for a specified amount of time.

- 1** From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2** Select **Settings** and press **OK**.
- 3** Scroll to **Security** and press **OK**.
- 4** Select **Device Lock** and press **OK**.
- 5** Enter the password, and press **[Done]**.
- 6** Use the Navigation Keys to disable **'Prompt if device unused for'** before the lock is automatically activated.
- 7** Press **[Done]**.


**VIEW A CERTIFICATE**

Your phone is able to use personal security certificates that you add to the phone and it also has root certificates that come pre-installed.

- 1** From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2** Select **Settings** and press **OK**.
- 3** Scroll to **Security** and press **OK**.
- 4** Select **Certificates** and press **OK**.
- 5** Choose one of the following:
  - Personal to view the list of personal certificates.
  - Intermediate to view the list of intermediate.
  - Root to view the list of root certificates.
- 6** Select the certificate you want to view and press **OK**.

**DELETE A CERTIFICATE**

Be careful when deleting certificates: select only the certificate you intend to delete. Root certificates should only be deleted when you are certain you do not need that security on the phone.

- 1** From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2** Select **Settings** and press **OK**.
- 3** Scroll to **Security** and press **OK**.
- 4** Select **Certificates** and press **OK**.
- 5** Choose one of the following:
  - Personal to view the list of personal certificates.
  - Intermediate to view the list of intermediate
  - Root to view the list of root certificates.
- 6** Select a certificate.
- 7** Press **[Menu]**, then Delete.

** IMPORTANT NOTE**

*Deleting a root certificate can make it impossible to use Secure Sockets Layer (SSL) protocols, which help you to send personal information more securely.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



## ● ACTIVATING THE SIM PIN

When SIM PIN is enabled, you must enter your PIN supplied with your phone each time you turn the phone on or insert the current SIM card into another device. Consequently, any person who does not have your PIN cannot use your phone without your approval.

- 1 On the Home screen, press the **[Start]** soft key.
- 2 Select **[Settings] [Security] [Enable SIM PIN]**.
- 3 Enter the **PIN** and press the **[Done]** soft key.

## ● LOCKING THE SIM CARD

When SIM Lock is enabled, your phone works only with the current SIM card. To use another SIM card, you must enter the SIM lock password.

- 1 On the Home screen, press the **[Start] [All Programs]** soft key.
- 2 Select **[Settings] [Security] [Enable SIM Lock]**.
- 3 Enter a password for your SIM card and press the **[Done]** soft key.

- 4 Re-enter the password for confirmation and press the **[Done]** soft key.

## ● CHANGING PIN2

A PIN 2 is used for certain functions supported by the SIM card. You can change the PIN2 supplied with your SIM card to a new one.


- 1 On the Home screen, press the **[Start] [All Programs]** soft key.
- 2 Select **[Settings] [Security] [Change PIN2]**.
- 3 Enter the current PIN2 in the **Old PIN** field, then a new PIN in the **New PIN** field, and re-enter the new PIN in the **Confirm new PIN** field.
- 4 Press the **[Done]** soft key.

## ● ENCRYPTION

When you will want to encrypt any files, select 'Encrypt files placed on storage cards' check box. You can save encrypted files which are placed on a storage card. Such files are readable only by this Windows Mobile-based device.

## ● MASTER CLEAR

When you have purchased your phone, all the settings are pre-configured and installed. Any time you can return your phone to the factory default settings.

- 1 From the Home screen, press the left soft key  [Start] [All Programs].
- 2 Select **Settings** and press **OK**.
- 3 Scroll to **Security** and press **OK**.
- 4 Select **Master Clear** and press **OK**.

### NOTE

- *Master Clear erases all user data and initializes all settings to the factory default mode.*
- *To ensure the operation of Master Clear, the SIM card should be inserted while Device-Lock is unlocked.*

### IMPORTANT NOTE

*If you forgot the password to unlock Device-Lock, follow the steps below to activate Master Clear.*

1. *Switch off the power and remove the SIM card.*
2. *Switch on the power. Press '\*25327#' on the Home screen and then press **OK**.*

01

02

03

04

05

06

07

08

09

10

11

12

13



14

15

16

# REMOVE A PROGRAM

You can remove programs that have been added to the phone at any time. Be sure that you select the right program before removing it.


- 1** From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2** Select **Settings** and press **OK**.
- 3** Scroll to **Remove Programs**.
- 4** Select the program to remove.
- 5** Press the right soft key  **[Menu]**.
- 6** Select **Remove**.

## **NOTE**

*Programs that come pre-installed in the phone cannot be deleted.*

# POWER MANAGEMENT

You can use Power Management to check the battery and configure settings that prolong battery life.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Settings** and press **OK**.
- 3 Scroll to **Power Management** and press **OK**.
- 4 Adjust the following:
  - Backlight time out on battery: select the amount of time for the phone to be idle before the backlight turns off.
  - Backlight time out on AC: select the amount of time for the phone to be idle before the backlight turns off when the phone is plugged into a charger.
  - Display time out: select the number of minutes for the phone to be idle before the Home screen turns off.
  - Keypad light time out: Turns off keypad LED after a set period of time.
  - Display Brightness: select the brightness level for user preferences.

- Keypad light on: The user can select Any time or Custom time.
  - Any time (default): The keypad light turns on whenever a key is pressed.
  - Custom time: The keypad light turns on whenever a key is pressed, but only during the time span designated by the user.
- Keypad light start time: In Custom time mode, the user can set the start time of the time span when the keypad light can be on.
- Keypad light end time: In Custom time mode, the user can set the end time of the time span when the keypad light can be on.

**5** Press **[Done]**.

**!** **TIP**

*Main battery indicates the amount of battery life remaining.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# IPM POWER MODE

(IPM: Intel Power Management)

This mode is used to accelerate the operating speed of the smartphone.

Two modes are available: turbo mode and default mode.

In turbo mode, the CPU operates at its full speed of 416 MHz for about five seconds.


It may seem faster to the user.

One disadvantage is increased consumption of power.

In normal mode, the operating speed is automatically controlled according to the CPU's capacity utilization and power consumption is modest.

The default value is set to normal mode.

The accessibility settings will determine the size of the text and characters, time outs, call alerts, and volumes on the phone.

- 1** From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2** Select **Settings** and press **OK**.
- 3** Select **'More...'**, press **OK**, and then select **Accessibility**.
- 4** Using the left and right Navigation Keys, select your preferences for the following:
  - System font size: set the size of the font that is displayed on the screen.
  - Multi-press time out: set the length of time between key presses when entering text in Multi-tap mode.
  - Confirmation time out: set the delay before an unconfirmed action times out.
  - In-call alert volume: set the volume of sounds that play during a call.
- 5** Press **[Done]**.

**!** **TIP**

*You need to press 'More...' in the Settings popup menu to access Accessibility*

01

02

03

04

05

06

07

08

09

10

11

12

13


14

15

16

# REGIONAL SETTINGS

You can specify the language, locale, date and time style, as well as number and currency formatting options.

- 1** From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2** Select **Settings** and press **OK**.
- 3** Select **'More...'**, press **OK**, then select **Regional Settings**.
- 4** Adjust the following:
  - **Language:** select your preferred language.
  - **Locale:** select the locale for the language you selected. The locale option automatically changes the format of the remaining options (such as date, time, and currency) according to the locale you specify.
- 5** Press **[Done]**.

## **NOTE**

*You must turn your phone off and on again for the changes to take effect.*

## **TIP**

*You need to press **'More...'** in the Settings popup menu to access Regional Settings.*


# ERROR REPORTING

Error Reporting sends information needed by technical support groups to diagnose a program error for a device running Windows Mobile software. A text file is created whenever an error is detected, and can be delivered to support personnel if you choose to send it. If a program error occurs, Error Reporting starts automatically. The information sent to Microsoft can be utilized by their programming groups. The data is used for quality control and will not be used for tracking individual users or installations for any marketing purpose.

With Error Reporting, the only data that is initially collected is technical data about the state of the program and your device when the error occurred. No documents (or any data contained in them) are intentionally sent with the report information. To ensure further security, the data that is collected is transmitted via a secure connection and is kept confidential and anonymous in a limited-access database. This approach is in keeping with the privacy regulations of the European Union (EU) as well as the Fair Information Practice Principles of the Federal Trade Commission. To view the Fair Information Practice Principles, visit the Federal Trade Commission Web site at [www.ftc.gov/reports/privacy3/fairinfo.htm](http://www.ftc.gov/reports/privacy3/fairinfo.htm).

## TURN ERROR REPORTING ON / OFF

You can turn the error reporting on and off as you need it without affecting the error data collected by the phone.

- 1 From the Home screen, press the left soft key  **[Start] [All Programs]**.
- 2 Select **Settings** and press **OK**.
- 3 Select **'More...'**, press **OK**, then select **Error Reporting** and press **OK**.
- 4 Use the left and right Navigation Keys to Enable or Disable Error Reporting.
- 5 Press **[Done]**.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16





## CHAPTER 15

### GAMES

There are many games included with your Pantech duo™.

- SOLITAIRE
- BUBBLE BREAKER
- MIDNIGHT POOL
- BRAIN CHALLENGE
- SCRABBLE BLAST
- TIGER WOODS PGA TOUR 07
- JEWEL QUEST 2

# SOLITAIRE

## START A GAME OF SOLITAIRE

- 1 On the Home screen, press **[Start]** **[All Programs]** **[Games]** **[Solitaire]**.
- 2 Start new game.
- 3 When you have finished playing a game, begin a new one by pressing **[Menu]** **[New Game]**.

## HOW TO MOVE CARDS

A number or character is displayed above each card stack.

- 1 On the keypad, press the number or character above the card you want to move, and then press the number or character above the stack to which you want to move the card.
- 2 To move a card up to one of the four stacks in the right-hand corner of the screen, press the number above the card in the lower stack, and then press up Navigation Key.

## PLAY SOLITAIRE

- 1 Move any aces on the seven stacks to the four card spaces at the top of the screen, and then make any other available plays.
- 2 When you have made all available plays, press Draw to turn over cards.



### NOTE

*The top card that is face up on the deck is always available for play.*

# BUBBLE BREAKER

## OVERVIEW OF BUBBLE BREAKER

Bubble Breaker is easy to learn, yet difficult to master. The objective is to align similar bubbles to form large blocks of bubbles before bursting them. The more bubbles you have in the block before they are burst, the greater number of points you will receive.

To burst a bubble, the bubble must be connected to other similar bubbles on the playing board. If you press a bubble that is connected, those connected bubbles will be highlighted and a text bubble will pop up, displaying that block's potential bubble points. Press the selection again to burst the bubbles.

## BREAKER BONUS

If you manage to leave fewer than five bubbles on the board, you will be rewarded with more points at the conclusion of the game.

### Undo

Moves in Bubble Breaker can be undone. To take back the last move you made, press **[Menu]** **[Undo]**.

## START A GAME OF BUBBLE BREAKER

- 1 On the Home screen, press **[Start]** **[All Programs]** **[Games]** **[Bubble Breaker]**.
- 2 Set Bubble Breaker options.

Bubble Breaker allows you to vary your playing experience. In Bubble Breaker, press **[Menu]** **[Options]**, and select the following:

- **Play Sounds:** Turns game sounds on or off.
- **Guest Mode:** Enables guests to play without affecting the statistics.
- **Style:** Changes the style for new games as follows:
  - **Standard:** the default mode of play where there is a set number of bubbles that will not increase.
  - **Continuous:** whenever a vertical set of bubbles has been burst and the remaining bubbles have shifted over to the right, a new, randomly selected column of bubbles will pop up on the left, allowing a game to be played for an extended amount of time.
  - **Shifter:** when a set of bubbles has been burst, all remaining bubbles to the top and left will shift down and to the right.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# BUBBLE BREAKER

- **MegaShift:** a combination of the shifter and continuous styles where bubbles will shift down and to the right while empty columns will fill on the left.
- **Breakers:** Changes the color of the bubbles from Colorful to Grayscale.

## ● VIEW BUBBLE BREAKER STATISTICS

Bubble Breaker records your statistics for each playing style.

Press **[Menu]** Statistics.

- **Games:** the total number of games played.
- **Average:** the average score across all games played in that style.
- **High:** the high score for the particular style.
- **Big Burst:** the highest scoring single burst.



**TIP**

*To reset all your statistics, press Reset.*

## MIDNIGHT POOL – DEMO

In Gameloft's Midnight Pool™, you can pit yourself against a host of colorful characters ranging in skill from amateur to veritable pool shark, challenging them and betting on matches. Link up your trick shots during challenges and games using either US 8-ball, UK 8-ball or 9 ball rules, depending on your preference. Win a match and you're sure to leave with your opponents' respect. Lose, and you'll be lucky to walk out with an empty wallet!

### START A GAME OF MIDNIGHT POOL

- 1** On the Home screen, press **[Start] [All Programs] [Games] [Midnight Pool]**.
- 2** Open the device sideways to play.
- 3** Start game Tournament or Versus or Challenges.
- 4** Set Midnight Pool Options: sound, lines, and cue color.

For more information, check the website <http://www.gameloft.com>.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# BRAIN CHALLENGE – DEMO

Just like your body, your brain needs to exercise to stay in shape. Maintaining it simply involves completing little exercises without pain, stress, or boredom. That's where Brain Challenge™ comes in! It's like a real vitamin boost for your brain. Brain Challenge is more than just a game or program. Brain Challenge is your personal coach and entertaining, easy solution for keeping your brain alert. Using various, amusing exercises, train your brain whenever and wherever you want! Your coach will follow you everywhere on your mobile phone!

## ● START A GAME OF BRAIN CHALLENGE

- 1** On the Home screen, press **[Start] [All Programs] [Games] [Brain Challenge]**.
- 2** Open the device sideways to play.
- 3** Start game Daily Brain Test or Training Room.
- 4** Set Brain Challenge Options: sound, vibration, coach, user profile, and reset game.

For more information, check the website <http://www.gameloft.com>.

# SCRABBLE BLAST – DEMO

SCRABBLE Blast is the newest way to play your favorite word game! Part classic SCRABBLE and part fast-paced puzzle-game, SCRABBLE Blast takes the crossword-style game play you're familiar with to an exciting new level. SCRABBLE tiles fall from the sky, connect them in any direction to make great words and rack up the points. With three unique modes of play, an intuitive control scheme, and statistic tracking, SCRABBLE Blast will keep you glued to your mobile handset in a word making frenzy!

## ● START A GAME OF SCRABBLE BLAST

- 1** On the Home screen, press **[Start] [All Programs] [Games] [Scrabble Blast]**.
- 2** Start Play.
- 3** Set Scrabble Blast Options: sound, vibration, hint, reset my stats, and reset top ten.

For more information, check the website <http://www.eamobile.com>.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



## TIGER WOODS PGA TOUR 07 — DEMO

Tee off with EA SPORTS™ Tiger Woods PGA TOUR® 07! Play as or against Tiger Woods or other PGA TOUR golf legends including: Colin Montgomerie, Vijay Singh, and John Daly. Compete on up to six world class courses. Practice any course for a full round or single hole. 3D views and broadcaster commentary capture every drive, chip, and putt as winning shots earn you Trophy Balls. Statistics track longest drive, number of eagles and more! Prove that you're the greatest golfer ever in this must-have mobile game!

### ● START A GAME OF TIGER WOODS PGA TOUR 07

- 1** On the Home screen, press **[Start] [All Programs] [Games] [Tiger Woods PGA TOUR 07]**.
- 2** Start game Quick start or Tournament or Challenge or Practice.
- 3** Set Tiger Woods PGA TOUR 07 Options: sound, vibration, and unit (yard or meter).

For more information, check the website <http://www.eamobile.com>.

## JEWEL QUEST 2 – DEMO

The Jewel Quest phenomenon continues with all-new addictive puzzle fun. Rupert picks up a new treasure trail in search of the grandest Jewel Board ever! Guide him through the mystery as he explores Africa in search of jewels and his lost love.

### START A GAME OF JEWEL QUEST 2

- 1** On the Home screen, press **[Start] [All Programs] [Games] [Jewel Quest2]**.
- 2** Start New Game.
- 3** Set Jewel Quest 2 option: sound.

For more information, check the website <http://www.iplay.com>.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# MEMO

## CHAPTER 16

# SAFETY AND WARRANTY

This chapter addresses the safety guidelines and precautions to follow when operating your phone. Before operating your phone, please be aware of all the safety details.

This chapter contains the terms and conditions of services and the warranty for your phone. Please review them thoroughly.

- SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES
- SAFETY INFORMATION FOR FCC RF EXPOSURE
- SAR INFORMATION
- FCC HEARING-AID COMPATIBILITY REGULATIONS FOR WIRELESS DEVICES
- FDA CONSUMER UPDATE
- PROTECT YOUR WARRANTY
- MANUFACTURER'S WARRANTY

# SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

*Read this information before using your Handheld Portable Cellular Telephone.*

## ● EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*

NCRP Report 86 (1986) \*

ICNIRP (1996) \*

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities,

---

1\* : American National Standards Institute.

2\* : National Council on Radiation protection and measurements.

3\* : International Commission on Nonionizing Radiation Protection.

government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

## ● ANTENNA CARE

Use only the supplied or an approved replacement antenna.

Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

## ● DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving, please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions so require.

# SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## **!** WARNING:

*FAILURE TO FOLLOW THESE INSTRUCTIONS  
MAY LEAD TO SERIOUS PERSONAL INJURY  
AND POSSIBLE PROPERTY DAMAGE.*

## Warning:

**Operating certain parts of this system requires user attention. Diverting attention away from the road while driving can possibly cause an accident or other serious consequences. Even occasional, short diversions of attention can be dangerous if your attention is diverted away from your driving task at a critical time.**

**Microsoft makes no representations, warranties or other determinations that ANY use of the Software Product is legal, safe, or in any manner recommended or intended while driving or otherwise operating a motor vehicle.**

## **●** ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

## PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

## **OTHER MEDICAL DEVICES**

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

## **POSTED FACILITIES**

Turn your phone OFF where posted notices so require.

## **AIRCRAFT**

FCC and Transport Canada Regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

## **BLASTING AREAS**

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

## **POTENTIALLY EXPLOSIVE ATMOSPHERES**

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle’s engine.

# SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

## PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before using the device, please read all the instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.



DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.



DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using, lay down the unit to avoid possible damage due to instability.



DO NOT expose this equipment to rain or spilled beverages.



DO NOT use unauthorized accessories.



DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized AT&T cellular service center. If unit is disassembled, the risk of electric shock or fire may result.



DO NOT short-circuit the battery terminals with metal items etc.



## WARNING!

- *This product contains a chemical known to the State of California to cause cancer.*
- *This product contains a chemical known to the State of California to cause birth defects or other reproductive harm.*

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



# SAFETY INFORMATION FOR FCC RF EXPOSURE



**WARNING!** Read this Information before using

## CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

## **BODY-WORN OPERATION**

This device was tested for typical body-worn operations with the back of the phone kept 2.0 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 2.0 cm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



## **NOTE**

*For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov).*

# SAR INFORMATION

## THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.\* Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as

to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure.

The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.07 W/Kg and when worn on the body, as described in this user guide, is 0.588 W/Kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The SAR testing for Body-worn operation was performed with a belt clip that provided a 20mm separation. The User's Manual indicates that any holsters/clips used with this device should contain no metallic components.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

# SAR INFORMATION

exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on PP4TX-215.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>.

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## SAFETY INFORMATION FOR BATTERY USAGE

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery has been dropped, specifically on the hard surface, and its damage suspects, take it to the Customer Care Center for correct inspections.
- Improper battery use may result in a fire, explosion or other hazard.

## FCC & Industry Canada Regulatory Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Your mobile device is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile devices. Those guidelines are consistent with safety standards previously set by both U.S. and international standards bodies: American National Standard Institute (ANSI), National Council of Radiation Protection and Measurements (NCRP), and International Commission on Non-Ionizing Radiation Protection (ICNRP). Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. The design of your phone complies with the FCC guidelines and applicable.

## Statement according to FCC part 15.105

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

**Statement according to FCC part 15.19:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Statement according to FCC part 15.21:**

Modifications not expressly approved by this company could void the user's authority to operate the equipment.

**RF exposure FCC**

For body worn operation, to maintain compliance with FCC RF exposure guidelines, use only accessories that contain no metallic components and provide a separation distance of 5 mm (0.2 inches) to the body. Use of other accessories may violate FCC RF exposure guidelines and should be avoided.

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

**Health and Safety Information FCC**

This EUT has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment /general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and had been tested in accordance with the measurement procedures specified in FCC/OET Bulletin 65 Supplement C (2001) and IEEE Std. 1528-2003 Ministry of Health (Canada), Safety Code 6. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit set by the FCC is 1.6 W/kg\*.

\* In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in.

\*\* This device contains 1800 MHz DCS and 900 MHz EGSM functions that are not operational in U.S. Territories; this filing is applicable 850 MHz GSM 1900 MHz PCS operations.

# FCC HEARING-AID COMPATIBILITY REGULATIONS FOR WIRELESS DEVICES

**FCC ID : JYCPC-C810**

**Trade Name/Model(s): AT&T / C810**

**FCC Classification: Licensed Portable**

**Transmitter Held to Ear (PCE)**

**FCC Rule Part(s): §20.19**

**HAC Standard: ANSI PC63.19-2005 D3.6**

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with "normal usage" while using their hearing aid with the particular wireless phone. "Normal usage" in this context is defined as a signal quality that is acceptable for normal operation.

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

For information about hearing aids and digital wireless phone

- **FCC Hearing Aid Compatibility and Volume Control**

*<http://www.fcc.gov/cgb/drol/hearing.html>*

- **Gallaudet University, RERC**

*<http://tap.gallaudet.edu/DigWireless.KS/DigWireless.htm>*

- **Self Help for Hard of Hearing People Inc. [SHHH]**

*<http://www.hearingloss.org/hat/TIPWirelessPhones.htm>*

- **The Hearing Aid Compatibility FCC Order**

*[http://hraunfoss.fcc.gov/edocs\\_public/attachmatch/FCC-03-168A1.pdf](http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf)*



U.S. Food and Drug Administration – Center  
for Devices and Radiological Health Consumer  
Update on Wireless Phones

## 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode.

Whereas high levels of RF can produce health effects (by heating tissue), exposure to low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects.

Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

## 2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown

to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function;

In addition:

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



The National Institutes of Health participates in some inter-agency working group activities, as well. FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subjects of the safety questions discussed in this document.

### **3. What kinds of phones are the subjects of this update?**

The term “wireless phone” refers here to hand-held wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS” phones.

These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user’s head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance

from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

### **4. What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be predisposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don’t know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the

existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

## **5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop – if they do – may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

## **6. What is FDA doing to find out more about the possible health effects of wireless phone RF?**

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the

world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world.

The Project has also helped develop a series of public information documents on EMF issues. FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

## **7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?**

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

## **8. What has FDA done to measure the radiofrequency energy coming from wireless phones?**

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head.

Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

## **9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?**

If there is a risk from these products – and at this point we do not know that there is – it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- \* If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

## 10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

## 11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that

cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. The IEEE has approved this standard in 2000. FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

## 12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones (<http://www.fda.gov/cdrh/phones/index.html>)
- Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety>)
- International Commission on Non-Ionizing Radiation Protection (<http://www.icnirp.de>)
- World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)
- National Radiological Protection Board (UK) (<http://www.nrpb.org.uk/>)

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16

## PROTECT YOUR WARRANTY

Read your Warranty carefully, with special consideration to paragraph seven of the Limited Warranty for your unit.

“Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling, misuse, neglect or accident”.

Many companies are making look-alike accessories and in some cases, promoting their product is equal to or better than the AT&T product. Be careful. Some of these products may not be compatible to use with your AT&T product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-AT&T accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories, which cannot damage or interfere with the functioning of your AT&T product.

# MANUFACTURER'S WARRANTY

## 12 MONTH LIMITED WARRANTY

The AT&T Personal Communications (the Company) warrants to the original retail purchaser of this AT&T handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source. The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to the AT&T Personal Communications for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data

## MANUFACTURER'S WARRANTY

added to your device. In addition, if your wireless device utilizes a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned, the AT&T Personal Communications is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to the AT&T Personal Communications for repair or service.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing.

In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 962-8622.

**THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE**

**PAID BY PURCHASER FOR THE PRODUCT. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.**

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

# MEMO

01

02

03

04

05

06

07

08

09

10

11

12

13

14

15

16



# MEMO