

A decorative graphic consisting of several overlapping, flowing blue lines that create a sense of movement and elegance. One line starts from the left, curves upwards and then downwards, while another line starts from the left, curves upwards and then downwards, and a third line starts from the left, curves upwards and then downwards.

PANTECH P6070

User Guide for P6070

Thank you for choosing the Pantech P6070. The Pantech P6070 has many features designed to enhance your mobile experience. With its unique, stylish design and QWERTY keypad, you will enjoy the entire P6070 experience.

This User Guide contains important and useful information that will maximize your familiarity with all that the Pantech P6070 has to offer.

Some of the contents in this manual may differ from your phone depending on the software of the phone. Actual color may vary.

Your phone is designed to make it easy for you to access a wide variety of content. For your protection, we want you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, we offer privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, the AT&T privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected. In addition, your AT&T phone may be used to access the internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

Service provided by AT&T Mobility. Portions © 2014 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies. All other marks contained herein are the property of their respective owners.

Copyright © 2014. Pantech. All Rights Reserved.

Important Safety Information

Specifications

Design

Touch & QWERTY Slide

Displays

- 260K colors TFT with 3.2" display
- 400*240 (WQVGA) pixels in resolution

Melodies

MP3, AAC, AAC+, eAAC+ and WMA

Camera

Integrated 3M CMOS Camera

- Resolution up to 2048 x 1536 (3,145,728 pixels)
- Mpeg4 and H.264 video recording/playing up to 15fps (QVGA size)
- Self-timer function (Off, 3, 5 or 10 seconds)
- Picture album and video album

Dimensions & Weight

- Weight: 140g/4.94oz (with standard battery)
- Dimensions: 114 x 59 x 12.95 mm

Power Management (Performance)

 
Battery Type	Capacity	Standby Time	Talk Time
Standard Lithium-Ion (Li-ion)	1,230 mAh	Up to 490 hours	Up to 6.8 hours

Operating Frequency

- GSM/GPRS/EDGE 850/900/1800/1900 MHz, UMTS/HSDPA 850/1900/2100 MHz networks in North America, South America, Europe, Africa, and Asia-Pacific where these networks are supported.
- Automatic band switching.

Phone overview


Touch mode view

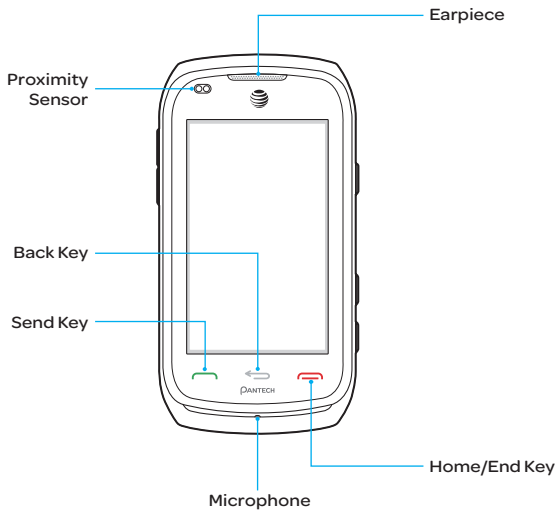

Important Safety Information

Volume keys

 Adjust the earpiece volume.
Launch Multitasking.

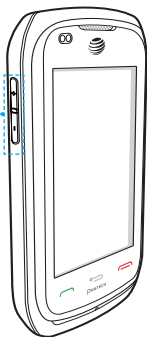

PWR / Lock Key

 
Lock the screen.

Charging / Data Jack

Headset Jack

Speaker

Camera

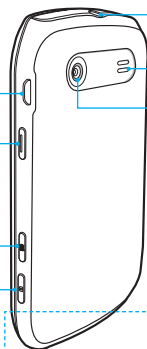

Internal Antenna Area








Camera Button

Take pictures or videos.


Voice command Key

Activate voice commands.

Important Safety Information

Keys	Functions
	Turn on/off the phone if pressed and held. Lock the touch screen.
	Adjust the earpiece volume while making a call. Adjust ringtone volume, and change the profiles setting to Vibrate or Silent on standby mode. Mute the ringtone of an incoming call. Launch Multitasking by pressing and holding the volume up key.
	Cancel current operation and move to idle screen.
	Return to previous screen.
	Make or receive a call. Show the recent call list in standby mode. Re-dial the last call number if pressed and held in standby mode.
	Launch the say a command function.
	Take pictures or videos.

 ① **Note** If you use metal accessories (stickers) on the phone or hold the device by the internal antenna area while exchanging data or talking on the phone, sound quality may be affected.

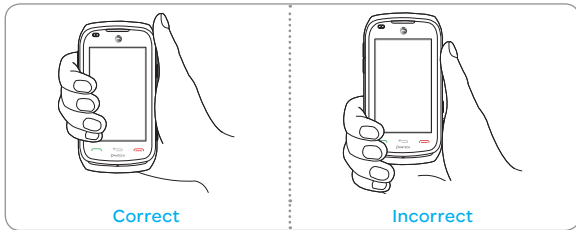




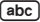










QWERTY Keypad



① **Note** To use the QWERTY keypad, hold the phone horizontally and slide the screen up.

Important Safety Information

Your phone has a QWERTY keypad which provides a superior typing experience on a small handheld device for easy and comfortable texting. You can use all of the phone functions with the QWERTY keypad.

Keys	Functions
	Press to change text entry modes on the text editing screen   ,  (first letter caps/all caps/lowercase).
	To enter symbols and numbers continually, press until Fn is displayed.
	Press to enter a space in text input mode.
	Move to the next row in text input mode.
	Delete a character to the left of the text cursor in the text editing screen.
	Press to enter a special character that is not on the keypad.
	Quickly connect to the voice mail server if pressed and held while in standby mode.
 - 	Enter numbers, letters or special characters. Go to the dial screen if pressed in standby mode.
	Activate or deactivate vibrate mode if pressed and held in standby mode.
	Enter an international dialing prefix if pressed in standby mode.

Menu Overview

Easy Mode Menu



Address Book

- Contacts
- Groups
- Favorites
- Settings
- Fixed Dial Numbers



Messages

- Conversations
- Create New Message
- Templates
- Clear Message
- Settings
- Memory



Camera & Multimedia

- Take a Picture
- Record a Video
- Music Player
- Pictures
- Video Player
- My Stuff



AT&T Services

- AT&T Drive Mode
- AT&T Navigator
- AT&T FamilyMap
- Facebook
- myAT&T
- Mobile Email
- Mobile Web
- Twitter



Tools

Alarm Clock
Calculator
Calendar
Converter
Notepad
Pill Reminder
Say a Command
Sketch Pad
Stop Watch
Timer
Tip Calculator
Voice Memo
World Time



Settings

Phone Status
Sounds &
Alerts
Bluetooth
Display
Readout Mode
Mode change

Advanced mode menu



Address Book

Contacts

Groups

Favorites

Settings

Fixed Dial Numbers



AT&T DriveMode



AT&T GPS

AT&T Navigator

AT&T FamilyMap



Bluetooth

Settings

Search

My Info

[†] SIM dependent [¶] Network dependent



Camera



Facebook



Messages

Conversations

Create New
Message

Templates

Clear Message

Settings

Memory



Mobile Email

Yahoo! Mail

AOL Mail

AIM Mail

Windows Live

Hotmail

AT&T Mail

Gmail

Other Providers



Mobile Web

- Home
- Bookmarks
- Enter Address
- History
- Manage



Music Player

- Now Playing
- All Music
- Playlists
- Albums
- Artists
- Genres
- Download Status
- Settings



myAT&T



My Stuff

- Applications
- Games
- Audio
- Music
- Pictures
- Video
- Other Files
- Memory



Pictures

Images
Sketch Pad



Settings

Mode Change
Sound Profiles
Display
Call
Phone
Touch
Keyboard
Connectivity
Security
AT&T Software
Update
Reset
TTY
Icon Glossary
Phone Information



Tools

Alarm Clock
Calculator
Calendar
Converter
Notepad
Pill Reminder
Say a Command
Sketch Pad
Stop Watch
Timer
Tip Calculator
Voice Memo
World Time



Twitter



Video Camera



Video Player

Table of contents

Important Safety Information	3	Checking all calls	44
Specifications	3	Speed dialing.....	45
Phone overview	5	Using the address book.....	45
Menu Overview	10	Address book settings.....	48
Getting Started	20	Service numbers and fixed dialing	48
SIM card and battery	20	Using your headset.....	49
Memory card	24	2. Messaging	51
Turning the phone on/off	24	Entering text	51
Screen lock/unlock	25	Messaging.....	53
Language	25	Receiving messages.....	54
Essential display indications.....	26	Creating and sending text messages	55
Screen navigation.....	28	Creating multimedia messages	56
Missed events	31	3. Multimedia	61
Setting the phone mode	32	Camera	61
Using the Multitask menu	32	Photo album.....	67
Using a memory card	33	Video album.....	68
Updating software ^a	35	4. Useful Features.....	71
PC Suite.....	35	Alarm Clock.....	71
		Calendar	72
		Notepad.....	72
		Pill Reminder	73
		Sketch Pad	74
		Voice Memo	75

Easy Mode

1. Calls and Address Book 38

Making, receiving and ending calls38

Options during a call..... 40

Table of contents

World Time.....	76
Calculator, Tip Calculator and Converter	76
Stop Watch and Timer	78
5. Connectivity.....	80
Bluetooth	80
Accessing AT&T Services	82
6. Settings	85
Phone Status	85
Sound Profile.....	85
Display	85
Readout mode	87

Advanced Mode

1. Calls and Address Book	89
Making, receiving and ending calls.....	89
Options during a call.....	92
Call settings	94
Checking all calls	94
Speed dialing.....	96
Caller identification.....	96
Using your headset.....	97
Using the address book.....	97
Address book settings	100
Service numbers and fixed dialing	101

2. Messaging.....	103
Entering text	103
Messaging	106
Receiving messages	107
Creating and sending text messages	108
Creating multimedia messages	109
Message templates	114
Message settings	115
Email.....	117
3. Multimedia.....	119
Camera	119
Picture album.....	121
Video Camera	123
Video Player.....	125
Audio album	126
Playing Music.....	127
Music Player	128
Music Player Settings	128
Other files.....	132
Managing memory	132
Applications	133
4. Useful Features.....	135
Alarm Clock.....	135
Calendar	136

Pill Reminder	136	7. Appendix	164
Notepad.....	138	Alert message.....	164
Sketch Pad	138	Troubleshooting checklist.....	165
Voice Memo	140	Safety information.....	166
World Time.....	140	Safety precautions	167
Calculator, Tip Calculator and Converter ...	141	About battery usage	169
Stop Watch and Timer	142	FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	170
5. Connectivity	146	FCC Regulatory Compliance.....	172
Bluetooth	146	Warranty.....	175
Using the Mobile Web.....	149		
Setting the Web's profile	151		
6. Settings	154		
Phone	154		
Readout mode	154		
Ring Tones	155		
Display	156		
Connectivity.....	157		
Keyboard	158		
Touch.....	158		
Security.....	159		
Reset.....	161		
TTY.....	162		

Getting Started

SIM card and battery

About your SIM card

The Micro SIM is a smaller version of the regular SIM cards commonly used and that frequently are referred to merely as SIM cards.

When you subscribe to your network operator, you receive a SIM (Subscriber Identity Module) card containing your registration information, PIN code, etc.

Like a credit card, it should be kept secure and handled carefully. Do not bend, scratch or expose it to moisture. Avoid static electricity.

To avoid corrupting your SIM card's memory, always turn off your phone before removing or inserting your SIM card.

 
 
 
About your battery

Your phone uses a Li-Ion battery. Make sure to use an authorized battery and Micro USB charger adaptor only. For more details, please inquire at your nearest AT&T Authorized Retailer.



① **Note** Unlike other forms of battery technology, you can recharge a Li-Ion battery while some charge remains without reducing your phone's autonomy due to the "battery memory effect" inherent in those technologies.

Installing/Removing SIM card and battery

1. To remove the battery cover, locate notch at top right corner, pull it towards you as shown to the right.
2. Insert the SIM card into the slot. The gold contacts of the SIM card should face down.
3. Slide the connector of the battery into the notch located at the top of the unit. Insert (1) and press the lower side of the battery until you hear a click (2). Make sure you align the gold contacts on the battery end with the contacts on the phone. If the contacts on the battery are not properly aligned, the phone and the battery could be damaged.

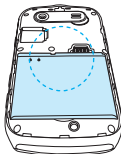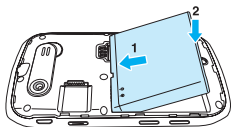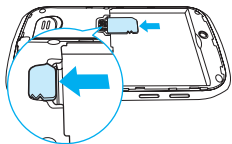




Correct

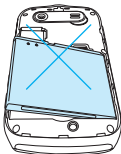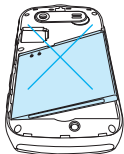  

Incorrect


Getting Started

   4. To remove the battery, lift the bottom of the battery up and remove.
5. To remove the SIM card, slide the SIM card in the direction of the arrow as shown.
6. To fit the battery cover, put it on the guide rail and push down ensuring all points around the edge are snapped into place.

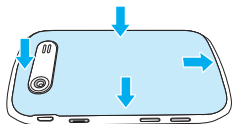


Charging your battery

 1. Connect with the Micro USB charger adaptor on the top right side. Make sure you align the connector as shown in the image. If not, it will damage the charging connector on the phone and will not charge.

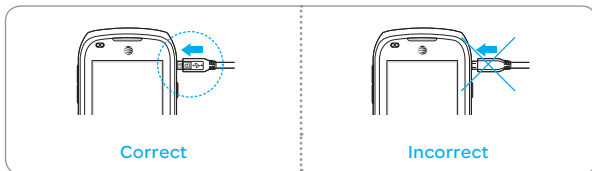

 
2. Disconnect the Micro USB charger adaptor from the device when charging the battery is complete.

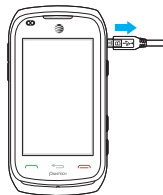


Memory card

You can use a microSD card as a memory card. It gives you more space to save pictures, videos, music files and more.

Inserting and removing a memory card

 1. Open the battery cover.
2. Insert the memory card to the line carved as shown right.  will be displayed on the screen when a memory card is inserted.
3. To remove the memory card, slide the memory card out in the opposite direction of the arrow.

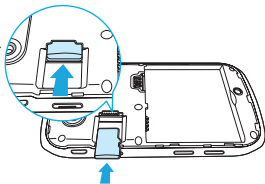

① **Note** Supported up to 32 GB.

Turning the phone on/off

To turn on

1. Press and hold the PWR/Lock key.

To turn off

1. Press and hold the PWR/Lock key.

Screen lock/unlock

 
Locking the screen

1. Press the PWR/Lock key when the touchscreen slider is closed.

① **Note** In the lock screen, when the PWR/Lock key is short pressed, the screen should black out.

Unlocking the screen

Press the PWR/Lock key, then drag the lock icon to the right. You can also unlock the screen by opening the touchscreen slider.

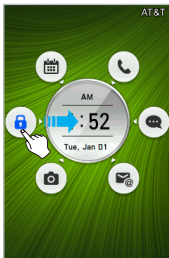










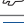











Language

















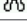

Setting the phone language

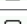1. Tap **Menu** > **Settings** > **Phone** > **Language**.
2. Select **Screen Text** or **Predictive**.
3. Select a language > **Save**.

① **Note** You can select language setting options including English, French, and Spanish.

Essential display indications

	Signal strength. The greater the number of bars, the stronger the signal.
	Network Searching Mode
	A call is in progress. When you are in no service area  is displayed.
	Call forwarding is active ^a .
	Incoming calls set to ring only (Normal)
	Incoming calls set to Outdoor
	Incoming calls set to Vibrate Only
	Incoming calls set to Silent
	Flight Mode is active.
	Received one or more text messages.
	Received one or more multimedia messages.
	Received one or more WAP Push messages.
	Received one or more configuration messages.
	Received one or more voice messages.
	A message is being sent.
	A message is being received.
	An alarm is set.
	A timer is set.
	Schedule alarm is set.
	Pill reminder

	Web is active, secured and downloading.
	Bluetooth is active.
	Bluetooth hands-free headset is connected.
	Bluetooth A2DP headset is connected.
	Bluetooth hands-free + A2DP headset is connected.
	Data transfer via Bluetooth is in progress.
	Headset is connected.
	USB is connected.
	TTY is active.
	A GPRS signal is available. It is displayed when there is an active GPRS session. ^a
	An EDGE signal is available. It is displayed when there is an active EDGE session. ^a
	A 3G signal is available. It is displayed when there is an active 3G session. ^a
	A microSD card is inserted.
	Battery strength When the battery charge is low,  is displayed.
	BGM(background music) Playback Play
	BGM Playback Pause
	BGM Playback Stop

^a Network dependent

① **Note** You can check the icons easily on your phone by tapping **Menu > Settings > Icon Glossary**.

Screen navigation

 
The home screen is your starting point for using applications on your phone.

You can customize the home screen to display shortcuts for favorite apps, and web addresses.

About your home screens

- **Favorite Screen:** A customizable screen for favorite contents shortcuts. Max 9 icons can be added.
- **Main Screen:** The phone's main home screen.
- **Mobile Web Screen:** A customizable screen for web address shortcuts. Max 9 icons can be added.


<Favorite Screen>

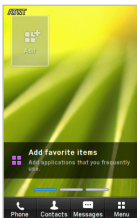

<Main Screen>


 
<Mobile Web Screen>

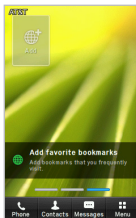

Position indicators

 
- ① **Note** You can access the 3 different home screens by swiping in both directions. However, the position indicators are always displayed in the following order: Favorite, Main, and Web Screens.

Adding a home screen item

Adding favorite items shortcuts


The favorite shortcuts allow you to assign items to the screen.


1. Tap **Add**.
2. Tap a desired item.
3. Once you have added one or more items to the screen, the shortcuts are displayed to customize the home screen.

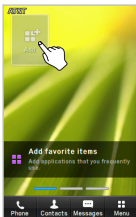



Adding mobile web screen shortcuts

 
The Web screen allows you to assign web shortcuts to the screen.

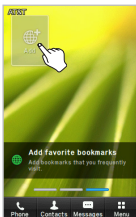
1. Tap **Menu** > **Mobile Web** > **Bookmarks** > **Add Bookmark**.
2. Tap the field to enter **Title** and **URL** > **Save**.
3. Press  and move to the webscreen.
4. Tap **Add** and a desired web address.
5. Once you have added one or more items to the screen, the web address shortcut is displayed to customize the screen.



Deleting a home screen item

1. Tap and hold an item until  appears.
2. Tap  on the item to delete.

 ① **Note** You can deactivate the edit mode by tapping the other space of the home screen or .

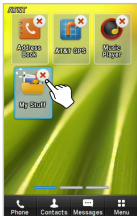

Repositioning a home screen item



Once the items are assigned to the home screen, you can reposition the items for your convenience.

 
1. Tap and hold an item until the selected item is dimmed out.
2. Drag to the desired position.
3. Position the item, and then release it.

① **Note** You can only change the order of items and can not be moved to another screen.

Navigating through menus

The phone has two different menu screens to provide quick access to menus.


1. Tap **Menu**.
2. Swipe the screen from left to right or right to left to navigate.
3. Tap the desired menu icons to open.
4. Tap  to go back to the previous menu.
5. Press  to exit.

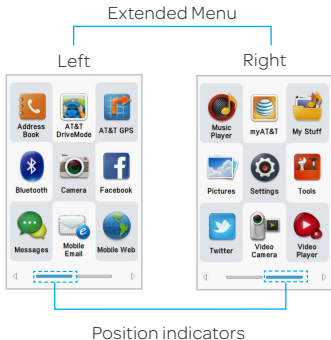

① **Note** The position indicators are always displayed for the corresponding menu screen.

Missed events

When you miss calls, messages, or voice messages, icons will pop up and let you know you have missed events.


The icon will be shown at the Missed Events Area. Tap each icon to check the details. To clear missed events without checking the details, simply press .

Setting the phone mode

Your phone has two customized modes, Easy and Advanced. The default is set to Advanced mode. The Easy mode provides easy access to the functions used most frequently. In the Easy mode, you can view an abbreviated menu: [Address Book](#), [Messages](#), [Camera & Multimedia](#), [AT&T Services](#), [Tools](#), and [Settings](#). The **Advanced Mode** allows access to all menu items.

To change the phone mode

 1. Select **Menu > Settings > Mode change**.
2. Select **Easy Mode** or **Advanced Mode**.

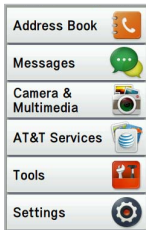

Easy Mode

 


Advanced Mode

Using the Multitask menu

Press and hold the volume up key to launch the Multitask menu that can be accessed from active windows or pages on the phone. There is no need to stop what you are doing if you want to activate another common feature. The idea is to allow you to temporarily exit from your current location to access a group of common functions such as Call, Messaging, Mobile Web, Music Player, and App Manager. This key keeps you from having to completely exit from your current task or window, whether that be a text message, a web page, or an active call, to do something else.

- ① **Note** You cannot use the multitask menu in some active windows such as viewing image, playing video, etc.

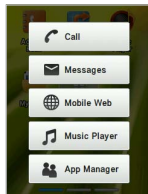

Multitask functions

To use the multitask function, press and hold the volume up key. You can choose from one of the following functions:

- **Call:** Make a voice call while using the handset for other tasks. If Music Player is active, it is paused during the call.
- **Messages:** Send a text or multimedia message while using the handset for other tasks.
- **Mobile Web:** Launch the browser while using the handset for other tasks.
- **Music Player:** Launch the Music Player while using the handset for other tasks. If an incoming call is received or you make a call, the Music Player is paused.
- **App Manager:** Access Games and Applications while using the handset for other tasks.

Using a memory card

You can save, move and delete files while using your phone and external memory card. You can also move and copy files to computer from your phone.

Resetting a memory card


1. Tap **Menu** > **Settings** > **Reset**.
2. Enter the password > **OK** > **External Memory Reset** > **Yes**.

① **Note** The default password is '1234'.


To copy or move pictures and video files to the card

1. Tap **Menu** > **My Stuff** > **Audio, Music, Pictures, Video** or **Other Files**.
2. Select a folder and tap to open.
3. Tap **Options** > **Copy** or **Move**.

Getting Started

4. Tap to select a file to copy or move > **OK**.
 5. Tap  > **Memory Card**.
 6. Tap to select a folder.
 7. Tap **Copy Here** or **Move Here**.
- ① **Note** Some files may not be moved by using this function.

To copy or move a file to the phone

1. Tap **Menu** > **My Stuff**.
2. Tap  > **Memory Card**.
3. Select a folder and tap to open.
4. Tap **Options** > **Copy** or **Move**.
5. Tap to select a file to copy or move > **OK**.
6. Tap to select a folder.
7. Tap **Copy Here** or **Move Here**.

To delete a file from the card

1. Select a file from the card > **Options** > **Delete**.
- ① **Note** If you select a music file to delete, you must tap  > **Delete** on the file.

To move a file from the card to the computer

1. Tap **Menu** > **Settings** > **Connectivity**.
2. Tap **Select USB Mode**.
3. Select the desired option > **Save**.
4. Connect the data cable with the phone and a computer.

5. Follow the instructions on your computer screen.

- ① **Note** If you select Music Player, you can add music files from Windows Media Player™. When you select **Ask on Connection**, it will ask you to select **Music Player**, **Mass Storage** or **Modem** every time you connect your device with your computer. Please check versions of OS and WMP when you connect your device with your computer. If the versions are not compatible, Music player cannot be executed.

Updating software ⁿ

You can update your software without visiting your nearest dealer.

To update the software

1. Tap **Menu > Settings > AT&T Software Update**.

2. Tap **Check for Updates** to check whether or not you need to update the software.

- ① **Note** After downloading the software, the device will ask you whether to update the software now or later. If you choose to update the software now, it will restart the handset. If you postpone updating the software, the updating is started 4 hours later. You can postpone the updating up to three times. If you do not select any options for updating, the updating is automatically started 12 hours later. If you want to continue the process, go to **Menu > Settings > AT&T Software Update > Continue Update**.

To view the version of software

1. Tap **Menu > Settings > Phone Information**.

2. Scroll down to **Software Version**.

PC Suite

PC suite is a Windows-based PC program that allows you to easily manage personal data and multimedia files by connecting your Phone to a PC. The PC suite application can be downloaded at <http://www.pantechusa.com/>.

System requirements

- Microsoft Windows 2000 or XP family, Windows 7, Vista 32 bit, and Windows 8
- At least 300MB of free disk space
- Interface devices such as USB or Bluetooth for the connection with the phone

PC suite features

Contact Manager / Message Manager / File Manager

1

Calls and Address Book

- Making, receiving and ending calls
 - Options during a call
 - Checking all calls
 - Speed dialing
- Using the address book
 - Address book settings
- Service numbers and fixed dialing
 - Using your headset



PANTECH
P6070



Calls and Address Book

Making, receiving and ending calls


Making a call

1. Tap **Phone**.
2. Enter the area code and phone number.
3. Tap **Call**.

Answering a call

1. Drag  to the right.


Ending a call

1. Press  during a call.
- Once the call is complete, a call summary is displayed.

Rejecting a call

1. Drag  to the left.

Making a call using the call list

Your phone logs up to 20 dialed, received and missed call numbers. In the phone, pressing  twice is set to automatically dial the last call in the call list you have made.

1. Tap **Phone** > **Recent Calls** to display the Recent Calls list.
2. Select a number.
3. Tap **Call** to dial the selected number.

① **Note** To redial the last number in the **Recent Calls** list, tap .

Making a call during a call

1. Enter the phone number or look it up in Address Book.
2. Tap **Call** to dial the second call. The first call is automatically put on hold.

Switching between two calls

1. Tap the participant phone number.
2. Tap **Swap**.

Making an international call


1. Tap **Phone** and press and hold **0** on the touch screen until the '+' character appears. Or press **(+)** on the QWERTY keyboard until the '+' character appears.
2. Type the country code, area code, and phone number.
3. Tap **Call**.

Making an emergency call



You can make emergency calls even if your phone does not have a SIM card.

1. Tap Emergency Number, or tap **SOS** if your phone does not have a SIM card.
2. Tap **Call**.

Replying to a missed call

1. Tap **Phone**.
2. Tap **Recent Calls** to display the list of missed calls.
3. Select a number to call by scrolling the screen.
4. Tap .

Answering a second call^a

1. Drag  to the right. The first call is automatically put on hold.
2. Press  to end the second call.

The call on hold is automatically reconnected.

- ① **Note** For answering a second call, you should activate Call Waiting.

Options during a call

Microphone off and on

Switching your phone's microphone off

1. Tap **Mute** .

Switching your phone's microphone back on

1. Tap **Mute** .

Speakerphone on and off

Turning on speakerphone

1. Tap **Speaker** .

Turning off speakerphone

 
 
1. Tap **Speaker** .

Multi-party calls^a


You can talk with more than one person or have a conference call.



Making a multi-party call

1. Call the first participant.
2. Call the second participant. The first call is automatically put on hold.
3. Tap the second participant phone number > [Join](#).

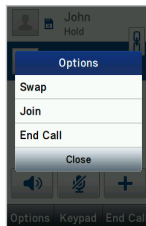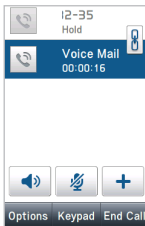


Having a private conversation with one participant

  1. Tap the participant to hold.
 2. Tap **Members**.
 3. Tap .
- ① **Note** All of the multi-party call participants can now hear each other.

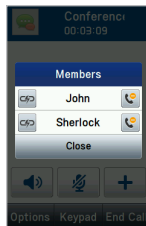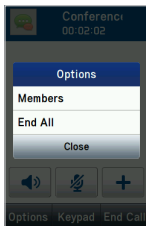


Removing one participant from a multi-party call

1. Tap the participant to end.
2. Tap **Members**.
3. Tap .

The call ends with that participant, but you can continue to talk to the other participants.

Searching for a number in the address book during a call

1. Tap **Options** > **Add call** or tap .
Or tap **Keypad** > **Contacts**.
2. Select a contact by scrolling up or down the alphabet bar until you see the first letter of the contact.
3. Tap the name.

Searching for a name in the address book

Enter the first letters of the name for Name Search. The entries are displayed starting with the first entry matching your input.

Finding a name manually in the address book

1. Scroll up or down the alphabet bar until you see the first letter of the contact.
2. Scroll to the contact and tap the name.

Reading a message during a call

1. Press and hold  and tap **Messages**.
2. Tap **Inbox** then select a message.

Sending a message during a call

1. Press and hold  and tap **Messages** or **Options** > **Create Message**.

*For details on **creating and sending text messages**, see page 55.*

Saving contacts during a call

1. Tap **Options** > **Save contact** > **as New Contact** or **to Existing contact**.

*For details on **address book**, see page 45.*

Checking all calls

You can check all call history by tapping **Phone**.

Viewing call history

1. Tap **Phone**.
2. You can view all **Recent Calls**.

Viewing call time

1. Tap **Phone** > **Recent Calls** > **Call Time**.
2. You can view **Last Call**, **Received Calls**, **Dialed Calls**, **Total Calls**, and **Lifetime Calls**.

Resetting all call times

1. Tap **Phone** > **Recent Calls** > **Call Time**.
 2. Tap **Reset** > **Yes**.
 3. Enter password > **OK**.
- ① **Note** The default password is '1234'.

Speed dialing

You can dial quickly using speed dialing. Up to 8 phone numbers can be programmed using numbers 2 to 9.

Setting speed dial

1. Tap **Phone** > **Speed Dial**.
2. Tap an empty entry.
3. Select a person in your address book and tap to add.

Changing speed dial contact

1. Tap **Phone** > **Speed Dial**.
2. Select a number > **Change**.
3. Select a person and tap.

Removing from speed dial

1. Tap **Phone** > **Speed Dial**.
2. Select a number > **Remove** > **Yes**.


Using the address book

You can save names, phone numbers, and information on the SIM or phone. Number of entries can depend on the capacity of the SIM card.



Viewing the contact list

1. Tap **Menu** > **Address Book** > **Contacts**.


Searching for a phone number

1. Tap **Menu** > **Address Book** > **Contacts**.
2. Scroll the screen up or down or tap  and enter the name to find the contact.
3. Tap the contact to view detailed information.
4. To update information, tap **Edit**.

Calling from the contact list


1. Tap **Menu** > **Address Book** > **Contacts**.
2. Scroll the screen up or down to select a person or tap  and input the first letter or two of the person's name.
3. Tap .

Forwarding contact details


1. Tap **Menu** > **Address Book** > **Contacts**.
2. Scroll the screen up or down or tap  and enter the name to find the contact.
3. Tap the contact > **Options** > **Share Contact Info** > **All Contact Info, Personal Contact** or **Business Contact**.
4. You can send the information using **via Message** or **via Bluetooth**.

For details on sending the information via message, see page 55. And for details on sending the information via Bluetooth, see page 81.


Deleting a contact

1. Tap **Menu** > **Address Book**.
2. Scroll the screen up or down or tap  and enter the name to find the contact.
3. Tap the contact > **Delete** > **Yes**.

Adding a contact

1. Tap **Menu** > **Address Book** > **Contacts** > **Add**.
 2. Input contact information by tapping the desired field and sliding open the keyboard to type.
 3. Tap **Save**.
- ① **Note** You can enter phone numbers, email addresses, company name and more. To change phone number type, touch  and select from the Number Type list. To add an address, birthday, or anniversary to a contact or assign a specific ringtone, touch the **Options** > **Add Fields** button to open additional information tabs.

Making groups

1. Tap **Menu** > **Address Book** > **Groups**.
2. To add new group, tap **Add**.
3. Input the group name > **OK**.
4. To assign a group ringtone, tap  > select a desired ringtone and tap **Select** > **Save**.
5. To add members to group, tap **Yes**.
6. Select the members > **OK**.

Editing groups

1. Tap **Menu** > **Address Book** > **Groups**.
2. To edit group, tap the group > **Edit** > **Add Members**, **Remove Members** or **Edit Group**.
3. To delete group, tap **Delete Group** > **Yes**.

Adding to favorites or groups

1. Tap **Menu** > **Address Book** > **Contacts**.
2. Select and tap a contact > **Options** > **Add to**.
3. Tap **Favorites** or **Groups**.

Address book settings

Managing my info

1. Tap [Menu](#) > [Address Book](#) > [Settings](#) > [My Info](#).

Setting sync settings

1. Tap [Menu](#) > [Address Book](#) > [Settings](#) > [AT&T Address Book](#).
2. Select [Auto Sync On](#) or [Auto Sync Off](#).

Service numbers and fixed dialing

Calling your service numbers[†]

You can see the service number to reach the service provider.

1. Tap [Menu](#) > [Address Book](#) > [Contacts](#) > [\[ATT Services\]](#).
2. Tap a number to access the service > [Call](#).

Viewing the fixed dialing list

Fixed dialing is a service that limits your access to specific numbers in the address book list recorded on the SIM. Input the PIN2 to set up or cancel this service.

1. Tap [Menu](#) > [Address Book](#) > [Fixed Dial Numbers](#).
 2. Select a number.
- ① **Note** PIN2 must be correctly entered within 3 attempts. If you input the incorrect code three times in a row, the PIN2 code will be blocked. If the PIN2 code is blocked, please contact your service provider. Your PIN2 code is supplied with the SIM card. The default PIN2 code is '2222'.

Using your headset

You can make or receive a call using your headset.

When you connect your headset to the port, the button on the headset works as follows.

① **Note** You must use a headset designed for this device. It is an optional accessory. Not all headsets will have a button.

While in standby mode

1. Tap the button once to list recent calls.
2. Tap the button twice to redial the last call.
3. Tap and hold the button to make a call.

2

Messaging

Entering text

Messaging

Receiving messages

Creating and sending text messages

Creating multimedia messages



PANTECH
P6070



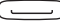






Messaging

Entering text

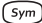



You can enter text with multi-tap, predictive, numeric or symbol entry modes.

Useful keys


QWERTY	Function
	Display symbols
	Delete the letter
	Adding space
	Tap to change capital mode Tap to change abc Abc ABC <i>Multi-tap</i>    (first letter caps / all caps / lower case)

For details on using *QWERTY keypad*, see page 8.

Standard mode

1. Tap **Menu** > **Messages** > **Create New Message** > **Tap to enter text** >  > Select **Standard Mode** to change the mode to .
2. Select  to  to input text repeatedly.






Automatic Correction mode

The Automatic Correction mode automatically compares your keystrokes with an internal dictionary to determine the correct word. It will display the most commonly used word first. The Automatic Correction mode is set as a default text input setting, so you can check the mode with .

1. Tap **Menu** > **Messages** > **Create New Message** > **Tap to enter text** > Enter the message.
2. Select  to  to input text.
For example, to write “hello” press , , ,  and .


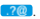


Number mode

You can input numbers in this mode.

1. Tap **Menu** > **Messages** > **Create New Message** > **Tap to enter text** >  > Select **Number Mode** to change the mode to .
2. Select  to  and  to input numbers.

Symbols mode

You can input symbols.


1. Tap **Menu** > **Messages** > **Create New Message** > **Tap to enter text** >  > Select **Symbols** to change the mode to .
2. Tap  or  > select the symbol to insert.

Messaging

You can send, receive and save the text messages and multimedia messages.

Managing memory

Up to 300 messages can be stored in the phone memory, additional messages will be saved to the SIM card. When the message box is full, the message full icon will appear. All messages share memory.

When	It means
	Text message is full (SIM and Phone messages)

Deleting a conversation

1. Tap **Menu** > **Messages** > **Delete**.
2. Select a conversation to delete.
3. Tap **Delete** > **Yes**.

Deleting all messages

1. Tap **Menu** > **Messages** > **Delete**.
2. Tap **All** > **Delete** > **Yes**.

Replying to a message



1. Tap **Menu** > **Messages**.
2. Select a conversation.
3. Tap **Reply**.
4. Tap **Tap to enter text** > Enter the message > **OK**.

5. Tap the recipient field to add one or more recipients and select the contact > **OK**.
6. Tap **Send**.

Receiving messages

Viewing a new message

When you receive a new message, you can select **View** or **Ignore**.

1. Tap and drag  to the right to read a new message or tap and drag  to the left to ignore a new message.

Reading a message from a conversation

1. Tap **Menu** > **Messages**.
2. Select a conversation.
3. Select a received message and read the message.

Saving contact information from a received message

1. Tap **Menu** > **Messages**.
2. Select a conversation.
3. Tap **Options** > **Add Contact**.
4. Select **as New Contact** or **to Existing Contact**.

Saving the object in a received multimedia message

1. Open the multimedia message.
2. Tap **Options** > **Use** > **Save to internal** or **external**.
It will be saved in **Camera & Multimedia** > **Pictures**.


*For details on **photo album**, see page 67.*

Receiving settings for voice mails

1. Tap **Menu** > **Messages** > **Options** > **Settings**.
 2. Tap **Voice Mail**.
 3. Enter the number of the voice mail center > **OK** > **Save**.
- ① **Note** This number may be pre-configured by the service provider upon activation.

Creating and sending text messages

Sending a new text message

1. Tap **Menu** > **Messages** > **Create New Message**.
Or tap **Menu** > **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap the address field and then scroll to the desired contact. Tap the contact then tap the desired phone number from the pop-up window.
3. Tap the text window to add text. Slide open the keyboard to type.
4. Tap **OK**.
5. Tap **Send**.
6. To view sent message, tap **Menu** > **Messages**.





Finding all sent messages

1. Tap **Menu** > **Messages**.



Creating multimedia messages




You can create and send new multimedia messages. Capacity is 600Kb. An error message will alert you once you exceed the capacity.

Adding a saved picture to the message

1. Tap **Menu** > **Messages** > **Create New Message**.
Or tap **Menu** > **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.
3. Tap **Insert** >  > **My Pictures**.
4. Select a folder or picture.
5. Tap **Select**.
6. To preview the current page, tap  in **Slide** field > **Preview** > **Current**. To go back to text editor, tap **Stop**.
7. To preview the whole message, tap  in **Slide** field > **Preview** > **Whole Message**. To go back to text editor, tap **Stop**.
- To edit the text message, tap the text box.
8. Tap the recipient field to add one or more recipients and select the contact > **OK**.
9. Tap **Send**.





Adding a new picture to the message

1. Tap **Menu** > **Messages** > **Create New Message**.
Or tap **Menu** > **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.
3. Tap **Insert** >  > **Take Picture**.







4. Focus on the object and tap .
5. To preview the current page, tap  in **Slide** field > **Preview** > **Current**. To go back to text editor, tap **Stop**.
6. To preview the whole message, tap  in **Slide** field > **Preview** > **Whole Message**. To go back to text editor page, tap **Stop**.
 - To edit the text message, tap the text box.
7. Tap the recipient field to add one or more recipients, and select the contact > **OK**.
8. Tap **Send**.

For details on *Taking a picture*, see page 61.

Adding a saved video to the message




1. Tap **Menu** > **Messages** > **Create New Message**.
Or tap **Menu** > **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
 2. Tap **Tap to enter text** > Enter the message > **OK**.
 3. Tap **Insert** >  > **My Videos**.
 4. Tap the desired video clip to insert and tap **Select**.
 5. To preview the current page, tap  in **Slide** field > **Preview** > **Current**. Tap **Pause** to stop watching or tap **Stop** to go back to text editor.
 6. To preview the whole message, tap  in **Slide** field > **Preview** > **Whole Message**. To go back to text editor page, tap **Stop**.
 - To edit the text message, tap the text box.
 7. Tap the recipient field to add one or more recipients and select the contact > **OK**.
 8. Tap **Send**.
- ① **Note** If the video clip's resolution is "320x240" or higher, the video clip cannot be added to a message.


Adding a new video to the message

1. Tap **Menu** > **Messages** > **Create New Message**.
Or tap **Menu** > **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.
3. Tap **Insert** >  > **Create Video**.
4. Focus on the object and tap .
5. To stop recording and save tap .
6. To preview the current page, tap  in **Slide** field > **Preview** > **Current**. Tap **Pause** to stop watching or tap **Stop** to go back to text editor.
7. To preview the whole message, tap  in **Slide** field > **Preview** > **Whole Message**. To go back to text editor page, tap **Stop**.
8. Tap the recipient field to add one or more recipients and select the contact > **OK**.
9. Tap **Send**.




 


*For details on **Recording a video**, see page 64.*

Adding a recorded voice memo to the message

1. Tap **Menu** > **Messages** > **Create New Message**.
Or tap **Menu** > **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.
3. Tap **Insert** >  > **My Audio**.
4. Tap the desired audio clip to insert and tap **Select**.
5. To preview the current page, tap  in **Slide** field > **Preview** > **Current**. Tap **Pause** to stop listening or tap **Stop** to go back to text editor.

6. To preview the whole message, tap  in **Slide** field > **Preview** > **Whole Message**. To go back to text editor page, tap **Stop**.
7. Tap the recipient field to add one or more recipients and select the contact > **OK**.
8. Tap **Send**.

Adding a new voice memo to the message

1. Tap **Menu** > **Messages** > **Create New Message**.
Or tap **Menu** > **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.
3. Tap **Insert** >  > **Record Audio**.
4. Tap  to record the sound.
5. To stop and save tap .
6. To preview the current page, tap  in **Slide** field > **Preview** > **Current**. Tap **Pause** to stop listening or tap **Stop** to go back to text editor.
7. To preview the whole message, tap  in **Slide** field > **Preview** > **Whole Message**. To go back to text editor page, tap **Stop**.
8. Tap the recipient field to add one or more recipients and select the contact > **OK**.
9. Tap **Send**.

For details on **Recording a voice memo**, see page 75.

3

Multimedia

Camera

Photo album

Video album



 
PANTECH
P6070



Multimedia

Camera

You can take pictures and record movies using the built-in camera. The photos and video clips can be saved and sent via multimedia messages.

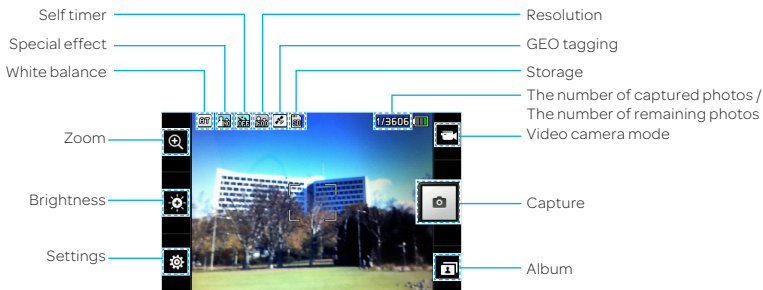

Taking a picture






1. Press in standby mode or tap **Menu > Camera & Multimedia > Take a Picture**.
 2. Focus on the object and tap .
- ① **Note** Your photo will be saved automatically to **Menu > Camera & Multimedia > Pictures**.

Setting camera settings






1. Press in standby mode or tap **Menu > Camera & Multimedia > Take a Picture**.
2. Tap to change settings prior to taking a picture.

Multimedia




In the options menu for camera

Icons	Name	Description
	Zoom	1, 2,3,4,5,6,7,8 (up to 2x zoom) ① Note Zoom is not provided with the highest (2048x1536) resolution.
	Brightness	-3, -2, -1, 0, +1, +2, +3
	Settings	White Balance/ Effect/ Self Timer/ Resolution/ Storage/ GEO Tagging/ Advanced
	Video Camera	Switch to video camera mode
	Album	View the pictures stored in the device

In the options menu for video camera

Icons	Name	Description
	Zoom	1, 2,3,4,5,6,7,8 (up to 2x zoom)
	Brightness	-3, -2, -1, 0, +1, +2, +3
	Settings	White Balance/ Effect/ Self Timer/ Resolution/ Storage/ Advanced
	Camera	Switch to camera mode
	Album	View the videos stored in the device





Zoom in and out

1. Tap  then tap  or . It increases or decreases the zoom ratio.
- ① **Note** In camera mode, the zoom function is not available at the highest (2048x1536) resolution.



Increasing or decreasing the brightness

1. Tap  then tap  or . It ranges from -3 to +3.




Changing to video camera mode

1. Press  in standby mode or tap **Menu** > **Camera & Multimedia** > **Take a Picture**.
 2. Tap  on camera mode.
 3. Focus on the object and tap .
 4. Tap  to stop recording.
- ① **Note** Your video will be saved automatically to **Menu** > **Camera & Multimedia** > **Video Player**.

Viewing a picture from phone memory

1. Tap **Menu** > **Camera & Multimedia** > **Pictures** or press  in standby mode > .
2. Select the picture by tapping.

Viewing a picture from the memory card

1. Tap **Menu** > **Camera & Multimedia** > **Pictures** or press  in standby mode > .
2. Select  > **Memory Card**.
3. Select the picture by tapping.

After taking pictures





To	Tap
Send via Message/Bluetooth	
Delete	

Recording a video

1. Tap **Menu** > **Camera & Multimedia** > **Record a Video**.
2. Focus on the object and tap
3. Tap
4. Press

Changing to camera mode


1. Tap **Menu** > **Camera & Multimedia** > **Record a Video**.
2. Tap  on Video Camera mode.
3. Focus on an object and tap .

For details on **taking a picture**, see page 61.

 
Viewing a recorded video clip




1. Tap **Menu** > **Camera & Multimedia** > **Video Player**.
2. Select the video clip by tapping.

Viewing a video clip from the memory card

1. Tap **Menu** > **Camera & Multimedia** > **Video Player**.
2. Select  > **Memory Card**.
3. Tap a video clip to play.

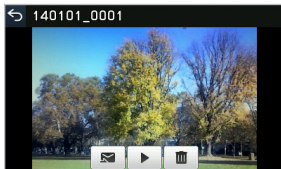After saving recorded video clips



To	Tap
Send via Message/Bluetooth	
Play the video clip	
Delete	

While recording a video




To	Operation
Receive an incoming call	Drag  to right
Stop recording	Tap 
Pause the recording	Tap 

Photo album

You can save photos to your phone or an external memory card and view, send or delete them in the photo album. JPEG format is supported, and other formats are saved in the Picture folder.

① **Note** To access Picture, tap **Menu > Camera & Multimedia > Pictures**.

Viewing saved pictures

1. Tap **Menu > Camera & Multimedia > Pictures**.
2. Select a picture.


Setting as wallpaper

1. Tap **Menu > Camera & Multimedia > Pictures**.
2. Tap  of the selected picture > **Set as > Wallpaper**.


Setting as contact photo

1. Tap **Menu > Camera & Multimedia > Pictures**.
2. Tap  of the selected picture > **Set as > Contact photo**.

Deleting multiple pictures

1. Tap **Menu > Camera & Multimedia > Pictures**.
2. Tap **Delete**.
3. Tap to mark desired files or tap **All** to mark all files.
4. Tap **OK > Yes**.
5. To cancel deleting action press .

Viewing file information

1. Tap **Menu** > **Camera & Multimedia** > **Pictures**
 2. Tap  of the selected picture.
 3. Scroll down and tap **Properties**.
- ① **Note** You can check properties of the photo such as **File Name**, **File Size**, **Format**, **Resolution**, and **Created**.


Video album

You can view, send, save and delete videos. The supported formats are MP4, WMA, 3GP and 3G2.


Playing the saved video clips

1. Tap **Menu** > **Camera & Multimedia** > **Video Player**.
2. Tap the video clip to play.

Copying saved video clips

1. Tap **Menu** > **Camera & Multimedia** > **Video Player**.
2. Tap  of the selected video > **Copy**.
3. Move to other folder or external memory card > **Copy here**.

Moving saved video clips

1. Tap **Menu** > **Camera & Multimedia** > **Video Player**.
2. Tap  of the selected video > **Move**.
3. Move to other folder or external memory card > **Move here**.

Using video player controls

To	Tap
Pause	
Play	▶
Previous track	⏮
Next track	⏭
Fast rewind	Tap and hold ⏮
Fast forward	Tap and hold ⏭
Control volume	🔊 or press side volume keys

Deleting multiple video clips

1. Tap [Menu](#) > [Camera & Multimedia](#) > [Video Player](#).
2. Tap [Delete](#).
3. Tap to mark desired files or tap [All](#) to mark all files.
4. Tap [OK](#) > [Yes](#).
5. To cancel deleting action press [↶](#).

4

Useful Features

Alarm Clock

Calendar

Notepad

Pill Reminder

Sketch Pad

Voice Memo

World Time

Calculator, Tip Calculator and
Converter

Stop Watch and Timer



PANTECH
P6070



Useful Features

Alarm Clock

Setting an alarm

 
1. Tap **Menu** > **Tools** > **Alarm Clock**.
 2. Tap **Create New**.
 3. Set the desired options.
 4. Tap **Save**.
- ① **Note** To set the alarm to ring when the phone is turned off, activate the Power Alarm by dragging the bar to **On**.

Viewing saved alarms

1. Tap **Menu** > **Tools** > **Alarm Clock**.
2. Scroll and tap an alarm to view the detail.

Editing existing alarms

1. Tap **Menu** > **Tools** > **Alarm Clock**.
2. Scroll and tap to select an alarm.
3. Edit the alarm details.
4. Tap **Save**.

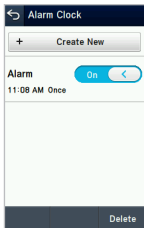

Calendar

Calendar helps you manage your schedule. You can set a reminder on any given date with this function.

Viewing the calendar

1. Tap **Menu** > **Tools** > **Calendar**.

① **Note** Monthly view is displayed by default.



Creating a new event

 
1. Tap **Menu** > **Tools** > **Calendar**.
2. Tap to select a day > **Create**.
3. Select **Event**, **Task**, or **Note**.
4. Input the details > Tap **Save**.

① **Note** You can create events for dates from 01/01/2000 to 12/31/2070.

Notepad

Using notepad

1. Tap **Menu** > **Tools** > **Notepad**.
2. Tap **Create New**.
3. Enter the memo and Tap **OK**.

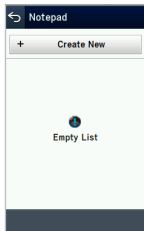


Pill Reminder

Pill Reminder sets your schedule if you need to take a pill, and an alarm pop-up will appear at the time you set. You can select to accept the reminder or have the reminder pop-up again after 15 minutes

Creating a new pill reminder

 1. Tap **Menu** > **Tools** > **Pill Reminder** > **Create New**.
2. Tap the camera image and then, take a picture.
For details on taking a picture, see page 61.
3. Input **Name** and **Dosage**.
4. Tap **Time** > **Save**.
5. Set a desired time > **OK**.
6. Tap **Period** > **Begins**.
7. Set the beginning time of the dosage on the calendar.
8. Tap **Daily**, **Every 2 days**, or **Monthly** > **OK**. When selecting **Every 2 days**, you can set the desired number of days for the reminder period.
9. Enter more information.
10. Tap **Save**.

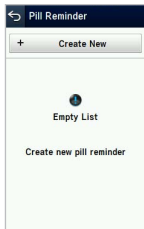

Checking today's pill reminders

1. Tap **Menu** > **Tools** > **Pill Reminder** > **Today**.
2. Scroll and select a pill reminder item to check the detail.

Editing a pill reminder

1. Tap **Menu** > **Tools** > **Pill Reminder**.
2. Select a pill reminder > **Edit**.
3. Edit **Name**, **Dosage**, **Time**, **Period** or **More Information**.
4. Tap **Save**.





Deleting reminders

1. Tap **Menu** > **Tools** > **Pill Reminder**.
2. Tap **Delete**.
3. Tap **All** or a pill reminder to delete
4. Tap **Delete** > **Yes**.

Sketch Pad

You can create drawings and set as wallpaper or share via multimedia message or Bluetooth.

Creating a sketch


1. Tap **Menu** > **Tools** > **Sketch Pad**.
2. Tap  to select pencil thickness, color, eraser and undo.
3. Select each option and tap  for more space to draw.
4. Draw on the sketch pad.
5. Tap  and tap **Save** to save your work.
6. Enter the name and tap **OK**.
7. To create a new drawing, tap  > **Options** > **Create New**.




Setting a background

1. Tap **Menu** > **Tools** > **Sketch Pad**.
 2. Tap  > **Options** > **Background**.
 3. Tap a desired background.
 4. To import an image, tap  > **Options** > **Import Image**.
- ① **Note** The background image will be imported from the picture album and may be cropped when imported.

Setting a sketch as wallpaper



1. Tap **Menu** > **Tools** > **Sketch Pad**.
2. After drawing, tap  > **Options** > **Set as Wallpaper** > **Yes**.
3. Enter the file name > **OK** > **Save**.

Sending a sketch

1. Tap **Menu** > **Tools** > **Sketch Pad**.
2. After saving a drawing, tap  > **Options** > **Send**.
3. Tap to select **via Message** or **via Bluetooth**.

Voice Memo

Recording a voice memo

 
1. Tap **Menu** > **Tools** > **Voice Memo**.
2. Tap **New Record**.
3. Tap .
4. Tap  to stop recording. It will automatically save in **My Voice**.



World Time

Using world time

1. Tap **Menu** > **Tools** > **World Time**.
- ① **Note** When you get out of your network, select a desired city > Tap **OK**.
2. To add a new city, tap **Add New City** and tap **<** or **>** to select a new city. Tap **Add**.
3. Tap **Set as Dual** and select a city if you want to set dual time displays in idle mode.

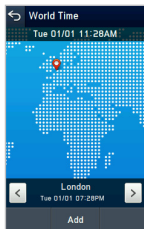

Calculator, Tip Calculator and Converter

 
Using the calculator

1. Tap **Menu** > **Tools** > **Calculator**.
2. Tap the numbers and **+** / **-** / **x** / **÷** to calculate.
3. Tap **C** to erase one digit.
4. Tap and hold **C** to reset.
5. Tap **.** to use the decimal point.



Using the tip calculator

1. Tap **Menu** > **Tools** > **Tip Calculator**.
2. Tap to enter values for all variable fields (**Bill(\$)**, **Tip(%)**, **Split**) and the corresponding calculation fields (**Total(\$)**, **Tip(\$)**, **You Pay(\$)**) are updated automatically.
3. Tap to use the decimal point.
4. Tap **Reset** to reset.

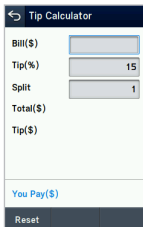

Using the converter

1. Tap **Menu** > **Tools** > **Converter**.
2. Tap or to select a category.
3. Tap the field to enter a number and scroll left or right to select the unit. Other unit fields are updated automatically.
4. Tap **Reset** to reset.



Stop Watch and Timer

 
Using the stop watch

1. Tap **Menu** > **Tools** > **Stop Watch**.
2. Tap **◀** or **▶** to select **Basic**, **Split** or **Lap**.
3. Tap **Start** to start.
4. Tap **Stop** to pause.
5. Tap **Continue** to resume.
6. Tap **Reset** to clear.



Using the timer

1. Tap **Menu** > **Tools** > **Timer**.
2. Tap **Set** to input the time.
3. Scroll to set the hour, minutes and seconds and tap **Save**.
4. Tap **Start** to start.
5. Tap **Pause** to stop.
6. Tap **Continue** to resume.
7. Tap **Restart** to restart.

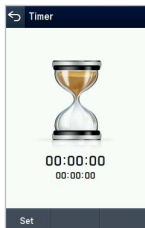

5

Connectivity

Bluetooth
Accessing AT&T Services

The logo for the Pantech P6070, featuring a stylized 'P' followed by the text 'PANTECH' and 'P6070' below it.

PANTECH
P6070



Connectivity






Bluetooth

Bluetooth technology enables free wireless connections between electronic devices within a maximum range of 33 feet (10 meters). Bluetooth connections can be used to send images, business cards, calendar events and notes, or to connect to computers using Bluetooth technology.

Your mobile phone supports:

- Connect to PC to access internet.
- Connect to Hands-Free.
- Connect to electronic devices.

Icons for Bluetooth

	Bluetooth is active.
	Bluetooth hands-free headset is connected.
	Bluetooth A2DP headset is connected.
	Bluetooth hands-free + A2DP headset is connected.
	Data transfer via Bluetooth.

① **Note** Advance Audio Distribution Profile (A2DP) is a Bluetooth profile (mode) which is designed to transfer a uni-directional 2-channel stereo audio stream to a headset or car audio.

Activating Bluetooth

1. Tap **Menu** > **Settings** > **Bluetooth**.
2. Either “**Touch center image for activation**” or tap **Settings** > Drag the **Activation** bar to **On**.
3. Tap **Save**.

Adding a device

1. Tap **Menu** > **Settings** > **Bluetooth** > **Search**.
 2. The available devices will display.
 3. Tap to select the desired device.
 4. Tap **Pair** to pair the device.
 5. Enter password > **OK**.
 6. Tap **View Detail** to view the details of the device.
- ① **Note** The other device must be in pairing mode.

Sending an object

1. Select the file from **Menu** > **Camera & Multimedia** > **Pictures** or **Video Player**.
 2. Tap **Options** > **Send via Bluetooth**.
 3. Tap to select already paired device.
- ① **Note** If the other Bluetooth device requests pairing, the object is sent after pairing is completed. Locked object or ones containing original rights may not be forwarded.

Receiving an object

The receiving of an object starts only when the receipt has been approved. The received file will be saved in each corresponding place. For example, if you received contacts information from the sender, it will be saved in your phone's memory in **Contacts**.

Setting the visibility

1. Tap **Menu** > **Settings** > **Bluetooth**.
2. Tap **Settings** > Drag the **Visibility** bar to **On** or **Off**.
3. Tap **Save**.

Naming the phone

1. Tap **Menu** > **Settings** > **Bluetooth** > **My Info**.
 2. Tap the **Name** field to edit the name > **OK**.
- ① **Note** The device name is what identifies your phone within Bluetooth network.

Accessing AT&T Services

Accessing AT&T DriveMode

1. Tap **Menu** > **AT&T Services** > **AT&T DriveMode**.

Accessing AT&T Navigator

1. Tap **Menu** > **AT&T Services** > **AT&T Navigator**.

Accessing AT&T FamilyMap

1. Tap **Menu** > **AT&T Services** > **AT&T FamilyMap**.

Accessing Facebook

1. Tap **Menu** > **AT&T Services** > **Facebook**.

Accessing myAT&T

1. Tap **Menu** > **AT&T Services** > **myAT&T**.

Accessing Mobile Email

1. Tap **Menu** > **AT&T Services** > **Mobile Email**.

Accessing Mobile Web

1. Tap **Menu** > **AT&T Services** > **Mobile Web**.

For details on using the mobile web, see page 149.

Accessing Twitter

1. Tap **Menu** > **AT&T Services** > **Twitter**.

6

Settings

Phone Status
Sound Profile
Display
Readout mode



PANTECH
P6070



Settings


Phone Status

Viewing phone status

1. Tap **Menu** > **Settings** > **Phone Status**.

Sound Profile

Setting sound profile

1. Tap **Menu** > **Settings** > **Sounds & Alerts**.
 2. Select **Normal**, **Outdoor**, **Vibrate only**, **Silent** or **Flight Mode**.
- ① **Note** Tap  to change **Call**, **Message** and **General** settings. Each category has options to change. Change the options and tap **Save**.

Display

Setting the home screen

1. Tap **Menu** > **Settings** > **Display**.
2. Tap **Home Screen**.
3. Tap and select a desired image.
4. Tap **Save**.
5. Tap **Images** to see preloaded and downloaded wallpapers. Scroll and tap to select the file > **Save**.

Setting the menu theme

1. Tap **Menu** > **Settings** > **Display**.
2. Tap **Menu Theme**.
3. Select **Basic White**, **Soft Gray**, or **Pure Blue**.

Setting time for backlight

1. Tap **Menu** > **Settings** > **Display**.
 2. Tap **Backlighting**.
 3. Tap **⏪**/**⏩** to set the time of **Screen Backlight** and **Keypad Backlight** > **Save**.
- ① **Note** Modifying backlight brightness and time may affect battery life.

Setting the language

1. Tap **Menu** > **Settings** > **Display**.
 2. Tap **Language**.
 3. Tap **⏪** or **⏩** to select the language for **Screen text**.
 4. Tap **⏪** or **⏩** to select the language for **Predictive**.
- ① **Note** You can select language setting options including English, French, and Spanish.

Readout mode

Readout Mode makes your phone a useful companion when you can't or don't have the ability to read the phone screen.

When Readout mode is activated, the phone will announce key alert, navigation, and content information verbally.

- Announce selected items in Menus as user navigates the phone
- Announce numbers as they are pressed on keypad
- Read out text message content

Setting readout mode

1. Tap **Menu > Settings > Readout Mode**.
 2. Drag the **Read Menu**, **Read Dialpad**, **Incoming Call**, **New Message**, **New Voice Mail**, **Read Message Text**, and **Read Memo Text** bar to **On** or **Off**.
 3. Tap **Save**.
- ① **Note** Make sure to set **Sound & Alerts** to **Normal** or **Outdoor** by tapping **Menu > Settings > Sound & Alerts** in order to activate the Readout mode.

1

Calls and Address Book

Making, receiving and ending calls

Options during a call

Call settings

Checking all calls

Speed dialing

Caller identification

Using your headset

Using the address book

Address book settings

Service numbers and fixed dialing


PANTECH
P6070



Calls and Address Book

Making, receiving and ending calls


Making a call

1. Tap .
2. Enter the area code and phone number.
3. Tap **Call**.

Answering a call

1. Drag  to the right.

Ending a call


1. Press  during a call.
- Once the call is complete, a call summary is displayed.







Rejecting a call

1. Drag  to the left.

Making a call using the call list

Your phone logs up to 20 dialed, received and missed call numbers.

In the phone, pressing  is set to automatically dial the last missed, received, or dialed call in your recent call list.

1. Tap  > **Recent Calls** to display the Recent Calls list.
2. Tap to select **All** (All calls),  (Missed calls),  (Received calls),  (Dialed calls), or  (Call Ranking).
3. Select a number.
4. Tap  to dial the selected number.

Making a call during a call

1. Tap **Keypad** and enter the phone number.
2. Tap **Call**.


Or

1. Tap **Keypad > Contacts**.
2. Select and tap a desired phone number.

Switching between two calls

1. Tap  to swap calls.

Making an international call



1. Tap  and press and hold **0** on the touch screen until the '+' character appears.
Or press **(+)** on the QWERTY keyboard until the '+' character appears.
2. Type the country code, area code, and phone number.
3. Tap **Call**.

Making an emergency call



You can make emergency calls even if your phone does not have a SIM card.

1. Tap the emergency number, or tap **SOS** if your phone does not have a SIM card.
2. Tap **Call**.

Replying to a missed call

1. Tap  to display the list of missed calls.
2. Select a number to call by scrolling the screen.
3. Tap .

Answering a second call^a

1. Drag  to the right. The first call is automatically put on hold.
2. Press  to end the second call.

The call on hold is automatically reconnected.

- ① **Note** For answering a second call, you should activate Call Waiting.
(Select **Menu** > **Settings** > **Call** > **Call Waiting** > **Active**.)

Setting the call forwarding option^a

1. Tap **Menu** > **Settings** > **Call**.
2. Tap **Call Forwarding**.
3. Select the desired option.

Setting the call waiting option^a

1. Tap **Menu** > **Settings** > **Call**.
2. Tap **Call Waiting**.
3. Select the desired option.

Options during a call

Microphone off and on

Switching your phone's microphone off

1. Tap **Mute** .

Switching your phone's microphone back on

1. Tap **Mute** .

Speakerphone on and off

Turning on speakerphone

1. Tap **Speaker** .

Turning off speakerphone

1. Tap **Speaker** .

Putting a call on hold and returningⁿ

Putting a call on hold

1. Tap **Hold**  or **Call**.

Returning to a held call

1. Tap **Unhold**  or **Call** again.


Multi-party calls^a

You can talk with more than one person or make a conference call.

Making a multi-party call


1. Call the first participant.
2. Call the second participant. The first call is automatically put on hold.
3. Tap the first or second participant's phone number > **Join**.

Splitting one participant from a multi-party

1. Tap **Conference**.
2. Tap **Members**.
3. Tap .


All of the other multi-party call participants can still hear each other.

Removing one participant from a multi-party call

1. Tap **Conference**.
2. Tap **Members**.
3. Tap .

The call ends with that participant, but you can continue to talk to the other participants.

Searching for a number in the address book during a call

1. Tap **Options** > **Add call** or tap .
Or tap **Keypad** > **Contacts**.
2. Select a number by scrolling up or down and tap the name.

Searching for a name in the address book

Enter the first letters of the name for name search. The entries are displayed starting with the first entry matching your input.

Finding a name manually in the address book

1. Scroll the screen up or down.

Call settings

Setting auto redial^a

1. Tap **Menu** > **Settings** > **Call** > **Auto Redial**.
2. Drag the bar **On** or **Off** > **Save**.

Checking all calls

You can view information about all **Recent Calls**. For more options for all, missed, received and dialed calls, tap the called number.

You can also view the call history simply by tapping  > **Recent Calls**.

Viewing missed calls

1. Tap  > **Recent Calls** > **Missed Calls** .

Viewing received calls

1. Tap  > **Recent Calls** > **Received Calls** .


Viewing dialed calls

1. Tap  > **Recent Calls** > **Dialed Calls** .

Viewing call rankings

1. Tap  > **Recent Calls** > **Call Ranking** .


Deleting call logs

1. Tap  > **Recent Calls** > **Delete**.
2. Tap **All** or an individual call log to delete.
3. Tap **Delete** > **Yes**.

Viewing call time

1. Tap  > **Recent Calls** > **Call Time**.
2. You can view **Last Call**, **Received Calls**, **Dialed Calls**, **Total Calls**, and **Lifetime Calls**.

Resetting all call times

1. Tap  > **Recent Calls** > **Call Time**.
2. Tap **Reset** > **Yes**.
3. Enter password > **OK**.

① **Note** The default password is '1234'.

Viewing transmitted data information

1. Tap **Menu** > **Settings** > **Call** > **Packet Counter**.
2. Select **Total**, **Current**, or **Last** transmitted data.
3. Tap **Clear** to reset the information.

① **Note** The default password is '1234'.

Speed dialing

You can dial quickly using speed dialing. Up to 8 phone numbers can be programmed using numbers 2 to 9.

Setting speed dial

1. Tap **Contacts** > **Settings** > **Speed Dial**.
2. Tap an empty entry.
3. Tap the contact you wish to assign.

Changing speed dial contact

1. Tap **Contacts** > **Settings** > **Speed Dial**.
2. Select a number > **Change**.
3. Tap a contact you wish to assign.

Removing from speed dial

1. Tap **Contacts** > **Settings** > **Speed Dial**.
2. Select a number > **Remove** > **Yes**.

Caller identification

Caller identification^a

1. Tap **Menu** > **Settings** > **Call** > **Display My Number**.
2. Select **Network Default**, **Show** or **Hide** > **Save**.

^a Network dependent

Using your headset

You can make or receive a call using a headset.

While using the headset, the button on the headset works as follows.

- ① **Note** You must use a headset designed for this device. It is an optional accessory. Not all headsets will have a button.

While in standby mode

1. Press the button on the headset to view the recent calls list and press the button again to redial the last call.
2. Tap and hold the button to make a call.


Using the address book

You can save names, phone numbers, and information to the SIM card or phone. Number of entries can vary depending on the capacity of the SIM card.



Viewing the contact list

1. Tap **Contacts**.


Searching for a contact

1. Tap **Contacts**.
2. Scroll the screen up or down or tap  and enter the name to find the contact.
3. Tap the contact to view detailed information.
4. To update information, tap **Edit**.

Calling from the contact list


1. Tap **Contacts**.
2. Scroll the screen up or down to select a person or tap  and input the first letter or two of the person's name.
3. Tap .

Forwarding contact details

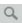1. Tap **Contacts**.
2. Scroll the screen up or down, or tap  and enter the name to find the contact.
3. Tap the contact > **Options** > **Share Contact Info** > **All Contact Info**, **Personal Contact** or **Business Contact**.
4. You can send the information using **via Message** or **via Bluetooth**.

For details on sending the information via message, see page 113. And for details on sending the information via Bluetooth, see page 147.



Deleting a contact

1. Tap **Contacts**.
2. Scroll the screen up or down or tap  and enter the name to find the contact.
3. Tap the contact > **Delete** > **Yes**.


Adding a contact

1. Tap **Contacts** > **Add**.
2. Tap the desired fields to input information.
3. Tap **Save**.

Making groups

1. Tap **Contacts** >  > **Groups**.
 2. To add new group, tap **Add**.
 3. Input the group name and tap **OK**.
 4. To assign a group ringtone, tap  > select a desired ringtone and tap **Select** > **Save**.
 5. To add members to group, tap **Yes**.
 6. Select the members > **OK**.
- ① **Note** You can not add contacts from the SIM to Groups.

Editing groups

1. Tap **Contacts** >  > **Groups**.
2. To edit group, tap the group > **Edit** > **Add Members**, **Remove Members** or **Edit Group**.
- If there is no one added in the selected group, tap the group > **Edit Group**.
3. To delete group, tap the group > **Delete Group** > **Yes**.

Adding to favorites or groups

1. Tap **Contacts**.
2. Select and tap a contact > **Options** > **Add to**.
3. Tap **Favorites** or **Groups**.

Address book settings

Setting up AT&T Address Book

1. Tap **Contacts** > **Settings** > **AT&T Address Book**.

① **Note** Your contacts are backed up to your AT&T Address Book, and changes you make are automatically saved.

Setting SIM management

1. Tap **Contacts** > **Settings** > **SIM Management**.
2. Select **Copy Contacts to SIM**, **Copy Contacts from SIM**, or **Delete Contacts from SIM**.

Managing my info

1. Tap **Contacts** > **Settings** > **My Info**.

Setting the sort order

1. Tap **Contacts** > **Settings** > **Display Order**.
2. Select **First Name** or **Last Name** > **Save**.

Viewing contact information

1. Tap **Contacts** > **Settings** > **View Contacts from**.
2. Select **Phone**, **SIM**, or **Phone and SIM** > **Save**.

Saving contact information

1. Tap **Contacts** > **Settings** > **Save Contacts to**.
2. Select **Phone**, **SIM**, or **Always Ask** > **Save**.

Service numbers and fixed dialing

Calling your service numbers^d

You can see the service number to reach the service provider.

1. Tap **Contacts** > **[ATT Services]**.
2. Tap a number to access the service > **Call**.

Viewing the fixed dialing list

Fixed dialing is a service that limits your access to specific numbers in the address book list recorded on the SIM. Input the PIN2 to set up or cancel this service.

1. Tap **Menu** > **Address Book** > **Fixed Dial Numbers**.
2. Select a number.

① **Note** PIN2 must be correctly entered within 3 attempts. If you input the incorrect code three times in a row, the PIN2 code will be blocked. If the PIN2 code is blocked, please contact your service provider. The default PIN2 code is '2222'.

2

Messaging

Entering text

Messaging

Receiving messages

Creating and sending text messages

Creating multimedia messages

Message templates

Message settings

Email



PANTECH
P6070



Messaging

Entering text





Using the QWERTY keypad

Open the phone and tap **Messages** > **Create New Message** to use the QWERTY keypad.





For details on **QWERTY keypad**, see page 8.







Standard mode

1. Tap **Messages** > **Create New Message** > **Tap to enter text** >  > Select **Standard Mode** to change the mode to .
2. Select  to  to input text repeatedly.

Automatic Correction mode






The Automatic Correction mode automatically compares your keystrokes with an internal dictionary to determine the correct word. It will display the most commonly used word first. The Automatic Correction mode is set as a default text input setting, so you can check the mode with  .

1. Tap **Messages** > **Create New Message** > **Tap to enter text** > Enter the message.
2. Select  to  to input text.

For example, to write "hello" press      and .





Number mode

You can input numbers in this mode.

1. Tap **Messages** > **Create New Message** > **Tap to enter text** >  > Select **Number Mode** to change the mode to .
2. Select  to  and  to input numbers.

Symbols mode

You can input symbols.

1. Tap **Messages** > **Create New Message** > **Tap to enter text** >  > Select **Symbols** to change the mode to .
2. Tap  or  > select the symbol to insert.

Using the virtual keypad










Enter text by using the virtual keypad on your touch screen.

Number	Function
1	Switches between upper and lower case
2	Changes the text input mode
3	Inserts a space
4	Deletes a character







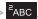



Standard mode

Tap the key labeled with the target letter once for the first letter, tap it twice for the second letter, and so on.

1. Tap **Messages** > **Create New Message** > **Tap to enter text** >  > Select **Standard Mode** to change the mode to .
 2. Tap  to  to input text. To enter the letter “c”, tap  3 times. To enter number 2, tap  4 times.
- ① Note Tap  to input a capital letter. For example, if you want to input A, tap  > .



Automatic Correction mode

The Automatic Correction mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word. It will display the most commonly used word first. The Automatic Correction mode is set as a default text input setting, so you can check the mode with .

1. Tap **Messages** > **Create New Message** > **Tap to enter text** > Enter the message.
 2. Tap  to  to input text. To enter ‘Hello’ in the touch keypad, tap     .
- ① Note To enter numbers, tap  > Select **Number Mode**.



Number mode

You can input numbers in this mode.

1. Tap **Messages** > **Create New Message** > **Tap to enter text** >  > Select **Number Mode** to change the mode to .
2. Tap a number to input numbers.

Symbols mode

You can input symbols.

1. Tap **Messages** > **Create New Message** > **Tap to enter text** >  > Select **Symbols** to change the mode to .
2. Tap a symbol to input it.

Messaging

You can send, receive and save text messages and multimedia messages.

Managing memory

Up to 300 messages can be stored in the phone memory and additional messages will be saved to the SIM card.

Deleting a conversation

1. Tap **Messages** > **Delete**.
2. Select a conversation to delete.
3. Tap **Delete** > **Yes**.

Deleting all messages

1. Tap **Messages** > **Delete**.
2. Tap **All** > **Delete** > **Yes**.


 
Replying to a message

1. Tap **Messages**.
2. Select a conversation.
3. Tap **Reply**.
4. Tap **Tap to enter text** > Enter the message > **OK**.
5. Tap the recipient field to add one or more recipients and select the contact > **OK**.
6. Tap **Send**.

Receiving messages

Viewing a new message

When you receive a new message, you can select **View** or **Ignore**.

1. Tap and drag  to the right to read a new message or tap and drag  to the left to ignore a new message.

Reading a message from a conversation

1. Tap **Messages**.
2. Select a conversation.
3. Select a received message and read the message.

Saving contact information from a received message

1. Tap **Messages**.
2. Select a conversation.
3. Tap **Options** > **Add Contact**.
4. Select **as New Contact** or **to Existing Contact**.

Saving an object from a received multimedia message

1. Open a multimedia message.
2. Tap **Options** > **Use** > **Save to internal** / **Save to external**.

It will be saved in one of the categories in the **My Stuff** folder.

*For details on **Picture album**, see page 121.*

Loading a URL using push message


1. Tap **Messages** > **Web Messages** > Tap the message.
2. Tap **Go**.

Saving connection settings using configuration message

1. Tap **Messages** > **Configuration Message** > Tap the configuration message.
2. Tap **Options** > **Install**.

Creating and sending text messages





Sending a new text message

1. Tap **Messages** > **Create New Message**.
Or tap **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.
3. Tap the recipient field to add one or more recipients and select the contact > **OK**.
4. Tap **Send**.



Creating multimedia messages

You can create and send new multimedia messages. The size limit is 600KB. An error message will alert you once you exceed the capacity.




Adding a saved picture to a message

1. Tap **Messages > Create New Message**.
Or tap **Messages > Options > Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.
3. Tap **Insert >  > My Pictures**.
4. Select a folder or picture.
5. Tap **Select**.
6. To preview the current page, tap  in **Slide** field > **Preview > Current**. To go back to text editor, tap **Stop**.
7. To preview the whole message, tap  in **Slide** field > **Preview > Whole Message**. To go back to text editor, tap **Stop**.
- To edit the text message, tap the text box.
8. Tap the recipient field to add one or more recipients and select the contact > **OK**.
9. Tap **Send**.

Adding a new picture to a message





1. Tap **Messages > Create New Message**.
Or tap **Messages > Options > Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.
3. Tap **Insert >  > Take Picture**.

Messaging







4. Focus on the object and tap .
5. To preview the current page, tap  in **Slide** field > **Preview** > **Current**. To go back to text editor, tap **Stop**.
6. To preview the whole message, tap  in **Slide** field > **Preview** > **Whole Message**. To go back to text editor page, tap **Stop**.
 - To edit the text message, tap the text box.
7. Tap the recipient field to add one or more recipients, and select the contact > **OK**.
8. Tap **Send**.

For details on *Taking a picture*, see page 120.

Adding a saved video to a message




1. Tap **Messages** > **Create New Message**.
Or tap **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
 2. Tap **Tap to enter text** > Enter the message > **OK**.
 3. Tap **Insert** >  > **My Videos**.
 4. Tap the desired video clip to insert and tap **Select**.
 5. To preview the current page, tap  in **Slide** field > **Preview** > **Current**. Tap **Pause** to stop watching or tap **Stop** to go back to text editor.
 6. To preview the whole message, tap  in **Slide** field > **Preview** > **Whole Message**. To go back to text editor page, tap **Stop**.
 - To edit the text message, tap the text box.
 7. Tap the recipient field to add one or more recipients and select the contact > **OK**.
 8. Tap **Send**.
- ① **Note** If the video clip's resolution is "320x240" or higher, the video clip cannot be added to a message.


Adding a new video to a message

1. Tap **Messages** > **Create New Message**.
Or tap **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.
3. Tap **Insert** >  > **Create Video**.
4. Focus on the object and tap .
5. To stop recording and save tap .
6. To preview the current page, tap  in **Slide** field > **Preview** > **Current**. Tap **Pause** to stop watching or tap **Stop** to go back to text editor.
7. To preview the whole message, tap  in **Slide** field > **Preview** > **Whole Message**. To go back to text editor page, tap **Stop**.
8. Tap the recipient field to add one or more recipients and select the contact > **OK**.
9. Tap **Send**.


 




For details on **Recording a video**, see page 124.

Adding a recorded voice memo to a message

1. Tap **Messages** > **Create New Message**.
Or tap **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.
3. Tap **Insert** >  > **My Audio**.
4. Tap the desired audio clip to insert and tap **Select**.
5. To preview the current page, tap  in **Slide** field > **Preview** > **Current**. Tap **Pause** to stop listening or tap **Stop** to go back to text editor.

6. To preview the whole message, tap  in **Slide** field > **Preview** > **Whole Message**. To go back to text editor page, tap **Stop**.
7. Tap the recipient field to add one or more recipients and select the contact > **OK**.
8. Tap **Send**.




Adding a new voice memo to a message

1. Tap **Messages** > **Create New Message**.
Or tap **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.
3. Tap **Insert** >  > **Record Audio**.
4. Tap  to record the sound.
5. To stop and save tap .
6. To preview the current page, tap  in **Slide** field > **Preview** > **Current**. Tap **Pause** to stop listening or tap **Stop** to go back to text editor.
7. To preview the whole message, tap  in **Slide** field > **Preview** > **Whole Message**. To go back to text editor page, tap **Stop**.
8. Tap the recipient field to add one or more recipients and select the contact > **OK**.
9. Tap **Send**.



*For details on **Recording a voice memo**, see page 140.*

Adding other files to a message



1. Tap **Messages** > **Create New Message**.
Or tap **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.

3. Tap **Insert** >  > **Files**.
4. Tap to select desired file to insert.
5. To edit the text message, tap the text box.
6. To preview the current page, tap  in **Slide** field > **Preview** > **Current**. To go back to text editor, tap **Stop**.
7. To preview the whole message, tap  in **Slide** field > **Preview** > **Whole Message**. To go back to text editor page, tap **Stop**.
8. Tap the recipient field to add one or more recipients and select the contact > **OK**.
9. Tap **Send**.

Adding contacts to a message

1. Tap **Messages** > **Create New Message**.
Or tap **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap **Tap to enter text** > Enter the message > **OK**.
3. Tap **Insert** >  > **Contacts**.
4. Tap to select desired contact to insert.
5. To edit the text message, tap the text box.
6. Tap the recipient field to add one or more recipients and select the contact > **OK**.
7. Tap **Send**.

Adding templates to a message

1. Tap **Messages** > **Create New Message**.
Or tap **Messages** > **Options** > **Create New Message**.
Or tap  when messages exist.
2. Tap **Insert** >  > **Templates**.

3. Tap to select desired templates to insert.
4. To edit the text message, tap the text box.
5. Tap the recipient field to add one or more recipients and select the contact > **OK**.
6. Tap **Send**.

Message templates

When you often use the same phrases, you can save the message under message templates.

Adding a message as a template

1. Tap **Messages > Options > Templates**.
2. Tap **Add New**.
3. Enter the frequently used message > **OK > Save**.

Sending a message with a template

1. Tap **Messages > Options > Templates**.
2. Select the template to send.
3. Tap the text box to edit the text message.
3. Tap the recipient field to add one or more recipients and select the contact > **OK**.
4. Tap **Send**.

Message settings

Message center settings

1. Tap **Messages** > **Options** > **Settings**.
 2. Tap **Text Message**.
 3. Enter new **Center Address**.
 4. Tap **OK** > **Save**.
- ① **Note** This number may be pre-configured by the service provider upon activation.

MMS profiles for multimedia messages

1. Tap **Messages** > **Options** > **Settings**.
2. Tap **Multimedia Message** > **MMS Profiles**.
3. Select a profile.
4. To add a profile, tap **Create** > set the options > **Save**.

Sending settings for multimedia messages

1. Tap **Messages** > **Options** > **Settings**.
2. Tap **Multimedia Message** > **Sending Settings**.
3. You can set **Creation Mode** and **Max Message Size**.
4. Tap **Save**.

Receiving settings for multimedia messages

1. Tap **Messages** > **Options** > **Settings**.
2. Tap **Multimedia Message** > **Receiving Settings**.
3. You can set **Automatic Download** by dragging the bar to **On** or **Off**.
4. Tap **Save**.

Receiving settings for voice mails

1. Tap **Messages** > **Options** > **Settings**.
 2. Tap **Voice Mail**.
 3. Enter the number of the voice mail center > **OK** > **Save**.
- ① **Note** This number may be pre-configured by the service provider upon activation.

Auto delete message settings

1. Tap **Messages** > **Options** > **Settings**.
2. Tap **Auto Delete**.
3. Drag the bar to **On** or **Off**.
4. Tap **Save**.

Display popup setting

1. Tap **Messages** > **Options** > **Settings**.
2. Tap **Display Popup**.
3. Drag the bar to **On** or **Off**.
4. If saved to **ON**, a popup notification is displayed when the message is sent successfully.

Email

You can receive emails through your service provider.
(Subscription and data charges may apply.)

Receiving an email

1. Tap **Menu** > **Mobile Email**.
2. Select a service.
3. Follow the steps to set up your email account.

3

Multimedia

Camera

Picture album

Video Camera

Video Player

Audio album

Playing Music

Music Player

Music Player Settings

Other files

Managing memory

Applications



PANTECH
P6070



Multimedia

Camera




You can take pictures using the built-in camera. The photos can be saved to your phone or memory card and can be sent via multimedia messages and Bluetooth.





Setting camera settings

1. Tap **Menu > Camera**.
2. Tap  to change settings prior to taking a picture.




Camera menu options

Icons	Name	Description
	Zoom	1, 2,3,4,5,6,7,8 (up to 2x zoom) ① Note Zoom is not provided with the highest (2048x1536) resolution.
	Brightness	-3, -2, -1, 0, +1, +2, +3
	Settings	White Balance/Effect/Self Timer/Resolution/Storage/ Geo Tagging/Advanced ① Note GEO Tagging will work only outdoors. When GEO Tagging is activated, it will search for the GPS for 1 minute and ask whether to proceed or not.

Multimedia

Icons	Name	Description
	Video camera	Switch to video camera mode
	Album	View the pictures stored in the device


Zooming in and out

1. Tap  then tap  or . It increases or decreases the zoom ratio.
Note In camera mode, the zoom function is not available at the highest (2048x1536) resolution.




Increasing or decreasing the brightness

1. Tap  then tap  or . It ranges from -3 to +3.


Taking a picture

1. Tap **Menu** > **Camera**.
2. Focus on the object and tap .
- Note** Your photo will be saved automatically to the phone memory. Up to 9999 photo files especially with 320x240 resolution setting can be saved on the camera. The maximum number of photo files is different depending on the resolution setting.

Changing to video camera mode

1. Tap  on camera mode.
2. Focus on the object and tap .
3. Tap  to stop recording.
- Note** Your video will be saved automatically to the phone memory.

Viewing a saved picture just after taking a picture

1. Tap  on camera mode.
2. Select the picture to view.

Picture album




You can save photos to your phone or an external memory card and view, send or delete them from the Picture album.

① **Note** To access the **Pictures** folder, tap **Menu > Pictures**.

Viewing saved pictures

1. Tap **Menu > Pictures**.
2. Select a picture.

Zooming with a saved picture


1. Tap **Menu > Pictures**.
2. Select the picture and tap **Options > Zoom**.
3. Tap / on the picture or press volume key to zoom in or out.
4. Tap  return to view mode.

① **Note** Zoom mode is activated when the resolution of the picture is larger than the resolution of device.

Setting a picture as your wallpaper

1. Tap **Menu > Pictures**.
2. Tap  on the desired picture > **Set as > Wallpaper > Save**.

Setting a picture as caller identification

1. Tap **Menu > Pictures**.
2. Tap  on the desired picture > **Set as > Contact photo**.
3. Select a contact.

Sending pictures via multimedia message

1. Tap **Menu** > **Pictures**.
2. Tap  on the desired picture > **Send** > **via Message**.

Sending pictures via Bluetooth

1. Tap **Menu** > **Pictures**.
2. Tap  on the desired picture > **Send** > **via Bluetooth**.

Deleting multiple pictures

1. Tap **Menu** > **Pictures**.
2. Tap **Delete**.
3. Tap to mark desired files or tap **All** to mark all files.
4. Tap **OK** > **Yes**.
5. To cancel deleting action, tap **Close**.

Viewing file information


1. Tap **Menu** > **Pictures**.
 2. Tap  on the desired picture.
 3. Scroll down and tap **Properties**.
- ① **Note** You can check properties of the photo such as **File Name**, **File Size**, **Format**, **Resolution**, and **Created**.

Video Camera






You can record movies using the built-in camera. The video clips can be saved to your phone or memory card and can be sent via multimedia messages and bluetooth.



Setting video camera settings

1. Tap **Menu** > **Video Camera**.
2. Tap  to change settings prior to recording video.

Video camera menu options

Icons	Name	Description
	Zoom	1, 2,3,4,5,6,7,8 (up to 2x zoom)
	Brightness	-3, -2, -1, 0, +1, +2, +3
	Settings	White Balance/ Effect/ Self Timer/ Resolution/ Storage/ Advanced
	Camera	Switch to camera mode
	Album	View the videos stored in the device



Zooming in and out

1. Tap  then tap  or . It increases or decreases the zoom ratio.


Increasing or decreasing the brightness

1. Tap  then tap  or . It ranges from -3 to +3.



Recording a video

1. Tap **Menu > Video Camera**.
 2. Focus on the object and tap .
 3. Tap  to stop recording.
- ① **Note** Your video will be saved automatically to the phone memory.

Viewing the recorded video clip

1. Tap  on Video Camera mode.
2. Tap a video clip to play.

Changing to Camera mode

1. Tap  on Video Camera mode.
2. Focus on an object and tap .


Video Player

You can view, send, save and delete videos. The supported formats are MPEG4, H.263, 3GP, and H. 264.


Playing saved video clips

1. Tap **Menu > Video Player**.
2. Tap a video clip to play.

Sending a video clip via multimedia message

1. Tap **Menu > Video Player**.
2. Tap  on the desired clip > **Send > via Message**.

Sending a video clip via Bluetooth

 
1. Tap **Menu > Video Player**.
2. Tap  on the desired clip > **Send > via Bluetooth**.

Deleting multiple video clips

1. Tap **Menu > Video Player**.
2. Tap **Delete**.
3. Tap to mark desired files or tap **All** to mark all files.
4. Tap **OK > Yes**.
5. To cancel deleting action, tap **Close**.

Playing a video clip

1. Tap **Menu** > **Video Player**.
2. Scroll and tap to select a file.

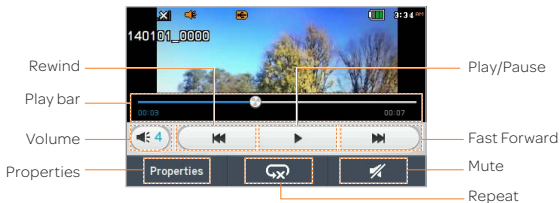


Audio album

You can play, send, delete, move or copy saved sound files to external memory or to the phone. Supported formats are MP3, AAC, AAC+, eAAC+ and WMA.


Listening to a recorded sound file

1. Tap **Menu** > **My Stuff** > **Audio**.
2. Select a folder and tap to open.
3. Tap a file to play.

Moving or copying multiple sound files to external memory

1. Tap **Menu** > **My Stuff** > **Audio**.
2. Select a folder and tap to open.
3. Tap **Options** > **Copy** or **Move**.
4. Tap to mark desired files or tap **All** to mark all files.
5. Tap **OK**.
6. Tap  and select the **Memory Card**.
7. Select the folder.
8. Tap **Copy Here** or **Move Here**.

Sending sound files via multimedia message

1. Tap **Menu** > **My Stuff** > **Audio**.
2. Select the audio file and tap  > **Send** > **via Message**.

Sending sound files via Bluetooth

1. Tap **Menu** > **My Stuff** > **Audio**.
2. Select the audio file and tap  > **Send** > **via Bluetooth**.

Playing Music

You can listen to music on your phone using the Music Player. The Music Player is only compatible with and can play the following audio types: MP3, AAC, AAC+, eAAC+ and WMA.

 **Note** A microSD card must be inserted to transfer music to your device.

Adding music from Windows Media Player™

1. Connect the USB cable to the device and the computer.
2. Select **Music Player**.
3. Open Sync Tap in Windows Media Player™ on your computer.
4. Select the music from the list and drag and drop to your device.

① **Note** Windows Media Player™ 11 and Windows XP are required.

Music Player

You can play music saved to external memory or to the phone. Supported formats are MP3, AAC, AAC+, eAAC+, and WMA.

Listening to a music file

1. Tap **Menu > Music Player**.
2. Tap **Now Playing, All Music, Playlists, Albums, Artists** or **Genres**.
3. Tap a file to play.

① **Note** Music will pause when you receive an incoming call and Music will resume when the call ends.

① **Note** If music files are contained under multiple directories, it may take more time to load them on the music player.

Music Player Settings

Shuffling songs

 
1. Tap **Menu > Music Player**.
2. Tap **Settings > Shuffle**.
3. Tap **◀/▶** to select **Shuffle On** or **Shuffle Off**.
4. Tap **Save**.

Repeating songs







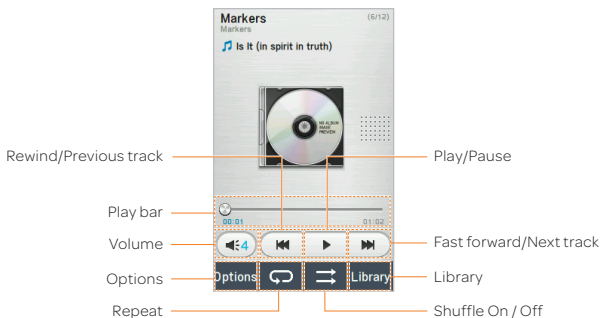



1. Tap **Menu** > **Music Player**.
2. Tap **Settings** > **Repeat**.
3. Tap **◀/▶** to select **Repeat All Tracks**, **Repeat Single Track** or **Repeat Off**.
4. Tap **Save**.

Setting the equalizer

1. Tap **Menu** > **Music Player**.
2. Tap **Settings** > **Equalizer**.
3. Tap **◀/▶** to select **Normal**, **Pop**, **Jazz**, **Classic**, **Rock**, **Dance**, **User 1**, **User 2** or **User 3**.
4. Tap **Save**.



Icons for player

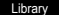Icon	Description
	Adjust the volume
	Pause and play the audio file
	Tap and hold : Rewind, Fast Forward
	Tap: Previous, Next
	Repeat all
	Repeat off
	Repeat Single Track
	Shuffle On / Off
	Go to the library
	Play/Stop, Exit Player, Add to Playlist, Settings, Download Status, Properties

Creating a playlist

1. Tap **Menu** > **Music Player**.
2. Tap **Playlists** > **New Playlist**.
3. Enter playlist name > **OK**.
4. Tap to select a category.
5. Scroll and tap to mark desired files and tap **Done** to add to playlist.

Adding music to a playlist

1. Tap **Menu** > **Music Player**.
 2. Tap **Playlists**.
 3. Select the playlist and tap > **Add Tracks**.
 4. Tap to select a category.
 5. Tap to mark desired files or tap **Select All** > **Done**.
 6. To remove tracks, tap **Remove Tracks** and scroll and tap to mark desired files, and tap **Done**.
- ① **Note** To delete the playlist, tap **Menu** > **Music Player** > **Playlists** > **Delete**, and tap to mark desired playlists or **Select all** > **Delete** > **Yes**.


Viewing file information

1. Tap **Menu** > **Music Player**.
2. Scroll and tap to select a category.
3. Scroll and tap (▶) > **Properties** on a desired file.
4. Scroll up or down to view the properties.

Setting music as a ringtone

1. Tap **Menu** > **Music Player**.
 2. Scroll and tap to select a category.
 3. Scroll and tap (▶) > **Set as Ring Tone** on a desired file.
- ① **Note** You cannot set a music file while it is playing. If a music file is larger than 400KB, the file will be deactivated for setting as a ring tone.

Deleting music

1. Tap **Menu** > **Music Player**.
 2. Scroll and tap to select a category.
 3. Scroll and tap a file.
 4. Tap  on a desired file > **Delete**. Or tap **Delete** and tap to mark desired files.
 5. Tap **Delete** > **Yes**.
- ① **Note** If the file is in use, you cannot delete the file.

Other files


You can manage unsupported file formats that are saved on your phone. It also lists files received via Bluetooth from other devices.

Viewing the list of files

1. Tap **Menu** > **My Stuff**.
2. Tap **Other Files**.

Managing memory

Viewing memory status

1. Tap **Menu** > **My Stuff**.
2. Tap **Memory**.
3. Scroll to view the information.
4. To view external memory card memory status, tap  and select the **Memory Card**.

Formatting memory

1. Tap **Menu** > **My Stuff**.
2. Tap **Memory** > Tap and select **Phone** or **Memory Card**.
3. Tap **Format** > **Yes**.

① **Note** It will erase all data except system files.

Applications

You can play pre-installed demo apps or download apps. It is easy to download and you can preview them beforehand.

Select the applications

1. Tap **Menu** > **My Stuff** > **Applications**.
2. Scroll and tap to play pre-installed or downloaded applications.

Select the games or the applications

1. Tap **Menu** > **My Stuff** > **Games**.
2. Scroll and tap to play pre-installed game or apps.

4

Useful Features

Alarm Clock
Calendar
Pill Reminder
Notepad
Sketch Pad
Voice Memo
World Time
Calculator, Tip Calculator and Converter
Stop Watch and Timer



PANTECH
P6070

 


Useful Features

Alarm Clock

Setting an alarm

1. Tap **Menu** > **Tools** > **Alarm Clock**.
 2. Tap **Create New**.
 3. Set the desired options.
 4. Tap **Save**.
- ① **Note** To set the alarm to ring when the phone is turned off, activate the Power Alarm by dragging the bar to **On**.

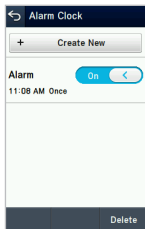

Viewing saved alarms

1. Tap **Menu** > **Tools** > **Alarm Clock**.
2. Scroll and tap an alarm to view the detail.

Editing existing alarms

1. Tap **Menu** > **Tools** > **Alarm Clock**.
2. Scroll and tap to select an alarm.
3. Edit the alarm details.
4. Tap **Save**.

Calendar

Calendar helps you manage your schedule. You can set a reminder on any given date with this function.

Viewing the calendar

1. Tap **Menu** > **Tools** > **Calendar**.
- ① **Note** Monthly view is displayed by default.

Creating a new event

1. Tap **Menu** > **Tools** > **Calendar**.
2. Tap to select a day > **Create**.
3. Select **Event**, **Task**, or **Note**.
4. Input the details > Tap **Save**.
- ① **Note** You can create events for dates from 01/01/2000 to 12/31/2070.

 


Pill Reminder

Pill Reminder sets your schedule if you need to take a pill, and an alarm pop-up will appear at the time you set. You can select to accept the reminder or have the reminder pop-up again after 15 minutes

Creating a new pill reminder

1. Tap **Menu** > **Tools** > **Pill Reminder** > **Create New**.
2. Tap the camera image and then, take a picture.
For details on taking a picture, see page 120.

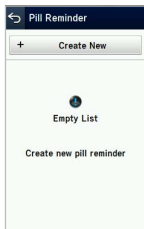

3. Input **Name** and **Dosage**.
4. Tap **Time** > **Save**.
5. Set a desired time > **OK**.
6. Tap **Period** > **Begins**.
7. Set the beginning time of the dosage on the calendar.
8. Tap **Daily, Every 2 days**, or **Monthly** > **OK**. When selecting **Every 2 days**, you can set the desired number of days for the reminder period.
9. Enter more information.
10. Tap **Save**.

Checking today's pill reminders

1. Tap **Menu** > **Tools** > **Pill Reminder** > **Today**.
2. Scroll and select a pill reminder item to check the detail.

Editing a pill reminder

1. Tap **Menu** > **Tools** > **Pill Reminder**.
2. Select a pill reminder > **Edit**.
3. Edit **Name, Dosage, Time, Period** or **More Information**.
4. Tap **Save**.

 
Deleting reminders

1. Tap **Menu** > **Tools** > **Pill Reminder**.
2. Tap **Delete**.
3. Tap **All** or a pill reminder to delete
4. Tap **Delete** > **Yes**.

Notepad

Using notepad



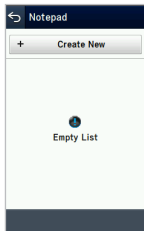

1. Tap **Menu** > **Tools** > **Notepad**.
2. Tap **Create New**.
3. Enter the memo and Tap **OK**.



Sketch Pad



You can create drawings and set as wallpaper or share via multimedia message or Bluetooth.

Creating a sketch

1. Tap **Menu** > **Tools** > **Sketch Pad**.
2. Tap  to select pencil thickness, color, eraser and undo.
3. Select each option and tap  for more space to draw.
4. Draw on the sketch pad.
5. Tap  and tap **Save** to save your work.
6. Enter the name and tap **OK**.
7. To create a new drawing, tap  > **Options** > **Create New**.




Setting a background


1. Tap **Menu** > **Tools** > **Sketch Pad**.
2. Tap  > **Options** > **Background**.
3. Tap a desired background.
4. To import an image, tap  > **Options** > **Import Image**.

① **Note** The background image will be imported from the picture album and may be cropped when imported.

Setting a sketch as wallpaper



1. Tap **Menu** > **Tools** > **Sketch Pad**.
2. After drawing, tap  > **Options** > **Set as Wallpaper** > **Yes**.
3. Enter the file name > **OK** > **Save**.

Sending a sketch

1. Tap **Menu** > **Tools** > **Sketch Pad**.
2. After saving a drawing, tap  > **Options** > **Send**.
3. Tap to select **via Message** or **via Bluetooth**.

Voice Memo



Recording a voice memo

 
1. Tap **Menu** > **Tools** > **Voice Memo**.
 2. Tap **New Record**.
 3. Tap .
 4. Tap  to stop recording. It will automatically save in **My Voice**.
- ① **Note** To access **My Voice**, tap **Menu** > **My Stuff** > **Audio** > **My Voice**.



World Time

Using world time

1. Tap **Menu** > **Tools** > **World Time**.
- ① **Note** When you get out of your network, select a desired city > Tap **OK**.
2. To add a new city, tap **Add New City** and tap  or  to select a new city. Tap **Add**.
 3. Tap **Set as Dual** and select a city if you want to set dual time displays in idle mode.
- ① **Note** If you want to set dual time in idle mode, tap **Menu** > **Settings** > **Display** > **Clock Type** > **Digital Clock** > **Digital Clock 5**.

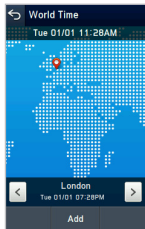

Calculator, Tip Calculator and Converter

 
Using the calculator

1. Tap **Menu** > **Tools** > **Calculator**.
2. Tap the numbers and **+**/**-**/**x**/**÷** to calculate.
3. Tap **C** to erase one digit.
4. Tap and hold **C** to reset.
5. Tap **.** to use the decimal point.



Using the tip calculator

1. Tap **Menu** > **Tools** > **Tip Calculator**.
2. Tap to enter values for all variable fields (**Bill(\$)**, **Tip(%)**, **Split**) and the corresponding calculation fields (**Total(\$)**, **Tip(\$)**, **You Pay(\$)**) are updated automatically.
3. Tap **.** to use the decimal point.
4. Tap **Reset** to reset.

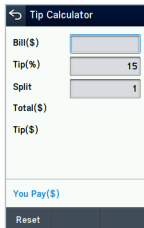

Using the converter

1. Tap **Menu** > **Tools** > **Converter**.
2. Tap **◀** or **▶** to select a category.
3. Tap the field to enter a number and scroll left or right to select the unit. Other unit fields are updated automatically.
4. Tap **Reset** to reset.



Stop Watch and Timer

 
Using the stop watch

1. Tap **Menu** > **Tools** > **Stop Watch**.
2. Tap **◀** or **▶** to select **Basic**, **Split** or **Lap**.
3. Tap **Start** to start.
4. Tap **Stop** to pause.
5. Tap **Continue** to resume.
6. Tap **Reset** to clear.




Using the timer

1. Tap **Menu** > **Tools** > **Timer**.
2. Tap **Set** to input the time.
3. Scroll to set the hour, minutes and seconds and tap **Save**.
4. Tap **Start** to start.
5. Tap **Pause** to stop.
6. Tap **Continue** to resume.
7. Tap **Restart** to restart.

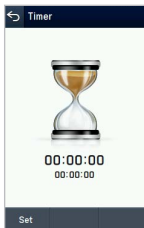


Say a Command

Your phone is equipped with an Advanced Voice Command (AVC) feature. This feature allows you to make calls or use the phone functions by simply using your voice. All you have to do is talk into the phone and then the phone will recognize your voice and complete tasks by itself.

1. Tap **Menu** > **Tools** > **Say a Command**.
Or press  on the right side of the phone.
2. At the voice prompt, say a command and simply follow the voice prompts.

The following list shows available voice commands.

 - **Call <Name or #>**: Voice dials a name or phone number in your address book. If multiple numbers exist, say the name and the number type (i.e. mobile, home, work, or other).
- **Send Message <Name or #>**: Display the Create Message screen with the contact you have spoken.

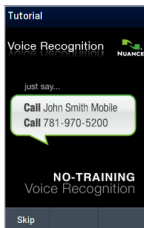

Useful Features

- **Contact <Name>**: Retrieve and display the contact information stored in the address book.
- **Go To <Menu>**: Open an application on your phone.
- **Check <Item>**: Check the status information of your phone (Status, Voicemail, Messages, Missed Calls, Time, Signal strength, Battery, My Phone Number, and Volume).

5

Connectivity

Bluetooth

Using the Mobile Web

Setting the Web's profile



Connectivity






Bluetooth

Bluetooth technology enables free wireless connections between electronic devices within a maximum range of 33 feet (10 meters). Bluetooth connections can be used to send images, business cards, calendar events and notes, or to connect to computers using Bluetooth technology.

Your mobile phone supports:

- Connect to PC to access Internet
- Connect to hands-free headsets
- Connect to electronic devices


Icons for Bluetooth

	Bluetooth is active.
	Bluetooth hands-free headset is connected.
	Bluetooth A2DP headset is connected.
	Bluetooth hands-free + A2DP headset are connected.
	Data transfer via Bluetooth

① **Note** Advance Audio Distribution Profile (A2DP) is a Bluetooth profile (mode) which is designed to transfer a uni-directional 2-channel stereo audio stream to a headset or car audio.

Activating Bluetooth

 1. Tap the Bluetooth icon on the center of the screen as shown right.
Note You can also activate the Bluetooth function by tapping **Menu > Bluetooth > Settings** or **Menu > Settings > Connectivity > Bluetooth > Settings** and dragging the Activation bar to **On**.

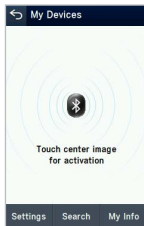

Adding a device

1. Tap **Menu > Bluetooth > Search**.
Or tap **Menu > Settings > Connectivity > Bluetooth > Search**.
 2. The available devices will be displayed.
 3. Tap to select a device.
 4. Tap **Pair** to pair the device, or tap **View Detail** to view the details of the device.
 5. Insert password if prompted by **Enter Password** window, and then tap **OK**.
- Note** The other device must be in pairing mode.

Sending an object

1. Select a file by tapping **Menu > My Stuff > Audio, Music, Pictures, Video, or Other Files**.
 2. Tap **Options > Send via Bluetooth**.
 3. Tap the paired device.
- Note** Only if the other Bluetooth device has not completed pairing, the object will be transmitted when pairing is completed. Internal objects or objects protected by Digital Rights Management (DRM) that are not allowed to be shared cannot be transferred.

Receiving an object

Receiving an object starts only when the receipt has been approved.

The received file will be saved in your phone's memory.

Setting visibility

1. Tap **Menu** > **Bluetooth** > **Settings**.
Or tap **Menu** > **Settings** > **Connectivity** > **Bluetooth** > **Settings**.
2. Drag the **Visibility** bar to **On**.
3. Tap **Save**.

Setting file transfer location

1. Tap **Menu** > **Bluetooth** > **Settings**.
Or tap **Menu** > **Settings** > **Connectivity** > **Bluetooth** > **Settings**.
2. Tap the **File Transfer Location** bar.
3. Select **Phone Memory** or **External Memory**.
4. Tap **Save**.

Naming your device

1. Tap **Menu** > **Bluetooth** > **My Info**.
Or tap **Menu** > **Settings** > **Connectivity** > **Bluetooth** > **My Info**.
 2. Tap the name field to edit the name > **OK**.
- ① **Note** The device name is what identifies your phone to the Bluetooth network.

Using the Mobile Web

Accessing the mobile web

1. Tap **Menu** > **Mobile Web**.
 2. Tap **Home**.
- ① **Note** It will access your service provider's homepage.

Adding new bookmarks

1. Tap **Menu** > **Mobile Web**.
 2. Tap **Bookmarks**.
 3. Tap **Add Bookmark**.
 4. Tap the field to enter **Title** and **URL** > **OK**.
 5. Tap **Save**.
- ① **Note** You can send bookmark information via multimedia messages or Bluetooth.

Entering a web address

1. Tap **Menu** > **Mobile Web**.
2. Tap **Enter Address**.
3. Tap the field to enter the web address > **Go**.

Viewing web history

1. Tap **Menu** > **Mobile Web**.
2. Tap **History**.

Setting advanced options

1. Tap **Menu** > **Mobile Web**.
2. Tap **Manage** > **Options**.
3. Change the **Rendering Mode**, **Cache**, **Cookies**, **Security Warning**, **Javascript** and **Image Display**.
4. Tap **Save**.

Clearing private data

1. Tap **Menu** > **Mobile Web**.
2. Tap **Manage** > **Private Data**.
3. To clear the cache, tap **Clear Cache** > **Yes**.
4. To clear the cookies, tap **Clear Cookies** > **Yes**.
5. To clear the history, tap **Clear History** > **Yes**.

Viewing certificates

1. Tap **Menu** > **Mobile Web**.
2. Tap **Manage** > **Security**.
3. Tap **Certificates**.
4. Scroll and tap to select the certificate you would like to view.


Viewing download status

1. Tap **Menu** > **Mobile Web**.
2. Tap **Manage** > **Download Manager**.

Setting the Web's profile

You can set your profile and view **Profile Name**, **Home URL**, **Connection Type**, **Proxy Address** and **Proxy Port**.


Viewing the default profile

1. Tap **Menu** > **Mobile Web**.
2. Tap **Manage** > **Profiles**.
3. Tap  to view the details.

Adding a new profile

1. Tap **Menu** > **Mobile Web**.
2. Tap **Manage** > **Profiles**.
3. Tap **Create**.
4. Tap each field to enter the details > **OK**.
5. Tap **Save**.

Editing your profile

1. Tap **Menu** > **Mobile Web**.
2. Tap **Manage** > **Profiles**.
3. Scroll and tap  beside the added profile.
4. Tap the field to edit > **OK**.
5. Tap **Save**.

Deleting a profile

1. Tap **Menu** > **Mobile Web**.
2. Tap **Manage** > **Profiles**.
3. Tap **Delete**.
4. Tap to mark a profile to delete.
5. Tap **Delete** > **Yes**.

6

Settings

- Phone
- Readout mode
- Ring Tones
- Display
- Connectivity
- Keyboard
- Touch
- Security
- Reset
- TTY



PANTECH
P6070



Settings

Phone

Setting the language

1. Tap **Menu** > **Settings** > **Phone**.
 2. Tap **Language**.
 3. Tap **⏪** or **⏩** to select the language for **Screen text**.
 4. Tap **⏪** or **⏩** to select the language for **Predictive**.
- ① **Note** You can select language setting options including English, French, and Spanish.

Setting the time & date

1. Tap **Menu** > **Settings** > **Phone**.
2. Tap **Time & Date**.
3. Change **Time**, **Time Format**, **Date**, **Date Format** or **Auto Update** > **Save**.

Readout mode

Readout Mode makes your phone a useful companion when you can't or don't have the ability to read the phone screen.

When Readout mode is activated, the phone will announce key alert, navigation, and content information verbally.


- Announce selected items in Menus as user navigates the phone
- Announce numbers as they are pressed on keypad
- Read out text message content

Setting readout mode


1. Tap **Menu** > **Settings** > **Phone** > **Readout Mode**.
 2. Drag the **Read Menu**, **Real Dialpad**, **Incoming Call**, **New Message**, **New Voice Mail**, **Read Message Text**, and **Read Memo Text** bar to **On** or **Off**.
 3. Tap **Save**.
- ① **Note** Make sure to set **Sound Profiles** to **Normal** or **Outdoor** by tapping **Menu** > **Settings** > **Sound Profiles** in order to activate the readout mode.

Ring Tones

Setting ring tones

1. Tap **Menu** > **My Stuff** > **Audio**.
 2. Scroll and tap to select a folder.
 3. Tap  on a desired file > **Set as Ring Tone**.
- ① **Note**
- The maximum file size for a ring tone is 400KB.
 - Make sure to set **Sound Profiles** to **Normal** or **Outdoor** by tapping **Menu** > **Settings** > **Sound Profiles** in order to set as ring tone.

Setting the sound profile

1. Tap **Menu** > **Settings** > **Sound Profiles**.
 2. Select **Normal**, **Outdoor**, **Vibrate only**, **Silent** or **Flight Mode**.
- ① **Note** Tap  to change **Call**, **Message** and **General**. Each category has options to change. Change the options and tap **Save**.

Display

Setting the home screen

1. Tap **Menu** > **Settings** > **Display**.
2. Tap **Home Screen**.
3. Scroll and tap to select a file > **Save**.

Setting the lock screen

1. Tap **Menu** > **Settings** > **Display**.
2. Tap **Lock Screen**.
3. Select **Off**, **Random**, or **My Pictures**.

Setting the menu theme

1. Tap **Menu** > **Settings** > **Display**.
2. Tap **Menu Theme**.
3. Tap or to select a desired menu theme > **Save**.

Setting the clock type

1. Tap **Menu** > **Settings** > **Display**.
2. Tap **Clock Type**.
3. Select **Digital Clock** or **Unique Clock**.
4. Select a clock type to view and tap **Save**.

Setting the font style

1. Tap **Menu** > **Settings** > **Display**.
2. Tap **Font Style**.
3. Scroll and tap to select a font type > **Save**.

Setting the backlighting

1. Tap **Menu** > **Settings** > **Display**.
 2. Tap **Backlighting**.
 3. Select a desired option > **Save**.
- ① **Note** Modifying backlight brightness and time may affect battery life.

Connectivity

Setting USB mode

1. Tap **Menu** > **Settings** > **Connectivity** > **Select USB Mode**.
 2. Select and tap **Music Player**, **Mass Storage**, **Modem**, or **Ask on Connection**.
 3. Tap **Save**.
- ① **Note** Select **Music Player** when you want to add music to the playlist in your device. When you select **Ask on Connection**, it will ask you to select **Music Player**, **Mass Storage**, or **Modem** every time you connect your device with your computer.

Setting the mobile video

1. Tap **Menu** > **Settings** > **Connectivity** > **MV Settings**.
2. Select a profile or tap **Create**.
3. Input the fields and tap **Save**.

Keyboard

You can set a text input keyboard for messages and notepad.

1. Tap **Menu** > **Settings** > **Keyboard**.
2. Select a desired text input keyboard.

Touch

Setting the touch feedback

1. Tap **Menu** > **Settings** > **Touch**.
2. Tap **Touch Feedback**.
3. Tap **◀** or **▶** to select the touch feedback type.
4. Tap **Save**.

① **Note** The **Touch Volume** and **Vibration Intensity** availability depend on the the touch feedback type settings.

Setting automatic screen lock

1. Tap **Menu** > **Settings** > **Touch**.
2. Tap **Auto Screen Lock**.
3. Drag the bar to **On** or **Off** > **Save**.

① **Note** The screen will lock automatically after the backlight turns off.

Security

Locking the phone

1. Tap **Menu > Settings > Security**.
2. Drag the **Phone Lock** bar to **On** or **Off**.
3. Enter password.

① **Note** The default password is '1234'. To change the password, tap **Menu > Settings > Security > Change Password**.

Activating the PIN lock

The Personal Identification Number is the security code that protects the phone or SIM against unauthorized use.

1. Tap **Menu > Settings > Security**.
2. Drag the **PIN** bar to **On** or **Off**.
3. Tap **Yes** to enable unlock.

① **Note** The default PIN1 is '1111'. To change the PIN code, tap **Menu > Settings > Security > Change PIN**.

Locking the FDN

1. Tap **Menu > Settings > Security**.
2. Drag the **FDN** bar to **On** or **Off**.
3. Enter PIN2 code.

① **Note** You have only 3 attempts. If you enter the wrong code 3 times, the phone will be locked. If the phone is locked, please contact the Service Center. For details on fixed dialing, see *page 101*.

Changing the password

1. Tap **Menu** > **Settings** > **Security**.
2. Tap **Change Password**.
3. Enter the current phone lock password > **OK**.
4. Enter the new password > **OK**.
5. Re-enter the new password > **OK**.

Changing the PIN

1. Tap **Menu** > **Settings** > **Security**.
2. Tap **Change PIN**.
3. Enter the current PIN code > **OK**.
4. Enter the new PIN code > **OK**.
5. Re-enter the new PIN code > **OK**.

Changing the PIN 2

1. Tap **Menu** > **Settings** > **Security**.
2. Tap **Change PIN2**.
3. Enter the current PIN2 code > **OK**.
4. Enter the new PIN2 code > **OK**.
5. Re-enter the new PIN2 code > **OK**.

Reset

Resetting the phone

1. Tap **Menu** > **Settings** > **Reset**.
2. Enter password > **OK** > **Master Reset**.
3. Tap **Yes**.

① **Note** It will return configuration settings to default. The default password is '1234'.

Clearing the phone

1. Tap **Menu** > **Settings** > **Reset**.
2. Enter password > **OK** > **Master Clear**.
3. Tap **Yes**.

① **Note**

- It will return the settings to default and erase all personal data. The default password is '1234'.
- If you see the **Low battery** message, please connect your phone to the Micro USB charger adaptor before resetting or clearing the phone.

Resetting the external memory card

1. Tap **Menu** > **Settings** > **Reset**.
2. Enter password > **OK** > **External Memory Reset**.
3. Tap **Yes**.

① **Note** It will erase all data in the external memory card. The default password is '1234'.

TTY

The teletypewriter (TTY) is a telecommunication device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate via a telephone.

Setting teletypewriter

1. Tap **Menu > Settings > TTY**.
 2. Select **Disable**, **TTY Full**, **TTY Talk** or **TTY Hear**.
 - **Disable**: TTY mode is disabled.
 - **TTY Full**: Users who cannot talk and hear, can send and receive a text message.
 - **TTY Talk**: Users who can talk but cannot hear, can receive a text message and reply with voice message.
 - **TTY Hear**: Users who can hear but cannot talk, can send a text message and receive a voice message.
- ① **Note** Make sure to connect a headset to the phone before selecting one of the TTY modes. Then, you can use the TTY function.

7

Appendix

Alert message

Troubleshooting checklist

Safety information

Safety precautions

About battery usage

FCC Hearing-Aid Compatibility (HAC)
Regulations for Wireless Devices

FCC Regulatory Compliance

Warranty



PANTECH
P6070



Appendix

Alert message

If you experience any problem while using your mobile phone, please refer to the following checklist. If the problem still persists, contact your dealer or nearest carrier.

When the “Insert SIM Card” message appears:

Make sure the SIM card is correctly installed. Check to see if the SIM card is working properly. If it does not work, try to clean the contact points of the card with a dry cloth. If it is out of order, take it to your service provider.

When the “Messages full” message appears:

The received or saved messages are full in your phone memory. You need to delete some messages.

When the “Phone and SIM messages are full. Delete Messages” message appears:

The received or saved messages are full in your phone and SIM card memory. You need to delete some messages.

When the “Password” message appears in Phone locked state:

Enter the phone password. The default password is “1234”. If you cannot remember the password, contact your nearest carrier.

When the “Enter PIN1” message appears:

Input PIN1. If you cannot remember it, contact your service provider. The default PIN1 is ‘1111’.

When the “No Service” or “Network Search” message appears:

If you cannot make/receive a call when you are indoors or underground where the signal strength is poor, move toward a window or go out to an open area. If you still cannot make a connection, contact your service provider.

Troubleshooting checklist

When audio quality is poor:

End the call and try again.

When the other party cannot hear you speaking:

Your phone may be set to MUTE. Disable the MUTE function. Make sure your hand is not covering the microphone.

When battery lifetime is shorter than usual:

This may happen when you are in an area with low signal strength. Turn off your phone when it is not in use. Charge the battery when battery energy is exhausted.

When your mobile phone does not turn on:

Make sure your battery is charged. Check to see if your phone works while recharging the battery.

When you are unable to send a message:

Either you are not registered to receive an SMS service, or you may be in an area where your network service provider cannot provide such a service, or your phone memory is full.

When you are unable to make a call:

Your phone may be set to “fixed dial.” You must disable the “fixed dial” function.

When you are unable to receive a call

Make sure to check the network service. Or check whether your phone is set to “Call forwarding”. If call forwarding is enabled, you must disable the “Call forwarding” function.

When you are unable to charge the battery:

This may be the result of one of the following cases.

1. Your charger may be out of order. Contact your nearest dealer.
2. You may be attempting to use the phone in an overly hot/cold temperature. Try changing the charging environment.
3. Your battery may have not been connected to the charger properly. Check the connector.

When you are unable to input data into your Address Book:

Your Address Book memory may be full. Try deleting some entries from your Address Book.

When you are unable to select a certain function:

You may not have subscribed to that function, or your network service provider may be in an area where such service cannot be provided. Contact your local service provider.



Safety information

The following list shows how to maintain your mobile phone, together with precautions to take.

- Keep your mobile phone and its accessories out of the reach of children and pets.
- Maintain your mobile phone in dry conditions and keep it within normal operating temperatures. Temperatures higher than 131°F (55°C) or lower than -4°F (-20°C) may damage your phone.
- Do not try to dry your phone in a microwave oven. Sparks can occur and cause an explosion or fire.

- Do not use or store your mobile phone in dusty, dirty areas.
- Do not attempt to disassemble your mobile phone.
- Do not drop or cause severe impact to your mobile phone.
- Do not use chemical products, cleaning solvents or detergents to clean your mobile phone.
- If your mobile phone does not work properly, contact your dealer immediately.
- Use only authorized batteries, battery chargers and accessories. Any malfunction or damage caused by the use of unauthorized batteries, battery chargers and accessories will void the limited product warranty.
- Ensure that the battery and battery charger do not come in contact with conductive objects.
- For optimal phone performance, use cases and accessories that do not contain magnets in close proximity.

Safety precautions

Using a mobile phone while driving may be prohibited.

Please check local laws and regulations with regard to the prohibition of mobile phone use while driving, and comply with any applicable laws or regulations.

Use of your phone while you are driving may disturb your concentration and so cause an accident. Always switch your phone off to drive safely.

If you need to use your phone in an emergency, either use a hands free device built into your car or pull over in a safe place first.



Switch off in restricted areas

Always switch your phone off in areas where mobile phone use is restricted.

Switch off in explosive or dangerous areas

Always switch your phone off in areas with explosive or dangerous materials (such as fuels, fuel stations or areas containing chemical goods) and obey any instructions or signals. Do not remove your mobile phone's battery in such areas.

Switch off in aircraft

Always switch your phone off or select **Flight Mode** (Tap **Menu** > **Settings** > **Sound Profiles** > **Flight Mode**) when you are in an aircraft.

The electromagnetic waves emitted by your phone may affect the electronic navigation equipment in the aircraft.

Switch off in hospitals and near medical equipment

Always switch your phone off in hospitals, and obey the regulations or rules of the hospital. Switch your phone off when using medical equipment for private purposes, if possible. Always consult with the medical equipment's manufacturer or an expert regarding phone use near the medical equipment.

Installing a hands free device in your vehicle

Install vehicle hands free devices away from the steering wheel and airbag expansion area, otherwise injury may result.

Mobile phones and other electronic devices

Mobile phones emit electromagnetic waves that may affect nearby electronic devices. When it is switched on, do not place your phone close to delicate electronic equipment.

About battery usage

Your phone is powered by a Lithium Ion (Li-Ion) battery. This means that, unlike other forms of battery technology, you can recharge your battery while some charge remains without reducing your phone's autonomy due to the "battery memory effect" inherent in those technologies.

- Use an authorized battery and charger only.
- Do not use a damaged battery or charger.
- Do not disassemble, open, crush, bend, deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Do not put your battery into contact with conductive objects.
- Dispose of and recycle used batteries in accordance with local regulations. Do not dispose of batteries by burning; they may explode.
- Only use the battery for the device for which it is specified.
- Only use the battery with a charging device that has been qualified with the device per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the device per this standard, IEEE-Std-1725-2006.
- Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.

- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Use your battery for the specified purpose only.
- The closer you are to your network's base station, the longer your phone usage time because less battery power is consumed for the connection.
- The battery recharging time varies depending on the remaining battery capacity and the battery and charger type you use.
- Battery life inevitably shortens over time.
- Since overcharging may shorten battery life, remove the phone from its charger once it is fully charged. Unplug the charger once charging is complete. Leaving the battery in hot or cold places, especially inside a car in summer or winter, may reduce the capacity and life of the battery. Always keep the battery within normal temperatures.
- To prevent injury or burns, ensure that no metal objects come into contact with the + and - terminals of the battery.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids.

The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist

hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

- **M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.
- **T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

THIS PHONE HAS A HAC RATING OF M3/T3.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider about its return and exchange policies and for information on hearing aid compatibility.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets

the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

To ensure that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth and WLAN components must be disabled during a call. See page 146 for instructions to disable these components.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider about its return and exchange policies and for information on hearing aid compatibility.

FCC Regulatory Compliance

FCC Regulatory Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Your mobile device is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile devices. Those guidelines are consistent with safety standards previously set by both U.S. and international standards bodies: American National Standard Institute (ANSI), National Council of Radiation Protection and Measurements (NCRP), and International Commission on Non-Ionizing Radiation Protection (ICNRP). Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. The design of your phone complies with the FCC guidelines.

Statement according to FCC part 15.105

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Statement according to FCC part 15.21

Modifications not expressly approved by this company could void the user's authority to operate the equipment.

RF exposure FCC

For body worn operation, to maintain compliance with FCC RF exposure guidelines, use only accessories that contain no metallic components and provide a separation distance of 15 mm (0.59 inches) to the body. Use of other accessories may violate FCC RF exposure guidelines and should be avoided.

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

Health and Safety Information FCC

This EUT has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and had been tested in accordance with the measurement procedures specified in KDBs and IEEE Std. 1528-2003 Ministry of Health (Canada), Safety Code 6. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg*. The highest reported SAR for head and body-worn accessory are 0.38 W/kg and 0.40 W/kg.

* In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in.

**This device contains 1800 MHz GSM functions that are not operational in U.S. Territories; this filing is applicable only for 850 MHz GSM and 1900 MHz PCS operations.

Warranty

Protect Your Warranty

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

“Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling, misuse, neglect or accident”.

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Pantech product. Be careful. Some of these products may not be compatible to use with your Pantech product and may damage the unit or cause it to malfunction.

If service is required on your unit and it is determined that a non-Pantech accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories which cannot damage or interfere with the functioning of your Pantech product.

12 Month Limited Warranty

Pantech Wireless, Inc. (the Company) warrants to the original retail purchaser of this Pantech handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) months period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, key pad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase. This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company by calling the number listed below or to the place of purchase for repair or replacement processing.

To locate Pantech Authorized Service Center, call: (800) 962-8622 or email HandsetHelp@Pantech.com.

Please have the following information available when you send the phone in for repair:

- A valid original Proof of Purchase
- Return address
- Daytime phone number or fax number

- Model #
- IMEI # (Look for the 15 digit IMEI # behind the battery of the device.)
- Complete description of the problem
- Transportation prepaid

Other Warranty Program

You may have other warranty program with your purchase, such as warranty exchange. If so, please refer to equipment package or the original point of sale.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Appendix

For technical support in the U.S. & Canada, call (800) 962-8622.

Or email: HandsetHelp@Pantech.com.

Or visit the web site: www.pantechusa.com

For all other inquiry, write to:

PANTECH WIRELESS, INC.

5607 Glenridge Dr. Suite 500 Atlanta, GA 30342